

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YTE](#) /

› [YTE S7 Cordless Vacuum Cleaner Instruction Manual](#)

YTE S7

YTE S7 Cordless Vacuum Cleaner Instruction Manual

Model: S7

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your YTE S7 Cordless Vacuum Cleaner. Please read this manual thoroughly before operating the appliance and retain it for future reference.

PRODUCT COMPONENTS

The YTE S7 Cordless Vacuum Cleaner comes with the following components:

- Main Unit
- Floor Brush
- Metal tube
- 2-in-1 Cleaning tool
- Long crevice tool
- Vacuum Fixed Bracket
- Manual & Quick Guide
- Charger
- Detachable Lithium Battery Pack

Multiple accessories

for different cleaning needs



Image: YTE S7 Cordless Vacuum Cleaner main unit and various attachments including floor brush, metal tube, 2-in-1 tool, and crevice tool.

SETUP AND ASSEMBLY

1. **Charging the Battery:** Before first use, fully charge the detachable lithium battery pack. Connect the charger to the battery pack or the main unit while it's docked in the fixed bracket. A full charge takes approximately 4-4.5 hours.
2. **Assembling the Vacuum:**
 - Attach the metal tube to the main unit until it clicks into place.
 - Attach the floor brush to the other end of the metal tube until it clicks into place.
 - For handheld use, attach desired accessories (2-in-1 cleaning tool or long crevice tool) directly to the main unit.
3. **Mounting the Fixed Bracket:** The vacuum fixed bracket can be mounted on a wall for convenient storage and charging. Ensure it is securely fastened.

14000Pa

Powerful Suction



Image: Fully assembled YTE S7 Cordless Vacuum Cleaner in stick mode.



Image: Graphic illustrating the 45-minute runtime and 4-4.5 hour charging time of the detachable battery.

OPERATING INSTRUCTIONS

The YTE S7 Cordless Vacuum Cleaner offers versatile cleaning for various surfaces.

1. **Power On/Off:** Press the power button on the main unit to turn the vacuum on or off.
2. **Suction Modes:** The vacuum features two working modes:
 - **Standard Mode:** Suitable for general cleaning tasks and extending battery life.
 - **Strong Mode:** Provides 14KPa strong suction power for stubborn dirt and pet hair.

Switch between modes using the dedicated button on the main unit.

3. **Using the Floor Brush:**
 - The floor brush is suitable for all kinds of floors, including carpet, hard floor, and marble floor.
 - It features 4 LED lights to illuminate dark areas, such as under furniture.
 - The brush head can be turned at 140° for flexible steering around obstacles.
4. **Using Accessories:**
 - The 2-in-1 cleaning tool and long crevice tool are ideal for cleaning sofas, blankets, car interiors, pet fur, and reaching tight spaces.
 - Attach these tools directly to the main unit for handheld operation.

45 mins Non-stop Cleaning

Detachable and Rechargeable Battery

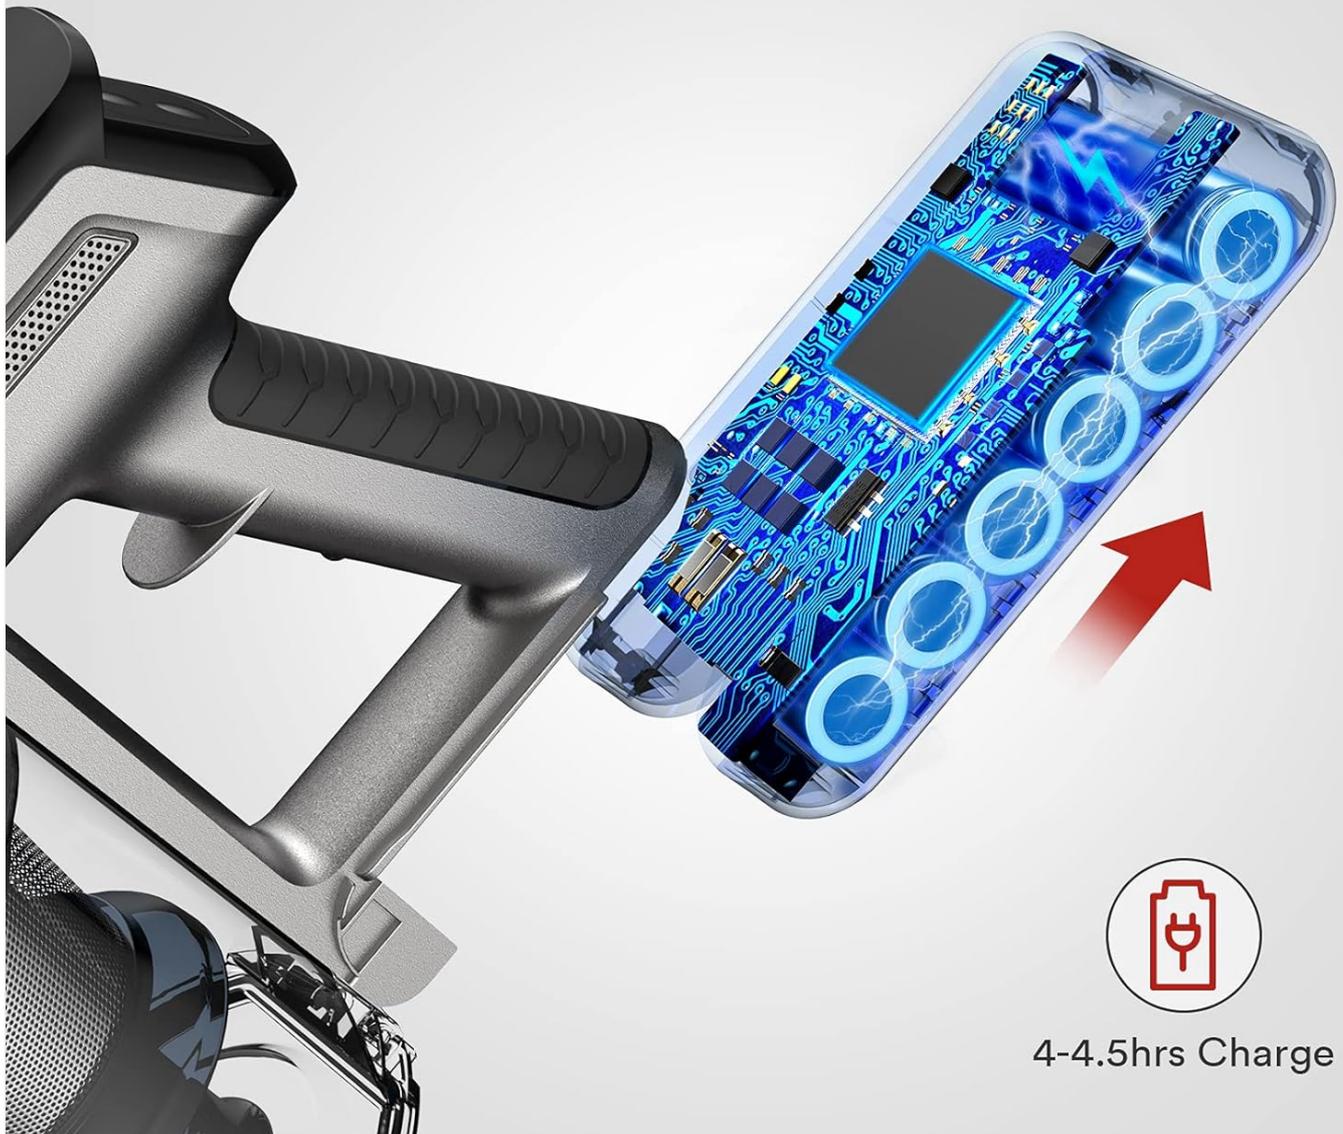


Image: Graphic illustrating the 14KPa powerful suction of the YTE S7 Cordless Vacuum Cleaner, showing dirt being pulled into the dust cup.

Freely Rotatable

LED Lighting with a 140° Flexible Brush Head



Image: The flexible brush head of the YTE S7 Cordless Vacuum Cleaner with LED lighting, demonstrating its maneuverability for cleaning under furniture.

Your browser does not support the video tag.

Video: Demonstration of the YTE Cordless Vacuum Cleaner, highlighting its 6-in-1 functionality and stick vacuum capabilities for various cleaning tasks.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dust Cup:

- The vacuum has a 1-liter large capacity dust cup.
- To empty, press the "One Button Dust Down" release button to open the bottom flap and release collected debris into a trash bin.
- Empty the dust cup regularly to maintain suction power.

2. Cleaning the Filtration System:

- The vacuum features a 5-stage high-performance filtration system, including cyclone filtration, metal mesh, rear polymer sponge filter, HEPA filter, and high-density filter.
- All 4 parts of the filter can be disassembled and cleaned.
- Wash the filters with water and ensure they are completely dry before reassembling and using the vacuum.

3. **Cleaning the Brush Roll:** Periodically check the floor brush roll for tangled hair or debris and remove it to ensure smooth operation.

One Button Dust Down

1L large capacity dust cup



Image: Demonstration of the one-button dust cup emptying feature of the YTE S7 Cordless Vacuum Cleaner, showing debris falling into a bin.

5 High-Performance Filtrations



Image: Exploded view diagram detailing the 5 high-performance filtration stages of the YTE S7 Cordless Vacuum Cleaner.

TROUBLESHOOTING

If you encounter issues with your YTE S7 Cordless Vacuum Cleaner, refer to the following common problems and solutions:

- **No Power:**

- Ensure the battery is fully charged.
- Check if the battery pack is securely inserted into the main unit.

- **Reduced Suction:**

- Empty the dust cup if it is full.
- Clean all filters as described in the Maintenance section. Ensure they are completely dry before reinstallation.
- Check the brush roll and nozzle for any blockages or tangled debris.

- **Brush Roll Not Rotating:**

- Check for obstructions or tangled hair in the brush roll.
- Ensure the floor brush attachment is correctly connected to the metal tube or main unit.

- **Short Battery Runtime:**

- Ensure the battery is fully charged before each use.
- Operating in "Strong Mode" will consume battery faster than "Standard Mode."
- Battery performance may decrease over time with prolonged use.

If the problem persists, please contact customer support.

SPECIFICATIONS

Brand	YTE
Model Name	YTE Cordless Vacuum Cleaner (S7)
Special Feature	14KPa Powerful Vacuum Cleaner, 5-Stage Filtration System, 1L Large Dust Cup Capacity, Quick Empty Dustbin, 4 Multi Accessories, 69dB Quiet, 2200mAh*6 Battery Capacity + 2 Charging Models, 4-4.5 hours Charging Time + 22-45Mins Long Runtime, 6-in-1 Stick & Handhold + 2.8lb Lightweight, 4 Bright LED Lights + Rotatable Brush Head
Filter Type	Cartridge
Is Cordless?	Yes
Capacity	1 Liters
Wattage	120.00 Watts
Maximum Suction	14 KPa
Recommended Uses	Carpet, Hard Floor, Marble floor, Sofa, Blanket, Upholstery Floor, Tile Floor
Form Factor	Cordless Stick Vacuum
Color	Gray
Product Dimensions	27.9"L x 10.8"W x 5"H
Noise Level	68 Decibels
Battery Life	Up to 45 minutes
Item Weight	2.86 pounds
Power Source	Battery Powered

SAFETY INFORMATION

Please observe the following safety precautions:

- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Store the vacuum cleaner indoors in a dry place.
- Keep out of reach of children.
- Only use the charger provided by the manufacturer.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official YTE website. Keep your proof of purchase for any warranty claims.

