

LAWOHO 890MAX

LAWOHO 890MAX Universal Garage Door Remote Instruction Manual

Model: 890MAX

Programming	Operation	Introduction	Compatibility	Setup & Specifications	Warranty	Support
-----------------------------	---------------------------	------------------------------	-------------------------------	--	--------------------------	-------------------------

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the LAWOHO 890MAX Universal Garage Door Remote. Please read these instructions carefully before use to ensure proper programming and operation. This remote is designed for convenience and security, offering compatibility with a wide range of garage door openers.


In the Box



4*Remote



4*Metal keychain

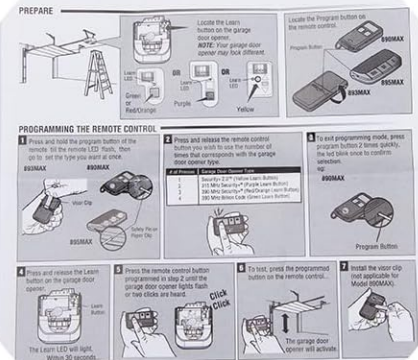

4*Product Instruction

Image: Contents of the LAWOHO 890MAX package, including the remote, metal keychain, and product instructions.

2. COMPATIBILITY

The LAWOHO 890MAX remote is compatible with various garage door openers from Liftmaster, Chamberlain, and Sears Craftsman. Compatibility is determined by the color of your garage door opener's "Learn Button" and its operating frequency.

2.1 Learn Button Compatibility

This remote is compatible with garage door openers featuring Purple, Red, Orange, Green, or Yellow learn buttons manufactured from 1993 to the present.

Compatible with 5 Colors Learn Button



Security+ 2.0 (Yellow LEARN BUTTON)



315 MHz Security+ (PURPLE LEARN BUTTON)



390 MHz Security+ (RED LEARN BUTTON)



390 MHz Security+ (ORANGE LEARN BUTTON)



Security+ 390 MHz Billion Code (GREEN LEARN BUTTON)

Image: Visual guide to identifying the learn button color on your garage door opener.

2.2 Compatibility Chart

Refer to the table below to confirm compatibility with specific models and frequencies.

**LAWOHO®**

890max Universal Garage Door Opener Remote Programming Manual

2022

Color of Learn Button	Garage Door Opener Brand	Frequency	Year	Model
	Liftmaster	390MHz	1993-1996	81LM 61LM
	Chamberlain	390MHz	1993-1996	KLIK1U
	Craftsman	390MHz	1993-1996	139.53879
	Liftmaster	390MHz	1997-2003	91LM 92LM 94LM 96LM 970LM 971LM 972LM 973LM 973W 974LM
	Chamberlain	390MHz	1997-2003	950CB 953CB 956CB KLIK1U
	Craftsman	390MHz	1997-2003	HBW1255 139.53680/B 136.53681 00953680000 00953681000
	Liftmaster	315MHz	2005-2014	371LM 373LM 375LM
	Chamberlain	315MHz	2005-2014	950CD 953D 956D KLIK1U
	Craftsman	315MHz	2005-2014	139.53753 139.18191
	Liftmaste	310/315/390MHz	2011-Current	891LM 893LM 61LM 81LM 82LM 83LM 84LM
	Chamberlain	310/315/390MHz	2011-Current	950ESTD 953EV 850CB 853CB 856CB KLIK1U
	Craftsman	310/315/390MHz	2011-Current	139.53707 139.53870 139.53779 139.53879 139.53800 139.53637SRT HBW1136

Image: Detailed compatibility chart for LAWOHO 890MAX remote.

LAWOHO 890MAX Compatibility Overview

Learn Button Color	Frequency	Compatible Brands	Example Models
Yellow	Security+ 2.0 (310/315/390MHz)	Liftmaster, Chamberlain, Craftsman	891LM, 893LM, 81LM, 82LM, 83LM, 84LM, 950ESTD, 953EV, 850CB, 853CB, 856CB, KLIK1U, 139.53707, 139.53870, 139.53779, 139.53879, 139.53800, 139.53637SRT, HBW1136
Purple	315 MHz Security+	Liftmaster, Chamberlain, Craftsman	371LM, 373LM, 375LM, 950CD, 953D, 956D, KLIK1U, 139.53753, 139.18191
Red or Orange	390 MHz Security+	Liftmaster, Chamberlain, Craftsman	91LM, 92LM, 94LM, 96LM, 970LM, 971LM, 972LM, 973LM, 973W, 974LM, 950CB, 953CB, 956CB, KLIK1U, HBW1255, 139.53680/8, 136.53681, 00953680000, 00953681000

Learn Button Color	Frequency	Compatible Brands	Example Models
Green	390 MHz Billion Code	Liftmaster, Chamberlain, Craftsman	81LM, 61LM, KLIK1U, 139.53879

3. SETUP & PROGRAMMING

Follow these steps to program your LAWOHO 890MAX remote to your garage door opener.

3.1 Step 1: Pre-program the Remote Control

1. Press and hold the "program button" (located at the bottom right of the remote) using the provided safety pin for approximately 3-5 seconds. Release the button when the indicator light begins to flash (it will flash 4 times).
2. Select a remote control button (the remote has 3 buttons) you wish to use. Press this button a specific number of times based on your garage door opener's frequency or the color of its learn button:
 - Press 1 time for Security+ 2.0 (Yellow Learn Button)
 - Press 2 times for 315 MHz Security+ (Purple Learn Button)
 - Press 3 times for 390 MHz Security+ (Red or Orange Learn Button)
 - Press 4 times for 390 MHz Billion Code (Green Learn Button)
3. Press the "program button" two times to confirm. The indicator light will not illuminate on the first press, but will light up on the second press.

At this point, the remote control is pre-programmed. Proceed to the next step to sync it with your garage door opener.

3.2 Step 2: Sync with your Garage Door Opener

4. Locate and press the "Learn Button" on your garage door opener. Release it. The learn indicator light on the opener will blink steadily for 30 seconds.
5. While the opener's light is blinking, press and hold the remote control button (the same button you programmed in Step 1b) until the light on your garage door opener flashes or you hear two clicks (if no light bulb is installed).
6. Test the remote by pressing the programmed button. The garage door should open or close.

Your browser does not support the video tag.

Video: Detailed instructions on how to program the LAWOHO 890MAX remote to your garage door opener.



Image: Visual guide for programming the remote control.

4. OPERATION

Once programmed, operating your LAWOHO 890MAX remote is straightforward:

- Press the programmed button on the remote control to open or close your garage door.
- The remote features a bright LED indicator that signals activation.

Mini 890MAX Universal Remotes, Support 3 Different Garage Doors, Easy to Control



Image: Demonstrating the LAWOHO 890MAX remote in use to open a garage door.



Image: Features of the LAWOHO 890MAX remote, including buttons, LED, and battery access.

5. MAINTENANCE

5.1 Battery Replacement

The remote uses one CR2 battery. When the remote's range decreases or the LED indicator becomes dim, it may be time to replace the battery.

1. Use a small flat-head screwdriver to gently pry open the remote casing.
2. Carefully remove the circuit board.
3. Replace the old CR2 battery with a new one, ensuring correct polarity.
4. Reassemble the remote casing.

Your browser does not support the video tag.

Video: Instructions on how to replace the battery in your LAWOHO 890MAX remote.



Image: Opening the remote for battery replacement.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check the battery. Replace if necessary.
- Ensure the remote is within range of the garage door opener.
- Verify that the remote is correctly programmed to your garage door opener. Repeat the programming steps if needed.

- **Garage door opener not responding to programming:**

- Confirm the learn button color and corresponding press count during pre-programming (Step 1b).
- Ensure you are pressing the correct button on the remote during syncing (Step 2e).
- Check if your garage door opener model is listed in the compatibility chart.

- **LED working mode issue:**

The remote has two LED working modes: Solid (for Purple, Orange, Red learn buttons) and Flashing (for Yellow, Green learn buttons). If the current mode does not match your learn button, you may need to change it.

1. Press the up button and the down button on the remote simultaneously. The LED will flash. Release both buttons.
2. Press and hold the button you wish to change the LED working mode for. The LED light will change to the Flashing Mode.

7. SPECIFICATIONS

- **Brand:** LAWOHO
- **Model Name:** 890MAX Garage Door Remote
- **Special Feature:** Universal compatibility
- **Connectivity Technology:** 890Max
- **Button Quantity:** 5 (3 programmable buttons)
- **Controller Type:** Button Control
- **Number of Supported Devices:** 1 (per programmed button)
- **Battery Type:** 1 x CR2 Lithium battery (included)
- **Dimensions:** Approximately 6.4 cm (2.52 in) length, 3.5 cm (1.37 in) width, 1.3 cm (0.51 in) thickness.

Small Size Remotes, Easy to Carry



fits in



motorcycle keyring



pocket



purse



backpack

Image: Physical dimensions of the LAWOHO 890MAX remote.

8. WARRANTY INFORMATION

Please refer to the product packaging or the official LAWOHO website for detailed warranty information. Keep your purchase receipt as proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries, please contact LAWOHO customer service through the retailer where the product was purchased or visit the official LAWOHO website.

Online Resources:

- [Visit the LAWOHO Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question