

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Concept](#) /

› [Concept SV3070 4-in-1 Sandwich Maker Instruction Manual](#)

## Concept SV3070

# Concept SV3070 4-in-1 Sandwich Maker Instruction Manual

Model: SV3070

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and retain them for future reference. Incorrect operation may cause damage to the appliance and injury to the user.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug the appliance from the power outlet when not in use and before cleaning. Allow to cool completely before handling or cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use the appliance outdoors.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Use caution when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- The appliance is equipped with a cool-touch handle and a safety lock to ensure plates are secured during operation.
- Non-slip feet provide stability during use.

## 2. PRODUCT OVERVIEW

The Concept SV3070 is a versatile 4-in-1 appliance designed for preparing various meals. It features a sleek black design and comes with four sets of interchangeable non-stick plates for sandwiches, waffles, and grilling.



The Concept SV3070 appliance in its closed position, showing the compact design and indicator lights.



The four sets of interchangeable plates: square sandwich, triangle sandwich, grill, and waffle plates.

## Key Features:

- **900W Power:** Ensures quick heating and efficient cooking.
- **4-in-1 Functionality:** Includes plates for square sandwiches, triangle sandwiches, waffles, and grilling.
- **Interchangeable Non-Stick Plates:** Easy to swap and clean, preventing food from sticking.
- **Automatic Temperature Control:** Maintains optimal cooking temperature.
- **Cool-Touch Handle & Safety Lock:** For safe operation and handling.
- **Indicator Lights:** Power and ready indicators for ease of use.

## 3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the interchangeable plates with warm, soapy water, rinse thoroughly, and dry completely.
3. **Installing Plates:**

Select the desired plates (e.g., square sandwich plates). Align the plates with the hinges and press down gently until they click into place. Ensure both upper and lower plates are securely installed.



Example of detached square sandwich plates, ready for installation or cleaning.

4. **Pre-heating (First Use):** For the first use, it is recommended to operate the appliance empty for approximately 5-10 minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.

5. **Placement:** Place the appliance on a stable, heat-resistant, and dry surface, away from walls and heat-sensitive materials.

## 4. OPERATING INSTRUCTIONS

---

Always ensure the correct plates are installed and locked before operation.

### General Operation:

1. Plug the appliance into a suitable power outlet. The red indicator light will illuminate, indicating the appliance is powered on and heating.
2. Allow the appliance to preheat. The green indicator light will illuminate when the desired temperature is reached, indicating the appliance is ready for use.
3. Lightly grease the non-stick plates with a small amount of cooking oil or butter, if desired, especially for the first few uses or for specific recipes.
4. Place your food (sandwiches, waffle batter, grill items) onto the lower plate.
5. Close the lid and gently press down the handle until the safety lock engages.
6. Cook for the recommended time (refer to specific food instructions below). The green light may cycle on and off during cooking as the thermostat maintains temperature.
7. Once cooking is complete, open the lid using the cool-touch handle. Carefully remove the food using a heat-resistant plastic or wooden utensil to avoid damaging the non-stick coating.
8. Unplug the appliance from the power outlet and allow it to cool completely before cleaning.

### Using Sandwich Plates (Square & Triangle):

Ideal for preparing toasted sandwiches. The SV3070 accommodates larger bread slices (14 x 13 cm).



Appliance with square sandwich plates.



Appliance with triangle sandwich plates.

- Install either the square or triangle sandwich plates.
- Preheat the appliance until the green light indicates it's ready.

- Place your bread with filling onto the lower plate. For triangle plates, position the bread to align with the diagonal dividers.
- Close and lock the lid. Cook for 3-5 minutes, or until the sandwich is golden brown and the filling is heated through.

### Using Waffle Plates:

For delicious homemade waffles.



Appliance with waffle plates.

- Install the waffle plates.
- Preheat the appliance until the green light indicates it's ready.
- Pour approximately 1/2 to 3/4 cup of waffle batter onto the center of the lower plate. Do not overfill.
- Close and lock the lid. Cook for 4-7 minutes, or until the waffles are golden brown and crispy. Cooking time may vary based on batter consistency and desired crispness.

### Using Grill Plates:

Perfect for grilling vegetables, panini, or small cuts of meat.



Appliance with grill plates.

- Install the grill plates.
- Preheat the appliance until the green light indicates it's ready.
- Place your food onto the lower grill plate.
- Close and lock the lid. Cook for the desired time, checking periodically for doneness. Cooking times will vary depending on the type and thickness of the food.

## 5. MAINTENANCE AND CLEANING

---

Proper cleaning ensures the longevity and performance of your appliance.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
2. **Removing Plates:** Once cooled, press the plate release buttons (usually located on the side or front of the plate hinges) to detach the plates.
3. **Cleaning Plates:**
  - The non-stick plates can be washed by hand with warm, soapy water and a soft sponge or cloth.
  - Alternatively, the plates are dishwasher safe for convenient cleaning.
  - For stubborn food residue, soak the plates in warm, soapy water for a few minutes before cleaning. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
  - Ensure plates are completely dry before re-installing or storing.



Detached triangle sandwich plates, ready for cleaning.

4. **Cleaning Appliance Body:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the main unit in water or any other liquid.
5. **Storage:** Store the appliance with the plates installed or stored separately, in a clean, dry place. The appliance can be stored vertically to save space.

## 6. TROUBLESHOOTING

If you encounter issues with your Concept SV3070, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; internal fault.	Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food sticks to the plates.	Plates not sufficiently greased; non-stick coating damaged; food type.	Lightly grease the plates before each use. Ensure plates are clean. Avoid using metal utensils that can scratch the coating.
Green "Ready" light does not illuminate.	Appliance not fully preheated; internal sensor issue.	Allow sufficient time for preheating (typically 3-5 minutes). If the light never illuminates after extended preheating, contact customer support.
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for the first use. Ensure good ventilation. If smoke persists after initial use, unplug and contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Concept
Model Number	SV3070
Color	Black
Power	900 Watts
Voltage	240V
Material	Plastic
Special Feature	Non-stick coating, Interchangeable plates
Item Weight	3.7 Kilograms
Sandwich Plate Size	14 x 13 cm (extra large)
Number of Settings	4 (plate types)
Country of Origin	China



Product dimensions for the Concept SV3070.

## 8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your retailer. For technical support or service inquiries, please contact Concept customer service through their official website or the contact details provided in your purchase documentation.

Please have your model number (SV3070) and proof of purchase ready when contacting support.

