

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Glitzhome](#) /

› [Glitzhome 27.5" H Ceramic Garden Water Fountain Instruction Manual](#)

Glitzhome 27.5" H Ceramic Garden Water Fountain

Glitzhome 27.5" H Ceramic Garden Water Fountain Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Glitzhome 27.5" H Ceramic Garden Water Fountain. Please read all instructions carefully before use to ensure safe and optimal performance of your product.

WHAT'S INCLUDED

Verify that all components are present before beginning assembly:

- Ceramic Fountain Unit (Base and Bowl)
- Water Pump (UL listed or ETL listed, 110V 60HZ)
- LED Light
- 6 ft Power Cord
- US Plugs

Delicate Embossed Texture

Elegant and delicate embossed fern texture adds a touch of artistic



Image showing the water pump, LED light, and power cord components.

SETUP INSTRUCTIONS

- 1. Unpack Components:** Carefully remove all items from the packaging. Place the ceramic fountain base on a stable, level surface in your desired outdoor location.
- 2. Connect Pump and Light:** Locate the water pump and LED light. Connect the LED light cable to the pump.
- 3. Position Pump:** Place the pump inside the fountain's water reservoir. Ensure the pump is fully submerged in water during operation.
- 4. Connect Tubing:** Attach the fountain's internal water tubing to the pump's outlet. Ensure a secure connection to prevent leaks.
- 5. Fill with Water:** Fill the fountain reservoir with distilled water until the pump is completely covered. Do not overfill. The fountain has a water capacity of approximately 0.75 Gallons (3 Liters).
- 6. Connect to Power:** Plug the 6 ft power cord into a grounded 110V 60HZ outdoor electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI).
- 7. Test Operation:** Once plugged in, the fountain should begin to circulate water and the LED light should illuminate. Adjust water flow if necessary.



Image of the fully assembled Glitzhome Ceramic Garden Water Fountain in a garden setting.

OPERATING INSTRUCTIONS

1. **Initial Start-up:** After setup, ensure the fountain is filled with water and plugged in. The pump will begin circulating water, and the LED light will turn on automatically.
2. **Water Level:** Regularly check the water level. The pump must always be fully submerged to prevent damage. Refill with distilled water as needed to compensate for evaporation.
3. **Power On/Off:** To turn the fountain on or off, simply plug or unplug the power cord from the electrical outlet.
4. **Outdoor Use:** This fountain is designed for outdoor use. During freezing temperatures, follow the winterization steps in the Maintenance section.

Your browser does not support the video tag.

Video demonstrating the Glitzhome Garden Water Fountain operating with its LED lights in a nighttime setting.

Your browser does not support the video tag.

Video showcasing the Glitzhome Ceramic Garden Bird Water Fountain in operation.

MAINTENANCE

Regular maintenance will prolong the life and appearance of your fountain.

- **Cleaning:** Clean the pump and fountain regularly to prevent mineral buildup and algae growth. Disconnect power before cleaning. Use a soft brush and mild soap for ceramic surfaces.
- **Water Changes:** Change the water periodically, especially if it appears cloudy or dirty.
- **Winterization:** During freezing temperatures, drain all water from the fountain. Disconnect the pump and LED light. Store the pump and fountain indoors in a dry, protected area to prevent damage from ice expansion.
- **Pump Care:** Periodically disassemble and clean the pump impeller to ensure optimal water flow. Refer to the pump's specific instructions if available.



Close-up image of the fountain's water basin with water bubbling from the center, illustrating proper water flow.

TROUBLESHOOTING

If your fountain is not operating correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
No water flow or weak flow	Low water level, clogged pump, kinked tubing, pump not plugged in.	Ensure water level covers the pump. Clean the pump and impeller. Check tubing for obstructions or kinks. Verify power connection.
LED light not working	Loose connection, faulty LED, power issue.	Check the connection between the LED light and the pump. Ensure the fountain is receiving power. If issues persist, contact customer support.
Excessive splashing	Water level too high, uneven surface.	Reduce water level slightly. Ensure the fountain is placed on a completely level surface.

SPECIFICATIONS

- **Model:** 27.5" H Ceramic Garden Water Fountain
- **Brand:** Glitzhome
- **Material:** Ceramic
- **Color:** Turquoise
- **Product Dimensions (L x W x H):** 17.25" x 17.25" x 27.5"
- **Item Weight:** 36.7 lbs
- **Water Capacity:** 0.75 Gallons (3 Liters)
- **Max. Flow Rate:** 113.6 GPH
- **Power Source:** Corded Electric (110V 60HZ)
- **Special Feature:** Weather Resistant

Power Cord Length: 6ft

Max. Flow Rate: 430 Liter/Hour (113.6 GPH)

Water Capacity: 3 Liter (0.8 Gallon)



Manual Measurement, Allowable Error

Diagram showing the dimensions of the Glitzhome Ceramic Garden Water Fountain: 17.25 inches wide and 27.5 inches high.

WARRANTY AND SUPPORT

This Glitzhome Ceramic Garden Water Fountain includes a **one-year manufacturer's warranty** from the date of purchase. For warranty claims, technical assistance, or replacement parts, please contact Glitzhome customer support directly.

For additional information or support, please visit the official Glitzhome store on Amazon: [Glitzhome Store](#)

