

WINFLIKE RC-405

WINFLIKE RC-405 Replacement Remote Control User Manual

Model: RC-405

1. INTRODUCTION

This manual provides comprehensive instructions for the WINFLIKE RC-405 Replacement Remote Control. This remote is designed to operate various Kenwood CD and Digital Media Receivers. Please read this manual carefully before using your new remote control to ensure proper operation and to maximize its lifespan.

2. PRODUCT OVERVIEW

The RC-405 is a direct replacement remote control, offering an ergonomic and lightweight design for comfortable use. It requires no programming; simply insert batteries to begin operation.

2.1. Package Contents

- 1x RC-405 Replacement Remote Control

Note: Batteries and a user manual are not included in the package.

2.2. Key Features

- Ergonomic and Lightweight Design
- No Programming Required: Ready to use with compatible devices after battery installation.
- Infrared (IR) Connectivity
- Maximum Range: Approximately 33 feet (10 meters)
- Button Control Type



Figure 1: Angled view of the WINFLIKE RC-405 Replacement Remote Control.

3. SETUP

3.1. Installing Batteries

The RC-405 remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important: Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the RC-405 remote control is ready for use with compatible Kenwood CD and Digital Media Receivers. Point the remote directly at the receiver's infrared sensor and press the desired button.

4.1. Button Layout and Functions





Figure 2: Top-down view of the RC-405 remote control, highlighting button layout.

Button	Function
VOL (+/-)	Adjusts the volume level.
SRC	Selects the audio source (e.g., CD, Radio, USB, AUX).
ENT / Play/Pause	Confirms selections or plays/pauses media.
Arrow Buttons (Up/Down/Left/Right)	Navigation within menus or track/station selection.
EXIT	Exits current menu or function.
ATT	Attenuates (mutes) the audio.
AUD	Accesses audio settings.
*AM- / #FM+	Selects AM/FM bands or navigates radio presets.
Number Buttons (0-9)	Direct input for track numbers, radio frequencies, or menu selections.
DIRECT	Activates direct input mode.
Phone Icon	Initiates or answers calls (if supported by the connected receiver).

5. COMPATIBILITY

The WINFLIKE RC-405 Replacement Remote Control is compatible with a wide range of Kenwood CD Receivers and Digital Media Receivers, including but not limited to the following models:

- KDC-152
- KDC-153
- KDC-153S
- KDC-148
- KDC-MP148CR
- KDC-350U

- KDC-X396
- KDC-352U
- KDC-200U
- KDC-202U
- KDC-252U
- KDC-3054UG
- KDC-3054UR
- KDC-3054URY
- KDC-316UR
- KDC-3254URY
- KDC-3354UGY
- KDC-3454UQ
- KDC-3554UGM
- KDC-3554URM
- KDC-4054UB
- KDC-4054UR
- KDC-MP152U
- KDC-MP2052U
- KDC-MP252U
- KDC-U3553
- KMR-350U
- KDC-208U
- KDC-248U
- KDC-4051UGM
- KDC-4051URM
- KDC-MP148U
- KDC-X395
- KDC-X695
- KDC-400U
- KDC-X895
- KDC-BT848U
- KDC-X595
- KDC-448U
- KDC-X896
- KDC-BT852HD
- KDC-X496
- KDC-452U
- KMR-550U
- KDC-X696
- KDC-BT60U
- KDC-BT945U
- KDC-MP745U
- KDC-X7016

- KDC-X7016L
- KDC-X794
- KDC-X994
- KDC-MP345U
- KDC-MP245U
- KDC-5047U
- KDC-BT50U
- KDC-MP445U
- KDC-U6046
- KDC-U6046L
- KDC-X494
- KMR-440U
- KDC-MP5043U
- KDC-MP543U
- KDC-MP443U
- KDC-X596
- KDC-HD552U
- KDC-X796
- KDC-BT752HD
- KDC-X995
- KDC-BT948HD
- KDC-X996
- KDC-U3049
- KDC-U349A
- KDC-U349G
- KDC-U349R
- KDC-U349S
- KDC-U4049
- KDC-348U
- KDC-4751SD
- KDC-U553BT
- KDC-6047U
- KDC-X8016BT
- KDC-X8016BTL
- KDC-BT952HD
- KDC-BT41U
- KDC-BT648U
- KDC-U4549
- KDC-U4549SD
- KDC-U549BT
- KDC-MP248U
- KDC-U7046BT
- KDC-U7046BTL

- KIV-700
- KIV-BT900
- KIV-701
- KIV-BT901
- QAL1303-001
- A70-2104-05

6. MAINTENANCE

6.1. Cleaning the Remote

To clean the remote control, wipe it gently with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface or internal components.

6.2. Battery Replacement

If the remote control's range decreases or it becomes unresponsive, the batteries may need to be replaced. Refer to Section 3.1 for battery installation instructions. Always replace both AAA batteries simultaneously.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	<ul style="list-style-type: none"> • Batteries are dead or incorrectly installed. • Obstruction between remote and receiver. • Remote is out of range. 	<ul style="list-style-type: none"> • Replace batteries with new AAA alkaline batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the receiver. • Move closer to the receiver (within 33 feet).
Buttons are unresponsive or sticky.	<ul style="list-style-type: none"> • Dirt or debris under buttons. • Worn-out internal contacts. 	<ul style="list-style-type: none"> • Clean the remote control (refer to Section 6.1). • If cleaning does not resolve the issue, the remote may need replacement.

If you continue to experience issues, please contact WINFLIKE customer support for further assistance.

8. SPECIFICATIONS

Brand	WINFLIKE
Model Number	RC-405 (WL-RC-405-S1-210515)
Special Features	Ergonomic, Lightweight, No Programming Required
Connectivity Technology	Infrared (IR)
Maximum Range	33 Feet (approx. 10 meters)
Number of Batteries Required	2
Battery Type	AAA Alkaline
Item Weight	0.06 Pounds (approx. 27 grams)
Item Dimensions (L x W x H)	6"L x 2"W x 0.5"H (approx. 15.2cm x 5.1cm x 1.3cm)

9. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your WINFLIKE RC-405 Replacement Remote Control, please contact WINFLIKE customer service. Refer to your purchase documentation or the WINFLIKE website for contact information.