

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy 6 ft Tall Animated Projection Airblown Ursula Disney User Manual

Gemmy B094YP5V9C

Gemmy 6 ft Tall Animated Projection Airblown Ursula Disney Inflatable User Manual

Model: B094YP5V9C

Brand: Gemmy

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Gemmy 6 ft Tall Animated Projection Airblown Ursula Disney inflatable. Please read this manual thoroughly before use to ensure proper and safe operation.

The Ursula inflatable is designed to amaze with its animated tentacles and realistic flame effect, making it a captivating addition to your outdoor decor. It self-inflates quickly and includes all necessary components for easy installation.

IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- For outdoor use only.
- Always securely stake the inflatable to the ground using the provided stakes and tethers to prevent it from blowing away, especially in windy conditions.
- Do not touch electrical components while the unit is in operation or connected to power.
- Keep the inflatable and its electrical components away from water sources and damp areas to prevent electrical shock.
- Ensure the blower fan is clear of obstructions at all times to allow for proper inflation and prevent overheating.
- Do not attempt to modify or repair the product. Refer all servicing to qualified personnel.
- Keep away from open flames or heat sources.

PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- 1 x Gemmy 6 ft Tall Animated Projection Airblown Ursula Inflatable Unit
- 1 x Integrated Air Blower (pre-installed)

- 4 x Ground Stakes
- 4 x Tethers



Image: Included ground stakes and tethers for securing the inflatable.

SETUP INSTRUCTIONS

1. **Choose a Location:** Select a flat, clear area in your yard or outdoor space. Ensure there are no sharp objects or debris that could puncture the inflatable. Allow sufficient space for the inflatable to fully expand (approximately 72 inches wide by 59 inches deep by 90 inches tall).



Image: The Ursula inflatable fully set up in an outdoor environment.

2. **Unpack and Unfold:** Carefully remove the inflatable from its packaging. Unfold the fabric completely and lay it flat on the chosen ground. Ensure the integrated air blower is positioned correctly at the base.



Image: The base of the inflatable showing the integrated air blower.

3. **Secure the Inflatable:** Locate the tether points on the inflatable. Attach one end of each tether to these points. Use the provided ground stakes to secure the base of the inflatable to the ground. Extend the tethers outwards at an angle and secure them to the ground with additional stakes. This provides stability against wind.
4. **Connect to Power:** Plug the power cord of the integrated air blower into a standard outdoor-rated electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI) for safety.
5. **Inflation:** Once plugged in, the inflatable will begin to self-inflate within seconds. Ensure all zippers and openings are fully closed to allow for complete inflation. Adjust the positioning as it inflates to ensure it stands upright and is properly oriented.



Image: The Gemmy Ursula inflatable fully inflated and ready for display.

OPERATING INSTRUCTIONS

Operating your Gemmy Ursula inflatable is straightforward:

- **To Inflate:** Simply plug the power cord into a suitable electrical outlet. The internal blower will activate, and the inflatable will self-inflate. The animated tentacles will begin to move, and the flame effect will illuminate.
- **To Deflate:** Unplug the power cord from the electrical outlet. The inflatable will begin to deflate. For faster deflation, you may open any accessible zippers or vents.
- **Operation Duration:** The inflatable is designed for continuous operation during display periods. However, it is recommended to unplug and deflate the unit during severe weather conditions (heavy rain, strong winds, snow) or when not in use for extended periods.

MAINTENANCE

Proper maintenance will extend the life of your inflatable:

- **Cleaning:** To clean the surface of the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these can damage the fabric or printed design. Ensure the unit is unplugged and fully deflated

before cleaning.

- **Storage:** When not in use, ensure the inflatable is completely deflated and dry. Fold it neatly and store it in its original box or a similar protective container in a cool, dry place, away from direct sunlight and extreme temperatures. This helps prevent mildew and material degradation.
- **Inspection:** Periodically inspect the inflatable for any tears, punctures, or damage to the fabric, stitching, or electrical components. Check the power cord for fraying or damage. If any damage is found, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate fully.	Power cord not plugged in. Blower fan obstructed. Zipper or opening not fully closed. Tear or hole in fabric.	Ensure power cord is securely plugged into a working GFCI outlet. Check the blower intake for debris and clear any obstructions. Verify all zippers and openings are completely closed. Inspect the fabric for damage. Small tears can sometimes be patched with repair tape.
Inflatable falls over or leans.	Not properly secured with stakes/tethers. Strong wind conditions. Uneven ground.	Ensure all ground stakes and tethers are firmly secured. Adjust tether tension if necessary. Consider deflating the unit during excessively windy conditions. Relocate the inflatable to a more level surface.
Animated features (tentacles/flame effect) not working.	Power issue. Internal mechanism obstruction.	Check power connection. Ensure the inflatable is fully inflated, as some animations require full air pressure. Inspect for any internal fabric obstructions to the moving parts.

SPECIFICATIONS

- **Model:** B094YP5V9C
- **Brand:** Gemmy
- **Dimensions (H x W x D):** Approximately 90.16 x 72.05 x 59.06 inches (7.5 ft Tall x 6 ft Wide x 4.9 ft Deep)
- **Item Weight:** 14.27 pounds
- **Material:** Polyester
- **Special Features:** Self-inflating, Animated tentacles, Realistic flame effect, Internal lighting.
- **Power Source:** Standard AC electrical outlet (120V, 60Hz - typical for US products)
- **UPC:** 191245202806
- **Intended Use:** Outdoor Holiday Decoration

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For details regarding warranty coverage, product support, or to purchase replacement parts, please contact Gemmy Industries directly through their

official website or customer service channels.

You may also refer to the retailer's return policy where the product was purchased for information on returns or exchanges.

© 2024 Gemmy Industries. All rights reserved.
Disney elements © Disney.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B094YP5V9C>

More documents and user manuals: <https://manuals.plus/>