

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy Airdorable Airblown Jack Skellington Disney Inflatable Instruction Manual Model 227130

Gemmy 227130

Gemmy Airdorable Airblown Jack Skellington Disney Inflatable Instruction Manual

Model: 227130



INTRODUCTION

This manual provides instructions for the Gemmy Airdorable Airblown Jack Skellington Disney Inflatable, Model 227130. This self-inflating decoration is designed for indoor use, perfect for tabletops, mantles, or as part of a Halloween display. Please read these instructions carefully before setup and operation to ensure proper use and longevity of your product.

PACKAGE CONTENTS

- Gemmy Airdorable Jack Skellington Inflatable
- USB Cable
- Battery Pack (for portable power)

SETUP INSTRUCTIONS

1. **Unpack the Inflatable:** Carefully remove the Jack Skellington inflatable from its packaging.
2. **Choose a Location:** Select a flat, stable surface indoors for placement, such as a tabletop, mantle, or shelf. Ensure the area is clear of sharp objects.
3. **Connect Power:**
 - **USB Power:** Connect the provided USB cable to the inflatable and then to a compatible USB power adapter (not included) or a powered USB port.
 - **Battery Pack Power:** Insert the required batteries (not included) into the battery pack. Connect the battery pack to the inflatable.
4. **Inflation:** Once powered, the inflatable will automatically begin to self-inflate. Ensure the fan intake is not obstructed.

5. **Positioning:** Adjust the inflatable as it inflates to ensure it stands upright and is properly displayed.





Figure 1: The Gemmy Airdorable Jack Skellington inflatable fully inflated and standing.



Figure 2: The inflatable displayed in an indoor setting, demonstrating typical placement.

OPERATING INSTRUCTIONS

The Gemmy Airdorable Jack Skellington inflatable is designed for simple operation.

- **To Activate:** Connect the inflatable to a power source (USB or battery pack). The internal fan will automatically begin to inflate the decoration.
- **To Deactivate:** Disconnect the inflatable from its power source. The fan will stop, and the inflatable will begin to deflate.
- **Indoor Use Only:** This product is specifically designed for indoor decoration. Avoid exposure to outdoor elements.

MAINTENANCE

- **Cleaning:** To clean the surface of the inflatable, gently wipe with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storage.
- **Storage:** After use, disconnect power and allow the inflatable to fully deflate. Fold or roll the inflatable neatly and store it in its original packaging or a suitable container in a cool, dry place, away from direct sunlight and extreme temperatures. This helps prevent damage and prolongs the product's life.
- **Fan Maintenance:** Periodically check the fan intake for any dust or debris. Gently clear any obstructions to ensure proper airflow and inflation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	No power supply. Fan intake is blocked. Fan is damaged.	Ensure USB cable is securely connected to a powered source or batteries in the pack are fresh and correctly inserted. Check for obstructions around the fan intake and clear them. Contact customer support if the fan appears damaged.
Inflatable does not stand upright or is partially deflated.	Insufficient air pressure. Product is not positioned correctly. Small tear or hole in fabric.	Ensure the fan is running continuously and is not obstructed. Adjust the base and body of the inflatable to help it stand. Inspect the fabric for any damage. Small tears may be repairable with an inflatable repair kit (not included).

SPECIFICATIONS

- **Model:** 227130
- **Brand:** Gemmy
- **Character:** Jack Skellington from The Nightmare Before Christmas
- **Dimensions (Inflated):** Approximately 18.9 inches (Height) x 9.84 inches (Width) x 11.81 inches (Depth)
- **Material:** Polyester
- **Power Source:** USB cable or Battery Pack (batteries not included)
- **Special Features:** Self-inflating, Deflates for easy storage
- **Intended Use:** Indoor decoration

SAFETY INFORMATION

WARNING:

- Keep the inflatable away from sharp objects to prevent punctures or tears.
- Do not allow children to play with the inflator mechanism.
- Ensure the decoration is placed on a stable surface to prevent it from falling over.
- This product is for decorative purposes only and is not a toy.

WARRANTY AND SUPPORT

Specific warranty information for the Gemmy Airdorable Jack Skellington Inflatable is not provided in this manual. For warranty inquiries or technical support, please contact Gemmy customer service directly or refer to the product packaging for details.

You may also visit the official Gemmy store for more information: [Gemmy Industries Store](#)

