



Manuals.plus /

› Zanussi /

› Zanussi ZOPXE5X2 Electric Oven User Manual

## Zanussi ZOPXE5X2

# Zanussi ZOPXE5X2 Electric Oven User Manual

Model: ZOPXE5X2 | Part Number: 944 068 147

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Zanussi ZOPXE5X2 Electric Oven. Please read these instructions carefully before using the appliance and keep them for future reference. Proper use ensures optimal performance and extends the life of your oven.

## 2. SAFETY INFORMATION

---

Always prioritize safety when operating electrical appliances. Failure to follow these safety guidelines may result in injury or damage to the appliance.

- **Electrical Connection:** Ensure the oven is correctly installed by a qualified electrician and connected to a properly earthed power supply.
- **Hot Surfaces:** The oven and its accessible parts become very hot during use. Always use oven mitts when handling hot items or surfaces. Keep children and pets away from the appliance.
- **Cleaning:** Disconnect the appliance from the power supply before cleaning. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass, as they can scratch the surface, which may result in shattering.
- **Ventilation:** Ensure adequate ventilation around the appliance. Do not obstruct ventilation openings.
- **Supervision:** Never leave the oven unattended during operation, especially when cooking with oil or fat, as these can ignite.
- **Repairs:** Do not attempt to repair or modify the appliance yourself. Contact authorized service personnel for all repairs.

## 3. SETUP AND FIRST USE

---

### 3.1 Installation

The Zanussi ZOPXE5X2 electric oven must be installed by a qualified technician in accordance with local regulations and the provided installation instructions. Ensure the appliance is level and securely fitted into its cabinet.

### 3.2 Initial Cleaning

Before first use, clean the oven interior and accessories. Remove all packaging materials, including any protective films or stickers. Wash the oven racks and trays with warm soapy water, rinse, and dry thoroughly.



**Image:** Interior view of the Zanussi ZOPXE5X2 oven, showing the fan, racks, and baking trays. This view is relevant for initial cleaning and understanding rack placement.

### 3.3 Burning Off Residues

To eliminate any manufacturing odors or residues, operate the empty oven for approximately 30-60 minutes at its maximum temperature (e.g., 250°C) with the fan function. Ensure the kitchen is well-ventilated during this process.

## 4. OPERATING INSTRUCTIONS

---

Your Zanussi ZOPXE5X2 oven features intuitive controls for various cooking functions.



**Image:** The control panel of the Zanussi ZOPXE5X2 oven, featuring two rotary knobs for function and temperature selection, and a central digital display for time and settings.

### 4.1 Control Panel Overview

- **Left Rotary Knob:** Selects cooking functions (e.g., Conventional, Fan Cooking, Grill, Defrost).
- **Digital Display:** Shows current time, cooking duration, and temperature.
- **Right Rotary Knob:** Adjusts temperature or timer settings.

### 4.2 Setting the Time

Upon first connection or after a power cut, the display will flash. Use the '+' or '-' buttons near the digital display to set the current time. Confirm by pressing the clock icon or waiting a few seconds.

### 4.3 Selecting a Cooking Function

1. Turn the **Left Rotary Knob** to the desired cooking function symbol.
2. Turn the **Right Rotary Knob** to set the desired temperature. The oven will begin to heat up.
3. The indicator light will turn off when the set temperature is reached.

### 4.4 Using the Timer

The oven features a minute minder and cooking duration timer. Refer to the full manual for detailed instructions on setting specific timer functions.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance ensure the longevity and hygiene of your oven.

### 5.1 General Cleaning

- Always allow the oven to cool down completely before cleaning.
- Use a soft cloth and warm soapy water for the interior and exterior surfaces. Avoid abrasive cleaners.
- For stubborn stains, specialized oven cleaners can be used, following the product instructions carefully.

## 5.2 Cleaning Oven Racks and Trays

Remove racks and trays and wash them in warm soapy water. For baked-on food, soak them before scrubbing.



**Image:** Interior of the Zanussi ZOPXE5X2 oven, illustrating the areas to be cleaned, including the fan cover and rack supports.

## 5.3 Replacing the Oven Light Bulb

Ensure the oven is disconnected from the power supply and completely cool. Unscrew the protective glass cover, replace the bulb with a new heat-resistant bulb (check specifications for type), and reattach the cover.

# 6. TROUBLESHOOTING

---

If you encounter issues with your oven, consult this section before contacting service.

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect settings.	Check circuit breaker. Ensure function and temperature knobs are correctly set.
Oven light does not work.	Light bulb is faulty.	Replace the oven light bulb (see Section 5.3).
Food not cooking evenly.	Incorrect rack position; oven door not fully closed.	Refer to cooking guidelines for optimal rack positions. Ensure door is sealed.
Excessive smoke during cooking.	Food spills or grease build-up.	Clean the oven interior thoroughly. Avoid overfilling dishes.

If the problem persists after attempting these solutions, please contact Zanussi customer service or a qualified technician.

## 7. SPECIFICATIONS

---

- **Model:** ZOPXE5X2
- **Part Number:** 944 068 147
- **Brand:** Zanussi
- **Type:** Electric Oven
- **Capacity:** 57 Litres
- **Power:** 2515 W
- **Energy Class:** A+
- **Finish Type:** Stainless Steel
- **Dimensions (L x W x H):** 50 x 50 x 28 cm
- **Weight:** 5.66 kg
- **Manufacturer:** ZANUSSI
- **ASIN:** B094ZC9MH2

## 8. WARRANTY AND SUPPORT

---

Your Zanussi ZOPXE5X2 Electric Oven comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including the warranty period and coverage details. For technical support, spare parts, or service requests, please contact your retailer or the official Zanussi customer service in your region. Ensure you have your model number (ZOPXE5X2) and serial number ready when contacting support.

