



Manuals.plus /

› Igzyz /

› Igzyz WiFi USB Charger Spy Camera 1080P Instruction Manual

Igzyz B094ZJCYL5

Igzyz WiFi USB Charger Spy Camera 1080P Instruction Manual

Model: B094ZJCYL5

1. PRODUCT OVERVIEW

The Igzyz WiFi USB Charger Spy Camera is a discreet surveillance device integrated into a standard USB wall charger. It allows for remote monitoring, motion detection, and video recording, making it suitable for home or office security. This device functions as both a camera and a working USB charger.



Hidden Camera



1080P



Motion Detection



Remote Connection



APP Control



256G Support

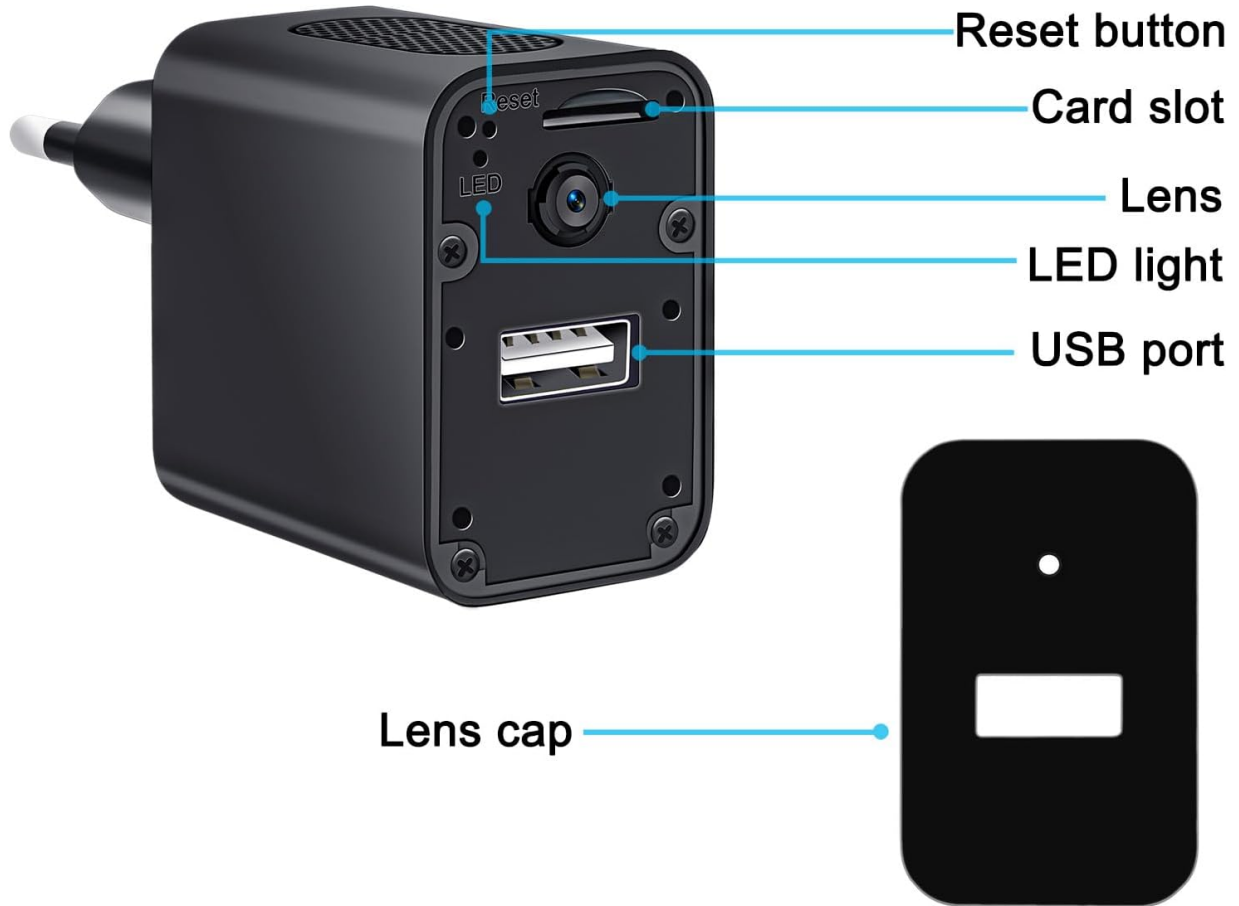


Figure 1: Product components including the reset button, card slot, lens, LED indicator, USB charging port, and lens cap.

Package Contents:

- Igzyz WiFi USB Charger Spy Camera
- USB Card Reader
- Reset Pin
- User Manual



Figure 2: Items included in the product package.

2. SETUP INSTRUCTIONS

2.1 Initial Setup

1. **Insert Micro SD Card:** Locate the card slot on the device (refer to Figure 1). Gently insert a Micro SD card (up to 256GB, not included) into the slot until it clicks into place. Ensure the card is inserted correctly.
2. **Power On:** Plug the camera into a standard wall outlet. The device will power on automatically.
3. **Download the App:** Scan the QR code provided in the manual or on the packaging, or visit <http://120.79.165.16/download/index.html> to download the companion application (e.g., "Live Camera" or "weihome") for your smartphone (Android/iOS).



Figure 3: App download options and QR codes.

2.2 Wi-Fi Connection

4. **Register/Log In:** Open the downloaded app and follow the on-screen instructions to register a new account or log in if you already have one.
5. **Add Device:** In the app, select the option to add a new device. The app will guide you through connecting the camera to your home Wi-Fi network.
6. **Wi-Fi Compatibility:** The camera supports **2.4 GHz Wi-Fi networks only**. Ensure your router is configured for 2.4 GHz or that you are connecting to a 2.4 GHz band. It does not support 5 GHz Wi-Fi.
7. **Security Protocol:** After successful Wi-Fi configuration, the camera's signal will be masked for enhanced security. Access is restricted to the primary device or shared access via the app.



Figure 4: Wi-Fi connection setup, highlighting 2.4 GHz compatibility.

3. OPERATING INSTRUCTIONS

3.1 Live View and Recording

- Once connected, open the app to view the live video feed from the camera.
- The camera records video in Full HD (1080P) for live streaming. Video saved to the SD card is recorded at 640P resolution.
- You can adjust the video resolution within the app settings.

The resolution can be adjusted.



Figure 5: Adjustable video resolution for live streaming.

3.2 Motion Detection Alarm

- Activate the motion detection alarm mode within the app settings.
- When the camera detects movement, it will send an alarm notification to your smartphone.
- You can then access the live feed or review recorded video on the SD card to assess the situation.



Figure 6: Motion detection alarm feature.

3.3 Dual Functionality

- The device functions as a standard USB wall charger, allowing you to charge portable devices while it records.



Figure 7: Device charging a smartphone while discreetly recording.

3.4 App Sharing

- The app allows for sharing access to the camera feed with other authorized users, enabling multiple family members or colleagues to monitor.



Figure 8: App sharing functionality for multi-user access.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Firmware Updates:** Check the app periodically for any available firmware updates to ensure optimal performance and security.

5. TROUBLESHOOTING

- **Cannot Connect to Wi-Fi:** Ensure your Wi-Fi network is 2.4 GHz. The camera does not support 5 GHz networks. Verify your Wi-Fi password and signal strength.
- **App Issues:** If the app is unresponsive or fails to connect, try restarting your smartphone and the camera. Ensure the app is updated to the latest version. Some users have reported difficulties with app registration or connection; if issues persist, contact customer support.
- **Resetting the Device:** If the camera is not functioning correctly, use the provided reset pin to press the reset button (refer to Figure 1) for approximately 5-10 seconds until the indicator light changes. *Caution: The reset button can be fragile; apply gentle pressure.*
- **Poor Video Quality:** Ensure adequate lighting in the surveillance area. Check the app settings to confirm the desired resolution is selected.
- **No Recording to SD Card:** Ensure the Micro SD card is correctly inserted, formatted, and has sufficient free space. The camera supports up to 256GB.

6. SPECIFICATIONS

Feature	Specification
Video Recording Resolution	Live Stream: 1080P Full HD; SD Card Recording: 640P
Wireless Communication Technology	Wi-Fi (2.4 GHz only)
Form Factor	Box (USB Charger)
Material	Plastic
Special Features	Motion Detector, HD Resolution
Indoor/Outdoor Use	Indoor
Compatible Devices	Smartphone (Android, iOS)
Power Source	Wall Outlet (Powered by mains)
Dimensions (approx.)	6.2 x 4.6 x 2.9 cm (excluding plug)

Figure 9: Approximate product dimensions.

7. WARRANTY AND SUPPORT

Igzyz products come with a **12-month warranty** and **lifetime technical support**. We offer free replacement services for defective products.

For any issues, questions, or technical assistance, please do not hesitate to contact our customer support team. Refer to your purchase documentation for specific contact details.