

Giantex GT67503BK-WH

Giantex GT67503BK-WH Recliner Glider Chair Instruction Manual

Model: GT67503BK-WH

1. INTRODUCTION

Thank you for purchasing the Giantex GT67503BK-WH Recliner Glider Chair. This manual provides important information regarding the assembly, operation, maintenance, and safety of your new chair. Please read it thoroughly before use and retain it for future reference.

This recliner glider chair is designed for comfort and versatility, featuring a 360° swivel, rocking motion, and adjustable reclining positions. It is constructed with a sturdy wood and metal frame, high-density sponge padding, and durable faux leather upholstery.



Image: The Giantex Recliner Glider Chair in use, demonstrating its comfort and extended footrest.

2. SAFETY INFORMATION

- Ensure all parts are securely fastened before using the chair.
- Do not stand on the chair or use it as a step stool.
- Keep hands and feet clear of the reclining mechanism when adjusting the chair.
- Do not allow children to play unsupervised on or around the chair.
- Maximum weight recommendation: 330 pounds (150 kg). Do not exceed this limit.
- Place the chair on a level surface to ensure stability.

3. PACKAGE CONTENTS

Please check that all components are present before assembly:

- Chair Base (with swivel and rocking mechanism)
- Backrest Cushion
- Seat Cushion (pre-attached to base)
- Armrests (pre-attached to base)

- User Manual (this document)

4. ASSEMBLY INSTRUCTIONS

The Giantex Recliner Glider Chair is designed for quick and easy assembly. Most components are pre-assembled. Follow these steps:

1. Carefully unpack all components and place them on a soft, clean surface to prevent damage.
2. Align the metal brackets on the backrest cushion with the corresponding slots on the chair base.
3. Firmly push the backrest down until it clicks securely into place. Ensure both sides are fully engaged.
4. Verify that the backrest is stable and does not wobble.

Multifunctional Design



Image: Visual guide for attaching the backrest and initial reclining adjustment.

5. OPERATING INSTRUCTIONS

5.1 Reclining Function

To recline the chair:

1. Locate the backrest angle adjustment buckle, typically on the side of the chair (as shown in the assembly image, Step 1).
2. Pull the buckle to release the backrest lock.

3. Lean back gently while pushing on the armrests to achieve your desired reclining angle. The chair offers multiple angles, such as 100° for reading, 115° for watching TV, and 140° for resting.
4. To return to the upright position, lean forward and push the backrest until it locks into place.



Image: Demonstrating the reclining feature with the footrest extended.

How to Adjust Your Sofa Chair?



Step 1:

Pull the backrest angle adjustment buckle, the following effect will be achieved



Step 2:

Place your hands on the armrests and push back the backrest the following effect will be achieved



Image: Multifunctional design illustrating various reclining angles for different activities.

5.2 Swivel and Rocking Function

The chair is equipped with a 360° swivel base and a smooth rocking mechanism for enhanced relaxation.

- **Swivel:** Simply rotate the chair to face any direction. The round metal base allows for full 360-degree rotation.
- **Rocking:** The chair is designed to provide a gentle rocking motion. This function operates automatically when seated, offering a soothing experience.

360° Swivel Function & Rocking Design



Image: Illustration of the 360° swivel and rocking capabilities.

5.3 Footrest Operation

The integrated footrest extends automatically when the chair is reclined. To retract the footrest, gently push it down with your legs while returning the backrest to the upright position.

Comfortable Footrest



Image: Detail of the comfortable footrest with thick padding and integrated metal support.

6. MAINTENANCE

To ensure the longevity and appearance of your Giantex Recliner Glider Chair, follow these maintenance guidelines:

- **Cleaning:** The faux leather surface is waterproof and easy to clean. Wipe spills immediately with a soft, clean, damp cloth. For general cleaning, use a mild soap solution and wipe dry. Avoid harsh chemicals or abrasive cleaners.
- **Frame:** Periodically check all bolts and screws to ensure they are tight. Retighten if necessary.
- **Mechanism:** The reclining and swivel mechanisms are designed for durability. Avoid forcing the mechanisms. If any part feels stiff, do not apply excessive force.
- **Placement:** Avoid direct sunlight and heat sources, which can cause the faux leather to fade or crack over time.



Image: Components of the chair, including the durable faux leather material.

7. TROUBLESHOOTING

If you encounter any issues with your chair, please refer to the following common solutions:

- **Chair wobbles:** Ensure the chair is placed on a flat, even surface. Check all assembly connections and tighten any loose bolts.
- **Reclining mechanism is stiff:** Ensure no obstructions are preventing movement. Do not force the mechanism. If the issue persists, contact customer support.
- **Footrest does not retract:** Apply gentle pressure with your legs while pushing the backrest to the upright position. Ensure no objects are blocking the footrest mechanism.

8. SPECIFICATIONS

Feature	Specification
Brand	Giantex
Model Number	GT67503BK-WH

Color	Black
Product Dimensions	34.5"D x 28"W x 39.5"H
Material	Faux Leather, Metal, Wood
Special Features	Adjustable, Durability, Waterproof
Maximum Weight Recommendation	330 Pounds
Item Weight	79 Pounds
Furniture Base Movement	Swivel
Product Care Instructions	Wipe Clean

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact Giantex customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, please visit the [Giantex Store](#).

© 2023 Giantex. All rights reserved.