

[Manuals.plus](#) /

› [Pop Sonic](#) /

› Pop Sonic Smoothie Facial Hair Remover User Manual

Pop Sonic PS_Smoothie

Pop Sonic Smoothie Facial Hair Remover User Manual

Model: PS_Smoothie

INTRODUCTION

The Pop Sonic Smoothie Facial Hair Remover is designed for painless and efficient removal of vellus hair, commonly known as peach fuzz, from the face and other delicate areas. This compact, battery-operated device offers a smooth and soft skin finish without the discomfort of pulling or tugging. Its discreet design makes it ideal for use at home or on the go.



Image: Pop Sonic Smoothie Facial Hair Remover, lavender color, with its cap on.

SETUP

1. **Unpack the Device:** Carefully remove the Pop Sonic Smoothie from its packaging.
2. **Install Battery:** Twist the bottom section of the device counter-clockwise to open the battery compartment. Insert one AA battery (included) according to the polarity markings. Twist the bottom section clockwise to secure it.
3. **Replace Protective Cap:** Ensure the protective cap is securely placed over the cutting head when not in use.



Image: Hands demonstrating battery installation and device usage.

OPERATION

1. **Prepare Skin:** Ensure your skin is clean and dry before use.

2. **Activate Device:** Remove the protective cap. Slide the power button upwards to turn on the device. A light will illuminate, indicating it is active.
3. **Hair Removal:** Gently press the head of the Smoothie flat against your skin. Move the device in small, circular motions to remove unwanted hair. Avoid applying excessive pressure.
4. **Turn Off:** After use, slide the power button downwards to turn off the device. Replace the protective cap.



Image: A woman using the Pop Sonic Smoothie Facial Hair Remover on her cheek.

Video: Demonstration of the Pop Sonic Smoothie Facial Hair Remover in use, highlighting its painless operation.

MAINTENANCE

1. **Cleaning the Head:** After each use, twist the trim cover blade counter-clockwise to detach it from the device. Use the included small brush to clean any collected hair, skin cell residue, or dirt from the blade and the interior of the device.
2. **Reattach Head:** Once clean, align the trim cover blade and twist it clockwise to securely reattach it.

3. **Blade Replacement:** For optimal performance, it is recommended to replace the blade every 3 months with daily use. Replacement blades are a standard size and can be found where similar products are sold.
4. **Battery Replacement:** Replace the AA battery when the device's performance diminishes or it fails to turn on.

Video: Short clip demonstrating easy cleaning and replaceable batteries for the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is dead or incorrectly installed.	Check battery polarity. Replace with a fresh AA battery.
Device is not removing hair effectively.	Blade is dull or clogged with hair/debris.	Clean the blade head thoroughly. Replace the blade if it remains dull after cleaning.
Device head detaches easily.	Head not securely twisted on.	Ensure the trim cover blade is twisted clockwise until it is firmly attached.

SPECIFICATIONS

- **Model Number:** PS_Smoothie
- **Power Source:** 1 x AA Battery (included)
- **Battery Type:** Alkaline
- **Battery Average Life:** Approximately 6 hours
- **Head Type:** Foil
- **Number of Blades:** 3
- **Blade Material:** Stainless Steel
- **Color:** Lavender
- **Item Weight:** 2.86 g
- **Dimensions:** 7.72 x 3.62 x 1.38 inches (Package)
- **Additional Features:** Cordless, Compact

SAFETY INFORMATION

- Always clean the device after each use to prevent bacterial growth.
- Do not use near water or while charging (if applicable for other models). This model is battery-operated.
- Dispose of used batteries according to local regulations.
- Always replace the protective cap after use to prevent damage to the cutting area and for hygiene.
- Keep out of reach of children.
- Do not disassemble the device beyond routine cleaning and battery/blade replacement.

WARRANTY

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Pop Sonic website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Pop Sonic Smoothie Facial Hair Remover, please contact Pop Sonic customer service. Contact details can typically be found on the product packaging or the official Pop Sonic website.

Online Resources: [Visit the Pop Sonic Store on Amazon](#)

© 2026 Pop Sonic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question