

[manuals.plus](#) /› [Shinco](#) /› [Shinco Portable Wireless Speaker SC142 Instruction Manual](#)

Shinco SC142

Shinco Portable Wireless Speaker SC142 Instruction Manual

Model: SC142

INTRODUCTION

Thank you for purchasing the Shinco Portable Wireless Speaker, Model SC142. This compact Bluetooth speaker delivers loud volume, strong bass, and features colorful LED lights. It is compatible with microphones for karaoke or public address use. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

SAFETY INFORMATION

- Do not expose the speaker to water or excessive moisture. This product is not waterproof.
- Avoid extreme temperatures, direct sunlight, or dusty environments.
- Do not disassemble, repair, or modify the speaker. This voids the warranty and may cause damage or injury.
- Keep the speaker away from heat sources such as radiators, stoves, or other heat-producing appliances.
- Use only the provided charging cable or a certified USB-C cable for charging.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

PACKAGE CONTENTS

Please check that all items are present in your package:

- Shinco Portable Wireless Speaker (SC142)
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Control Panel and Ports

Familiarize yourself with the speaker's control panel and connection ports for easy operation.



Image: Overview of the speaker's top panel, highlighting the built-in handle, USB-C charging port, USB port, AUX-IN port, and Microphone Jack.

- **Built-in Handle:** For easy portability.
- **Charging Port (USB-C):** Connect the USB-C cable to charge the speaker.
- **USB Port:** Insert a USB drive for direct audio playback.
- **AUX-IN Port:** Connect external audio devices using a 3.5mm auxiliary cable.
- **Microphone Jack:** Connect a wired microphone for karaoke or public address.
- **Control Buttons:** Power ON/OFF, Mode (M), Play/Pause, Volume Up/Next Track, Volume Down/Previous Track.

LED Light Features

The speaker features colorful LED lights that can pulse with the music or display various patterns.

Small Light Party

3 fantastic lights mode, beating with rhythm



Image: Two Shinco SC142 speakers showcasing their dynamic LED light display, creating a vibrant atmosphere.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate during charging and turn off when fully charged.

2. Powering On/Off

Locate the Power ON/OFF switch on the control panel. Slide the switch to the 'ON' position to power on the speaker. Slide it to the 'OFF' position to power off the speaker.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

To connect your device via Bluetooth:

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the 'M' (Mode) button until you hear a Bluetooth pairing prompt.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available Bluetooth devices and select "SC142" from the list.
4. Once paired, the speaker will indicate a successful connection, and you can begin playing audio wirelessly.

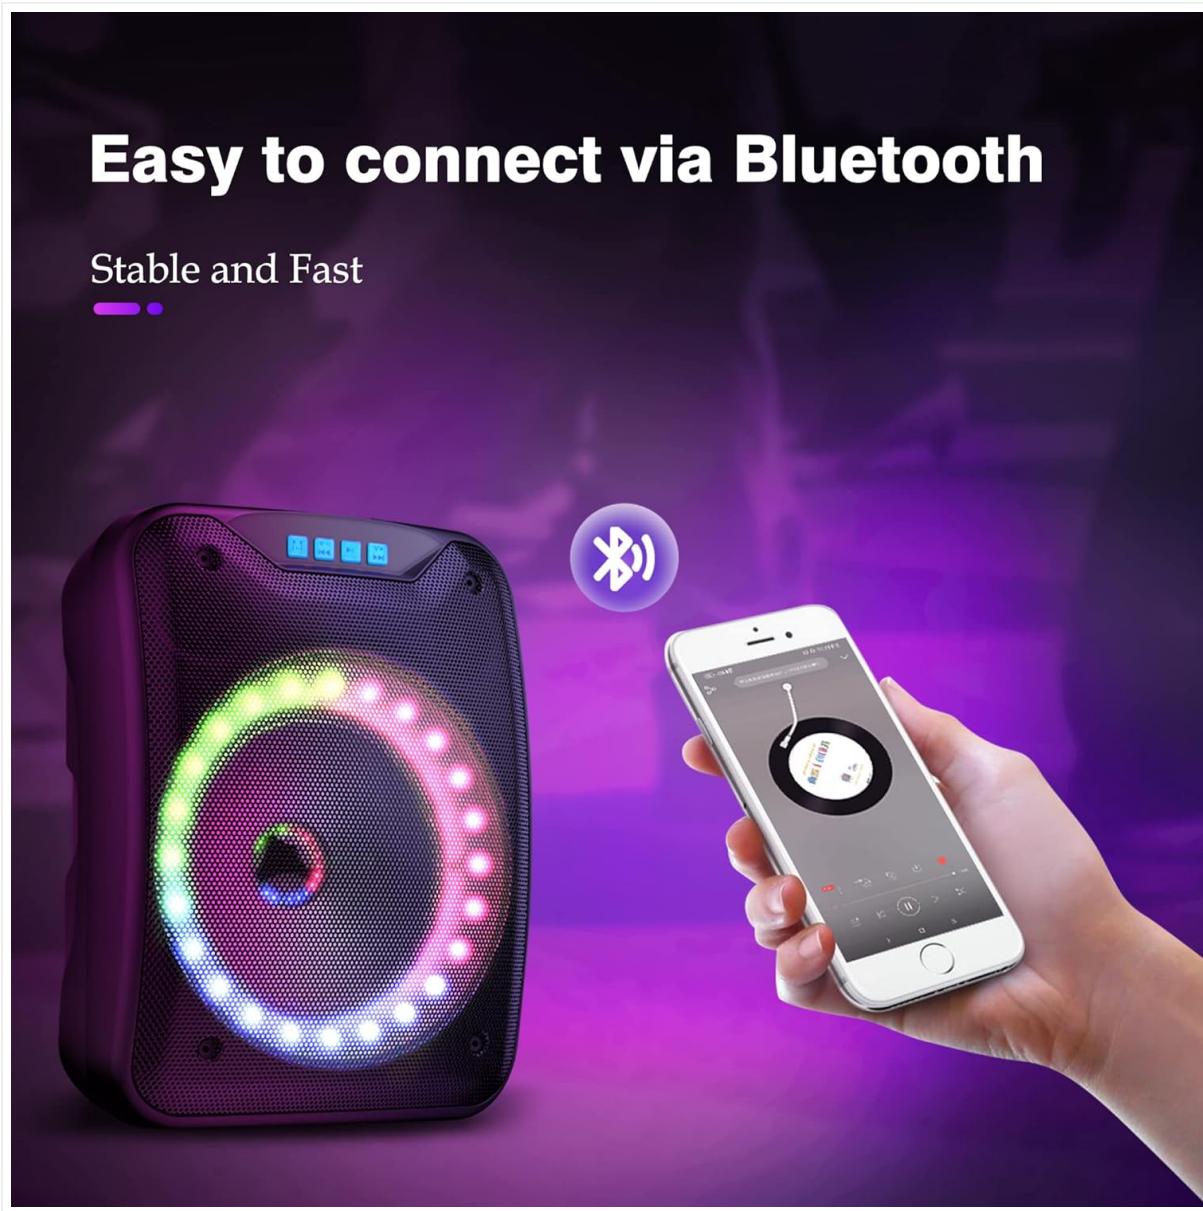


Image: The Shinco SC142 speaker connected via Bluetooth to a smartphone, illustrating the ease of wireless audio streaming.

2. AUX-in Mode

To play audio via AUX-in:

1. Connect one end of a 3.5mm auxiliary cable (not included) to the AUX-IN port on the speaker.
2. Connect the other end of the cable to the headphone jack of your audio device (e.g., DVD player, MP3 player).
3. Press the 'M' (Mode) button on the speaker until you hear the AUX-in mode prompt.
4. Play audio from your connected device.

3. USB Playback

To play audio from a USB drive:

1. Insert a USB flash drive containing MP3 audio files into the USB port on the speaker.
2. The speaker should automatically switch to USB mode and begin playing audio. If not, press the 'M' (Mode) button until USB mode is activated.

4. Microphone Input

To use a microphone:

1. Connect a wired microphone (not included) to the Microphone Jack on the speaker.
2. Adjust the microphone volume as needed. The microphone input can be used simultaneously with other audio sources.

5. Controlling Music Playback

- **Play/Pause:** Press the Play/Pause button to start or pause playback.
- **Next Track:** Press and hold the Volume Up button to skip to the next track.
- **Previous Track:** Press and hold the Volume Down button to go to the previous track.
- **Volume Adjustment:** Press the Volume Up or Volume Down buttons briefly to adjust the volume level.

6. LED Light Modes

The speaker features multiple LED light modes. To cycle through the modes or turn off the lights:

Lights show

Select the lights mode with your mood, just press buton M



Image: The Shinco SC142 speaker displaying its LED lights, with an inset showing the 'M' button used to switch light modes or turn them off.

- Press the 'M' button (Mode button) to switch between different light modes.
- Continue pressing the 'M' button to cycle through the available light patterns.
- Pressing the 'M' button a fourth time will turn off the LED lights.

MAINTENANCE

- **Cleaning:** Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use liquid cleaners or sprays directly on the speaker.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB-C cable.
No sound.	Volume is too low or muted. Incorrect mode selected. Device not properly connected.	Increase volume on both speaker and connected device. Ensure correct mode (Bluetooth, AUX, USB) is selected. Reconnect device.
Bluetooth pairing fails.	Speaker not in pairing mode. Device Bluetooth is off. Speaker too far from device. Interference.	Ensure speaker is in Bluetooth pairing mode. Turn Bluetooth on your device. Move speaker closer to device. Avoid other wireless devices.
Sound distortion.	Volume too high. Low battery.	Reduce volume. Charge the speaker.
LED lights not working.	Lights are turned off.	Press the 'M' button to cycle through light modes or turn them on.

SPECIFICATIONS

Feature	Detail
Model Name	SC142
Brand	Shinco
Speaker Type	Woofer
Connectivity Technology	Bluetooth, Auxiliary, USB
Wireless Communication	Bluetooth
Special Features	Portable, Colorful Lights, Microphone Compatible
Compatible Devices	Smartphone, Tablet
Speaker Max Output Power	40 Watts
Subwoofer Diameter	4.5 Inches
Audio Output Mode	Mono
Power Source	Corded Electric (for charging)
Product Dimensions (D x W x H)	5.12" x 6.69" x 9.06"
Item Weight	2.2 pounds (approx. 1 kg)
Material	Metal, Plastic

Feature	Detail
Batteries	1 Product Specific battery required (included)



Image: The Shinco SC142 speaker with its physical dimensions clearly indicated.

WARRANTY INFORMATION

Shinco products are manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your package for specific terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, warranty inquiries, or general support, please contact Shinco customer service. Contact details can typically be found on the product packaging or the official Shinco website. Please have your model number (SC142) and proof of purchase ready when contacting support.