

Manuals.plus /

› WANAI /

› WANAI 3.5 Cu.Ft Chest Freezer Instruction Manual BCD63-WHITE

WANAI BCD63-WHITE

WANAI 3.5 Cu.Ft Chest Freezer

MODEL: BCD63-WHITE

Introduction

This manual provides essential information for the safe and efficient operation of your WANAI 3.5 Cu.Ft Chest Freezer. Please read these instructions thoroughly before installation and use, and retain them for future reference.

Safety Information

WARNING: To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Ensure the freezer is placed upright for at least 24 hours before plugging it in to allow refrigerants to settle.
- This appliance operates on 110 Volts and consumes 70 watts. Ensure your power supply matches these requirements.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Setup

1. Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the freezer for any damage during transit.

2. Placement

Position the freezer on a flat, stable surface away from direct sunlight and heat sources. Allow adequate space around the unit for proper ventilation. A minimum of 1.5 feet (approximately 45 cm) from walls or other objects is recommended to ensure efficient air circulation and cooling.



Image: WANAI 3.5 Cu.Ft Chest Freezer with dimensions (20.7"W x 16.3"D x 29.5"H).

3. Initial Use

After placing the freezer, wait for at least 24 hours before plugging it into a power outlet. This allows the refrigerant to stabilize, preventing potential damage to the cooling system.

Operating Instructions

1. Temperature Control

The freezer features a 7-level adjustable thermostat located on the front lower right side. Rotate the dial to select your desired temperature setting:

- **Levels 1-2:** Refrigerator temperature range from 32°F (0°C) to 50°F (10°C), suitable for beverages and fruits.
- **Levels 3-7:** Freezer temperature range from -11.2°F (-24°C) to 32°F (0°C), suitable for meat, seafood, and ice cream.



Image: Diagram illustrating the 7-level temperature adjustment dial and recommended food types for each range.

2. Storage Tips

Utilize the removable storage basket for organizing smaller items or frequently accessed foods. This helps maintain order and prevents items from getting lost at the bottom of the freezer.

Make good organization of your freezer



Image: Interior view of the WANAI 3.5 Cu.Ft Chest Freezer showing an organized arrangement of frozen goods and the removable basket.

Your browser does not support the video tag.

Video: Demonstration of the WANAI 3.5 Cu.Ft Chest Freezer's interior, highlighting the removable basket and storage capacity.

Your browser does not support the video tag.

Video: A user demonstrates the interior storage and removable basket of the WANAI 3.5 Cu.Ft Chest Freezer.

Maintenance

1. Cleaning

Regularly clean the interior and exterior of the freezer with a mild detergent and warm water. Avoid abrasive cleaners or sharp objects that could damage surfaces.

2. Defrosting

When frost accumulates to a thickness of 1/4 inch (0.6 cm) or more, the freezer should be defrosted. To defrost, unplug the unit, remove all contents, and open the drain plug located at the bottom of the freezer. Place a shallow pan or towel underneath the drain to collect water. Once defrosted, clean and dry the

interior before restarting.

Troubleshooting

If your freezer is not operating correctly, check the following common issues before contacting customer service:

- **No Power:** Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker.
- **Freezer Not Cold Enough:** Verify the temperature setting is appropriate for your needs. Ensure the lid is properly sealed and not frequently opened. Avoid placing hot food directly into the freezer.
- **Excessive Frost Buildup:** This may indicate frequent lid opening, high humidity, or a faulty door seal. Ensure the lid gasket is clean and intact.
- **Unusual Noises:** Minor operating noises are normal. If you hear loud or unusual sounds, ensure the freezer is level and not touching any walls or objects.

Specifications

Feature	Specification
Brand	WANAI
Model Number	BCD63-WHITE
Capacity	3.5 Cubic Feet
Dimensions (W x D x H)	20.7 x 16.3 x 29.5 inches
Item Weight	35 pounds
Installation Type	Freestanding
Color	WHITE
Voltage	110 Volts
Wattage	70 watts
Door Hinges	Top
Door Material Type	PCM, Cyclopentane
Shelves	1 (removable basket)
Certification	Energy Certified

Warranty and Support

WANAI is committed to providing high-standard customer service. For any questions or assistance regarding your product, please contact our customer service team. We are available 24 hours a day to help resolve any after-sales issues and ensure your satisfaction.

For further details on warranty coverage, please refer to the documentation included with your purchase or visit the official WANAI website.

