

VINABTY RC-F0707E

VINABTY Replacement Remote Control for Kenwood AV Receiver Model RC-F0707E

User Instruction Manual

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your VINABTY RC-F0707E replacement remote control. This remote is designed to be compatible with various Kenwood AV Receiver models, specifically replacing the RC-F0707E remote.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.

SETUP

1. Battery Installation

The remote control requires two AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control, showing the battery compartment. Ensure correct battery polarity during installation.

2. Initial Use

This VINABTY replacement remote control is designed for immediate use with compatible Kenwood AV Receivers. No programming or code entry is typically required. Once batteries are installed, point the remote towards your Kenwood AV Receiver and begin operation.

OPERATING INSTRUCTIONS

The VINABTY RC-F0707E remote control provides comprehensive functionality for your Kenwood AV Receiver. Below is a general overview of the buttons and their functions.





Image: Front view of the remote control, highlighting the layout of various function buttons.

Button Functions Overview

Button Label	Function
Power ()	Turns the AV Receiver on or off.
P.MODE	Selects preset sound modes.
SLEEP	Activates or deactivates the sleep timer function.
DIMMER	Adjusts the brightness of the receiver's display.
RANDOM / REPEAT / A↔B / TIME DISP	Playback control functions for compatible media sources.
Number Buttons (0-9, +100, +10)	Direct input for channel selection, track numbers, or other numerical entries.
DISPLAY	Changes the information displayed on the receiver's screen.
TIMER	Sets or adjusts timer functions.
PTY / CLEAR	Program Type selection (for radio) / Clears current input.
V.F.S. / CLEAR VOICE / LISTEN MODE / MODE	Various audio processing and listening mode selections.
Navigation Cluster (▲, ▼, ◀, ▶, ENTER)	Used for menu navigation and selection.
VOLUME (+/-)	Adjusts the master volume level.
TOP MENU / JPEG LIST / MENU/P.B.C. FOLDER SEARCH	Accesses main menus or specific media browsing functions.
RETURN / MULTI CONTROL / SET	Navigates back in menus, activates multi-control, or confirms settings.
BAND / DVD/CD / D.AUDIO / AUTO/MONO	Selects input sources or audio modes.
TUNER / P.CALL / Tuning (◀◀/▶▶)	Controls tuner functions, preset calls, and manual tuning.

Button Label	Function
INPUT SELECTOR / SP SETUP / DVD SETUP / D.AUDIO REC	Selects input sources or accesses specific setup menus.
FLAT / D-BASS / TONE / OVER / MANUAL EQ	Audio equalization and tone control functions.
SOUND PRESET / AUTO ROOM EQ / ROOM EQ MODE / CHANNEL SEL	Sound customization and room equalization settings.
ON SCREEN / AUDIO / SUBTITLE / MUTE	On-screen display, audio track selection, subtitle control, and muting audio.

Note: The functionality of certain buttons may vary depending on the specific Kenwood AV Receiver model you are using. Refer to your receiver's original manual for detailed information on its features.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	<ul style="list-style-type: none">Batteries are depleted or incorrectly installed.Obstruction between remote and receiver.Remote is out of range.	<ul style="list-style-type: none">Replace batteries with new AAA batteries, ensuring correct polarity.Remove any objects blocking the line of sight between the remote and the receiver's IR sensor.Move closer to the receiver.
Some buttons do not function.	<ul style="list-style-type: none">Button is not compatible with your specific Kenwood AV Receiver model.Receiver is not in the correct mode for the button's function.	<ul style="list-style-type: none">Refer to your Kenwood AV Receiver's original manual to confirm feature compatibility.Ensure the receiver is set to the appropriate input or mode (e.g., DVD/CD for playback controls).
Remote control works intermittently.	<ul style="list-style-type: none">Low battery power.Interference from other electronic devices.	<ul style="list-style-type: none">Replace batteries.Ensure no strong light sources (like direct sunlight) or other IR devices are interfering.

SPECIFICATIONS

- **Model:** RC-F0707E
- **Brand:** VINABTY
- **Product Dimensions:** 8.3 x 2 x 0.75 inches
- **Item Weight:** 2.39 ounces
- **Batteries Required:** 2 x AAA (not included)
- **Compatible Devices:** Kenwood AV Receivers (specifically those using RC-F0707E)
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1


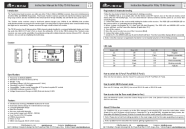

WARRANTY INFORMATION


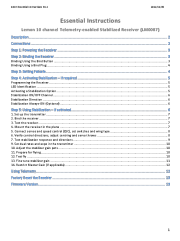

Specific warranty details for this VINABTY replacement remote control are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product packaging or contact the seller directly at the point of purchase.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding the VINABTY RC-F0707E replacement remote control that are not addressed in this manual, please contact the seller or retailer from whom you purchased the product for assistance.

Related Documents - RC-F0707E

	<p>Kenwood RC-R0509 Remote Control Replacement Guide</p> <p>Compare original Kenwood RC-R0509 remote control functions with its replacement. Detailed button mapping and compatibility information for receiver and DVD models.</p>
	<p>FrSky TD R6 Receiver: Instruction Manual and Specifications</p> <p>Comprehensive instruction manual for the FrSky TD R6 Tandem dual-band RC receiver, covering introduction, overview, specifications, features, registration, binding, LED states, mode switching, OTA updates, failsafe, and FCC compliance. Essential guide for RC hobbyists using FrSky equipment.</p>
	<p>Radiolink RC8X FAQ and Features</p> <p>Frequently asked questions and detailed information about the Radiolink RC8X remote control system, covering battery compatibility, receiver options, firmware updates, multi-receiver control, and more.</p>

	<p>Kenwood RC-MA7 Remote Control Button Comparison and Replacement Guide</p> <p>A detailed comparison of original Kenwood RC-MA7 remote control buttons and their functions versus a replacement remote, providing a clear guide for compatibility and operation.</p>
	<p>Lemon LM0087 10-Channel Stabilized Receiver: Essential Instructions</p> <p>User guide for the Lemon LM0087 10-channel telemetry-enabled stabilized RC receiver. Covers setup, binding, failsafe, stabilization activation, gain adjustment, and telemetry for RC aircraft.</p>
	<p>FrSky TD R6 Receiver: Instruction Manual, Features, and Specifications</p> <p>Comprehensive guide to the FrSky TD R6 dual-band RC receiver, covering its features, specifications, registration, binding, failsafe, and FCC compliance. Learn about its 2.4GHz and 900MHz operation, long-range capabilities, and telemetry.</p>