

[Manuals.plus](#) /

› [EASWEL](#) /

› EASWEL HKT72C Foot Controller for Babylock Sewing Machines BL2200, BL2400, BL2600, BL6000, BL6150 User Manual

EASWEL HKT72C

EASWEL HKT72C Foot Controller User Manual

For Babylock Sewing Machine Models: BL2200, BL2400, BL2600, BL6000, BL6150

1. INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your EASWEL HKT72C Foot Controller. This replacement foot controller is designed to be compatible with various Babylock sewing machine models, including BL2200, BL2400, BL2600, BL6000, and BL6150. It is engineered to operate consistently without overheating, ensuring reliable performance for your sewing tasks.

2. SAFETY INFORMATION

- Always ensure your sewing machine is unplugged from the power outlet before connecting or disconnecting the foot controller.
- Do not use the foot controller if the power cord or plug is damaged.
- Keep the foot controller away from water or excessive moisture.
- Do not attempt to open or repair the foot controller yourself. Refer to qualified service personnel if issues arise.
- Ensure the foot controller is placed on a stable, flat surface during use to prevent accidental movement.

3. PRODUCT OVERVIEW

The EASWEL HKT72C Foot Controller is a replacement pedal designed to control the speed of your compatible Babylock sewing machine. It includes an integrated power cord for direct connection.



Figure 1: Overall view of the EASWEL HKT72C Foot Controller, showing the pedal, coiled power cord, and the two-prong US plug and machine connector.



Figure 2: Side view illustrating the foot controller's connection points, including the standard US two-prong power plug and the specific connector for the sewing machine.



Figure 3: Top-down perspective of the foot controller, highlighting the textured pedal surface designed for foot grip and control.

4. SPECIFICATIONS

Feature	Detail
Model	HKT72C
Input Voltage	AC 120V
Current	0.5A
Dimensions (L x W x H)	13.5 x 9 x 6 cm (approximately 5.3 x 3.5 x 2.4 inches)
Color	Black
Material	ABS (Acrylonitrile Butadiene Styrene)
Plug Type	US Plug (as depicted)
Compatibility	Babylock BL2200, BL2400, BL2600, BL6000, BL6150

5. SETUP INSTRUCTIONS

1. **Unpack the Foot Controller:** Carefully remove the foot controller and its integrated power cord from the packaging.
2. **Ensure Machine is Off:** Verify that your Babylock sewing machine is turned off and unplugged from the wall outlet.
3. **Locate the Foot Controller Port:** Identify the foot controller input port on your sewing machine. This is typically located near the main power input.
4. **Connect the Foot Controller:** Insert the machine-specific connector end of the foot controller's cord firmly into the corresponding port on your sewing machine. Ensure a secure connection.
5. **Plug into Power Outlet:** Once the foot controller is securely connected to the sewing machine, plug the two-prong power cord into a standard AC 120V wall outlet.
6. **Power On Machine:** Turn on your sewing machine's main power switch.

Your foot controller is now ready for use.

6. OPERATING INSTRUCTIONS

The foot controller allows you to regulate the sewing speed of your machine. Pressing the pedal down increases the speed, while releasing it slows down or stops the machine.

- **Starting to Sew:** With the sewing machine powered on and your fabric positioned, gently press down on the foot controller pedal. The machine will begin to sew.
- **Controlling Speed:** Apply more pressure to the pedal to increase the sewing speed. Reduce pressure to decrease the speed.
- **Stopping:** Fully release the pedal to stop the sewing machine.
- **Continuous Operation:** This foot controller is designed for continuous use without overheating, providing consistent performance during extended sewing sessions.

7. MAINTENANCE

Proper care and maintenance will extend the life of your foot controller.

- **Cleaning:** Wipe the exterior of the foot controller with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the unit. Do not use harsh chemicals or abrasive cleaners.
- **Cord Care:** Regularly inspect the power cord and machine connector for any signs of damage, fraying, or exposed wires. If damage is found, discontinue use immediately and replace the unit.
- **Storage:** When not in use, store the foot controller in a clean, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cord to prevent damage.

8. TROUBLESHOOTING

If you encounter issues with your foot controller, refer to the following common troubleshooting steps:

- **Machine Not Responding:**
 - Ensure the sewing machine is properly plugged into a working wall outlet and turned on.
 - Verify that the foot controller's connector is securely plugged into the sewing machine's port.
 - Check the power cord for any visible damage.
- **Intermittent Operation:**
 - Ensure all connections are tight and secure.
 - Test the wall outlet with another appliance to confirm it is supplying power.

- **Machine Runs Too Fast/Slow (without pedal input):**

- This may indicate an issue with the sewing machine itself or a faulty foot controller. If possible, test with another compatible foot controller to isolate the problem.

If these steps do not resolve the issue, please contact customer support.

9. WARRANTY AND SUPPORT

Your EASWEL HKT72C Foot Controller comes with the following guarantees:

- **30 Days Money Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **180 Days Free Exchange:** In case of a defect or malfunction, the product is eligible for a free exchange within 180 days from the date of purchase.

For any questions, concerns, or support needs, please contact the seller directly. They are committed to resolving any issues to your satisfaction.

© 2023 EASWEL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0953D75DW>

More documents and user manuals: <https://manuals.plus/>