

[Manuals.plus](#) /

› [LEBENLANG](#) /

› LEBENLANG 1500W Garment Steamer with 300ml Tank and LCD Screen, Model LBD528

LEBENLANG LBD528

LEBENLANG 1500W Garment Steamer Instruction Manual

Model: LBD528

1. INTRODUCTION

Thank you for choosing the LEBENLANG 1500W Garment Steamer. This appliance is designed for efficient and gentle wrinkle removal from various fabrics. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

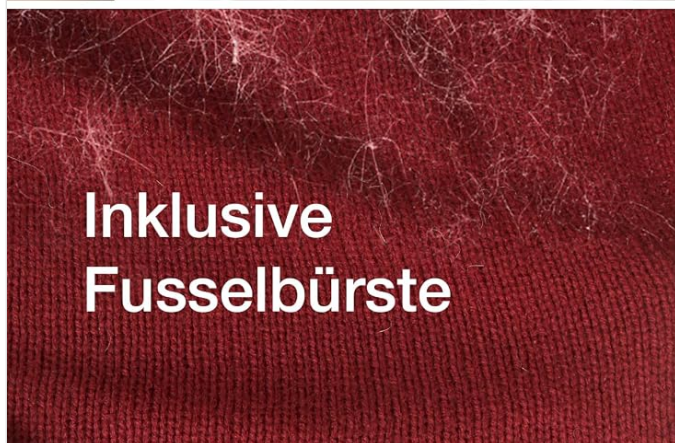


Image 1.1: The LEBENLANG Garment Steamer in use, demonstrating its handheld design and steaming capability on a shirt sleeve. The image also highlights included accessories like an ironing glove and lint brush.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before use.
- Do not immerse the steamer, power cord, or plug in water or other liquids.
- Always unplug the appliance from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any way.
- Keep the steam nozzle away from your body, other people, and pets during operation. Steam is hot and can cause burns.

- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Do not use the steamer on clothes while wearing them.
- Ensure the water tank is securely attached before operating.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- LEBENLANG 1500W Garment Steamer (Model LBD528)
- Water Tank (300ml capacity)
- Fabric Brush Attachment
- Lint Brush Attachment
- Ironing Glove
- Instruction Manual



Image 3.1: Overview of the LEBENLANG Garment Steamer and its comprehensive accessories, including the water tank, steam button, and attachments.

4. PRODUCT FEATURES

The LEBENLANG Garment Steamer is equipped with features designed for convenience and effectiveness:

- **Powerful 1500W Heating Element:** Ensures rapid heat-up and strong steam output.
- **300ml Water Tank:** Provides sufficient capacity for extended steaming sessions.
- **LCD Screen:** Displays operational status and selected steam mode.
- **Quick Heat-up Time:** Ready to use in approximately 30 seconds.
- **Two Steam Modes (ECO & POWER):** Allows selection based on fabric type and wrinkle severity.
- **Leak-Proof Design:** Enables both vertical and horizontal steaming without water leakage.
- **Durable Steel Soleplate:** Provides smooth gliding over fabrics.

- **Versatile Attachments:** Includes a fabric brush for thicker materials and a lint brush for delicate fabrics and removing lint.



Image 4.1: The steamer's control panel, illustrating the ECO and POWER steam mode options for different fabric types.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Detach the water tank from the main unit. Open the rubber stopper and fill the tank with distilled or demineralized water up to the MAX line (300ml). Close the stopper securely.
3. **Attach Water Tank:** Reattach the filled water tank to the main unit, ensuring it clicks firmly into place.
4. **Attach Accessory (Optional):** If desired, attach the fabric brush or lint brush to the steam nozzle.
5. **Plug In:** Insert the power plug into a suitable electrical outlet (220V).

6. OPERATING INSTRUCTIONS

1. **Power On:** Press the power button on the handle. The LCD screen will illuminate, and the steamer will begin to heat up. The indicator light will flash during heating.
2. **Wait for Heat-up:** The steamer will be ready for use in approximately 30 seconds when the indicator light stops flashing and remains solid.
3. **Select Steam Mode:** Press the steam mode button to cycle between ECO mode (for delicate fabrics like T-shirts, shirts, suits) and POWER mode (for thicker fabrics like dresses, curtains, sofas). The selected mode will be indicated on the LCD screen.
4. **Begin Steaming:** Hold the steamer upright for vertical steaming or horizontally for flat surfaces. Press and hold the steam trigger to release steam. For continuous steam, press the steam trigger and then slide the lock button forward.
5. **Steaming Technique:** Hold the fabric taut with one hand (using the included ironing glove for protection) and move the steamer slowly over the wrinkled area. For best results, steam from top to bottom.
6. **Refilling Water:** If the water tank runs empty, the steamer will stop producing steam. Unplug the unit, allow it to cool slightly, and refill the water tank as described in the Setup section.
7. **Power Off:** After use, press the power button to turn off the steamer. Unplug the appliance from the outlet.



Image 6.1: The steamer's ability to be used vertically for hanging clothes and horizontally for items on a flat surface, highlighting its leak-proof design.

7. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your garment steamer.

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Remove the water tank and empty any remaining water.
- **Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Clean Nozzle:** If mineral deposits accumulate around the steam nozzle, gently wipe them away with a cloth dampened with white vinegar. Rinse with a damp cloth.
- **Descaling (Monthly):** To prevent mineral buildup, descale the steamer monthly or more frequently if you use tap water. Fill the water tank with a mixture of 50% white vinegar and 50% distilled water. Plug in the steamer and let it steam until half of the solution is used. Unplug, let it cool, empty the tank, and rinse thoroughly with distilled water.

Repeat with clean distilled water to flush out any vinegar residue.

- **Storage:** Store the steamer in a cool, dry place, away from direct sunlight and moisture. Ensure the water tank is empty before storage.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or weak steam	Water tank empty; Steamer not heated up; Mineral buildup; Steam nozzle blocked.	Refill water tank; Wait for indicator light to be solid; Descale the steamer; Clean steam nozzle.
Water leakage	Water tank not properly attached; Overfilled water tank; Steamer not fully heated.	Ensure water tank is securely attached; Do not overfill past MAX line; Wait for steamer to fully heat up before use.
Steamer not turning on	Not plugged in; Power outlet malfunction.	Check power cord connection; Try a different power outlet.

9. SPECIFICATIONS

Specification	Detail
Model Number	LBD528
Power	1500 Watts
Voltage	220 Volts
Water Tank Capacity	300 Millilitres
Heat-up Time	Approximately 30 Seconds
Product Dimensions (L x W x H)	16L x 12l x 25H Centimeters
Item Weight	1 Kilogram
International Article Code	04251609501733

10. WARRANTY AND SUPPORT

LEBENLANG products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official LEBENLANG website. For technical support,

spare parts, or service inquiries, please contact LEBENLANG customer service through the contact information provided on our website or in your product documentation.

Website: www.lebenlang.com (Note: This is a placeholder URL. Please refer to your product's official documentation for the correct support website.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question