

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VEYFIY](#) /

› [VEYFIY Floor Lamp VE-HFL002 User Manual](#)

VEYFIY VE-HFL002

VEYFIY Floor Lamp VE-HFL002 User Manual

Model: VE-HFL002 | Brand: VEYFIY

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your VEYFIY Floor Lamp VE-HFL002. This modern LED floor lamp is designed to offer versatile lighting solutions with adjustable brightness, multiple color temperatures, and a flexible swing arm, suitable for various environments such as living rooms, bedrooms, and offices.



Image: The VEYFIY Floor Lamp VE-HFL002, showcasing its sleek black design and the range of five available color temperatures.

Key features include:

- **540° Swing Arm:** The lamp head rotates 180°, and the swing arm rotates 360°, allowing precise light positioning. The arm extends up to 59 inches.
- **Adjustable Brightness & Color:** Stepless brightness adjustment (5%-100%) and 5 color temperatures (2700K-6500K) for customized lighting.
- **Memory Function:** The lamp remembers your last brightness and color temperature settings.
- **Eye-Caring Light:** Designed to be flicker-free and glare-free, providing comfortable illumination for reading, working, and crafts. Features low heat LED technology with an estimated lifespan of 50,000 hours.

PACKAGE CONTENTS

Please ensure all components are present before proceeding with assembly:

- Lamp Head with LED Strip

- Adjustable Swing Arm Sections
- Lamp Pole Sections
- Weighted Base
- Power Adapter
- Remote Control
- User Manual (this document)

SETUP AND ASSEMBLY

The VEYFIY Floor Lamp is designed for quick and easy assembly without the need for additional tools. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Base:** Place the weighted base on a flat, stable surface.
3. **Connect Pole Sections:** Twist the lamp pole sections together clockwise until secure.
4. **Attach Lamp to Base:** Insert the assembled lamp pole into the weighted base and twist to secure.
5. **Attach Swing Arm and Lamp Head:** Connect the adjustable swing arm sections and then attach the lamp head. Ensure all connections are firm.
6. **Connect Power:** Plug the power adapter into the lamp's power port, then plug the adapter into a standard electrical outlet.



Image: A detailed diagram illustrating the lamp's dimensions, weighted base, touch control, adjustable swing arm, and metal construction, highlighting the ease of assembly.

Your browser does not support the video tag.

Video: A demonstration of the VEYFIY Floor Lamp assembly process and initial setup, including connecting the power and basic operation.

OPERATING INSTRUCTIONS

Your VEYFIY Floor Lamp offers multiple ways to control its lighting features:

Touch Control

The lamp features a touch-sensitive control panel located on the lamp head.

- **Power On/Off:** Lightly touch the power icon to turn the lamp on or off.
- **Adjust Color Temperature:** Short press the color temperature icon to cycle through the 5 available color temperatures (2700K-6500K).
- **Adjust Brightness:** Long press the brightness icon to steplessly adjust the light intensity from 5% to 100%.

Release when the desired brightness is reached.



Image: Close-up view of the touch control panel on the lamp head, showing the power and adjustment icons.



Image: Visual guide demonstrating how to use the touch controls for selecting 5 color temperatures (2700K to 6000K) with short presses

and steplessly adjusting brightness (5% to 100%) with long presses.

Remote Control

For added convenience, use the included remote control to operate the lamp from a distance.

- **Power On/Off:** Press the power button.
- **Adjust Brightness:** Use the brightness up/down buttons to increase or decrease light intensity.
- **Adjust Color Temperature:** Use the color temperature buttons to change between warm, neutral, and cool light settings.
- **Memory Function:** The lamp will recall your last settings when turned back on.

Adjusting the Swing Arm

The lamp's flexible design allows for extensive adjustment:

- The lamp head can be rotated within 180°.
- The swing arm can be rotated within 360°.
- The arm can be adjusted to various heights, extending up to 59 inches.



Image: A visual representation of the lamp's adjustable swing arm, showing its 120-degree and 360-degree rotation capabilities for optimal light positioning.



Image: Close-up of the adjustable arm joints, demonstrating the lamp's flexible design.

Stepless Brightness Dimming



Image: Examples of the VEYFIY Floor Lamp used in various settings, showcasing its adaptability and flexible arm for different lighting needs.

EYE-CARING FEATURES

The VEYFIY Floor Lamp is engineered with advanced LED technology to provide a comfortable and healthy lighting experience:

- **No Flicker:** Ensures stable light output, reducing eye strain.
- **No Glare:** Designed to minimize harsh reflections and discomfort.
- **Anti-Blue Light:** Reduces harmful blue light emissions for better eye protection.
- **High CRI (Color Rendering Index):** With a CRI of >90, colors appear more natural and vibrant under this light.

EYE-FRIENDLY LED



Image: A user engaged in an activity under the lamp, with visual cues emphasizing the lamp's eye-caring attributes, including anti-blue light and high CRI.



Image: A visual comparison demonstrating the superior color rendering (CRI >90) of the VEYFIY lamp compared to other lamps with lower CRI values.

Maintenance

To ensure the longevity and optimal performance of your VEYFIY Floor Lamp, follow these simple maintenance guidelines:

- Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the lamp. Avoid abrasive cleaners, solvents, or polishing agents as they may damage the finish.
- Bulb Replacement:** The LED light source is integrated and not user-replaceable. The LEDs are designed for a long lifespan (approximately 50,000 hours).
- Storage:** If storing the lamp for an extended period, disassemble it and store it in its original packaging in a dry, cool place.

Troubleshooting

If you encounter any issues with your VEYFIY Floor Lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	<ul style="list-style-type: none">Power cord not properly connected.No power from the outlet.Remote control battery is dead.	<ul style="list-style-type: none">Ensure the power adapter is securely plugged into both the lamp and the wall outlet.Test the outlet with another device.Replace the remote control battery.
Brightness or color temperature cannot be adjusted.	<ul style="list-style-type: none">Remote control not paired or battery low.Interference with touch controls.	<ul style="list-style-type: none">Ensure remote control battery is fresh and it is pointed towards the lamp.Ensure your finger is clean and dry when using touch controls.
Lamp flickers.	<ul style="list-style-type: none">Unstable power supply.Loose connection.	<ul style="list-style-type: none">Try plugging the lamp into a different outlet.Check all physical connections for tightness.

If the problem persists after trying these solutions, please contact VEYFIY customer support.

Specifications

Feature	Detail
Brand	VEYFIY
Model Number	VE-HFL002
Product Dimensions	22.02 x 22.02 x 149.86 cm (8.67D x 8.67W x 59H inches)
Item Weight	4.29 kg

Feature	Detail
Light Source Type	LED (Integrated)
Wattage	12W
Color Temperatures	5 settings (2700K-6500K)
Brightness Adjustment	Stepless (5%-100%)
Control Method	Touch Sensor, Remote Control
Material	Metal
Finish Type	Black
Special Features	540° Swing Arm, Memory Function, Eye-Caring (No Flicker, No Glare, Anti-Blue Light, CRI>90)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact VEYFIY customer service directly. Keep your purchase receipt for warranty claims.

Contact Information: Please visit the official VEYFIY website or refer to the contact details provided with your product for assistance.