

[Manuals.plus](#) /

› [Ninja](#) /

› Ninja OL701 Foodi 14-in-1 SMART XL 8 Qt. Pressure Cooker Steam Fryer User Manual

Ninja OL701

Ninja Foodi Smart XL Pressure Cooker Steam Fryer User Manual

Model: OL701 | Brand: Ninja

INTRODUCTION

The Ninja Foodi Smart XL Pressure Cooker Steam Fryer with SmartLid & Foodi Smart Thermometer is a versatile kitchen appliance designed to simplify your cooking experience. It combines pressure cooking, air frying, and SteamCrisping functionalities under one innovative SmartLid. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and safety.

COMPONENTS

Your Ninja Foodi Smart XL Pressure Cooker Steam Fryer includes the following components:

- Ninja Foodi SMART XL Pressure Cooker Steam Fryer with SmartLid & Smart Thermometer
- 8-quart Cooking Pot
- 5-quart Cook & Crisp Basket
- Deluxe Reversible Rack
- 45+ Recipe Chef-Inspired Cookbook



Figure 1: The Ninja Foodi Smart XL Pressure Cooker Steam Fryer with its SmartLid and Smart Thermometer.



Easy cleanup

8-qt cooking pot and 5-qt Cook & Crisp™ Basket are ceramic-coated, nonstick, PTFE/PFOA free, and dishwasher safe.

Figure 2: Included accessories: Deluxe Reversible Rack, 8-quart Cooking Pot, and 5-quart Cook & Crisp Basket.

SETUP

1. **Unboxing:** Carefully remove all components from the packaging. Remove any protective film or stickers.
2. **Initial Cleaning:** Before first use, wash the cooking pot, Cook & Crisp Basket, and Deluxe Reversible Rack in warm, soapy water. Rinse thoroughly and dry completely. The main unit should be wiped clean with a damp cloth.
3. **Placement:** Place the main unit on a clean, dry, level surface away from the edge of the countertop. Ensure there is adequate space around the unit for proper ventilation.

OPERATING INSTRUCTIONS

The Ninja Foodi Smart XL offers 14 versatile cooking functions, accessible through its intuitive SmartLid Slider and control panel.

SmartLid Slider

The SmartLid Slider allows you to seamlessly switch between three cooking modes: Pressure Cook, SteamCrisp, and Air Fry/Stovetop. Simply slide the lever to the desired mode to unlock its functions.



SmartLid Slider™

Slide to unlock 3 cooking modes, all under one SmartLid.™

Figure 3: The SmartLid Slider allows you to select between Pressure, SteamCrisp, and Air Fry/Stovetop modes.

Cooking Functions

- **Pressure Cook:** For tenderizing large cuts of meat quickly.
- **Steam & Crisp:** Steams and crisps simultaneously for juicy, crispy results without drying out.
- **Steam & Bake:** Ideal for moist baked goods.
- **Air Fry:** Achieve crispy results with up to 75% less fat than traditional frying.
- **Broil:** For quick browning and melting.
- **Bake/Roast:** For baking and roasting various foods.
- **Dehydrate:** For making dried fruits, vegetables, and jerky.
- **Sear/Sauté:** For browning meats and sautéing ingredients.
- **Steam:** For gentle cooking of vegetables and seafood.
- **Sous Vide:** For precise temperature cooking.
- **Slow Cook:** For tender, flavorful meals cooked over a longer period.
- **Yogurt:** For making homemade yogurt.
- **Keep Warm:** Maintains food at a serving temperature.

- **Proof:** Creates an ideal environment for dough to rise.

Smart Cook System & Foodi Smart Thermometer

The integrated Foodi Smart Thermometer eliminates guesswork by continuously monitoring food's temperature and automatically shutting off the pressure cooker when your food reaches the perfect doneness. Choose from 4 smart protein settings and 9 customizable doneness levels.



Foodi™ Smart Thermometer

Eliminate cooking guesswork
and achieve perfect doneness every time.

Figure 4: The Foodi Smart Thermometer ensures precise cooking by monitoring internal food temperature.

Demonstration Videos

Video 1: A brief overview of the Ninja Foodi Pressure Cooker Steam Fryer, demonstrating its lid and two-layer capacity.

MAINTENANCE AND CARE

Proper cleaning and maintenance will extend the life of your Ninja Foodi Smart XL.

- **Cleaning the Cooking Pot and Accessories:** The 8-quart cooking pot and 5-quart Cook & Crisp Basket are ceramic-coated, nonstick, PTFE/PFOA free, and dishwasher safe. For best results, hand wash with warm, soapy water.
- **Cleaning the Main Unit:** Wipe the main unit with a clean, damp cloth. Do not immerse the main unit in water or any

other liquid.

- **Lid Cleaning:** The underside of the SmartLid, including the heating element, should be wiped clean with a damp cloth after each use. Ensure all food residue is removed.



Figure 5: The cooking pot and Cook & Crisp Basket are dishwasher safe for easy cleanup.

TROUBLESHOOTING

If you encounter issues with your Ninja Foodi Smart XL, try the following solutions:

- **Unit Not Turning On:** Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functioning correctly.
- **Lid Not Closing/Locking:** Make sure the SmartLid Slider is in the correct position for the desired function. Check for any obstructions preventing the lid from closing properly.
- **Food Sticking to Pot:** Ensure the cooking pot is properly greased or oiled before adding ingredients, especially for baking.
- **Unit Shuts Off Unexpectedly:** This can occur if the unit detects insufficient liquid during pressure cooking or slow cooking. Ensure adequate liquid is added according to recipe instructions.
- **Steam Leaking from Lid:** Check that the silicone gasket is properly seated around the lid and is free from tears or damage. Ensure the pressure release valve is in the sealed position for pressure cooking.

SPECIFICATIONS

Feature	Detail
Brand	Ninja
Model Number	OL701
Capacity	8 Quarts
Material	Stainless steel
Color	Stainless Steel/Black
Product Dimensions	14.21"D x 15.39"W x 14.25"H
Item Weight	25.6 Pounds
Wattage	1760 watts
Control Method	Touch, Push Button
Is Dishwasher Safe	Yes (Pot & Basket)

WARRANTY AND SUPPORT

For detailed warranty information and further support, please refer to the official user manual provided with your product. You can also find a digital version of the user manual at: [Ninja Foodi User Manual \(PDF\)](#). For customer service inquiries, please visit the official Ninja website or contact their support line as listed in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question