



Manuals.plus /

› EASWEL /

› EASWEL USB Power Adapter Charger Cable Cord for Volcano Bazooka HiFi Bluetooth Speaker User Manual

EASWEL B0956TF417

EASWEL USB Power Adapter Charger Cable Cord User Manual

For Volcano Bazooka HiFi Bluetooth Speaker and Compatible Devices

INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your EASWEL USB Power Adapter Charger Cable. This cable is designed to provide reliable power and charging for compatible devices, including the Volcano Bazooka HiFi Bluetooth Speaker.

SETUP

To begin using your EASWEL USB Power Adapter Charger Cable, follow these steps:

1. **Identify Connectors:** Locate the standard USB-A connector (the rectangular end) and the Micro-USB connector (the smaller, trapezoidal end) on the cable.
2. **Connect to Power Source:** Insert the USB-A connector into a compatible USB power adapter (not included), a computer's USB port, or any other certified USB power source. Ensure the connection is firm.
3. **Connect to Device:** Insert the Micro-USB connector into the charging port of your Volcano Bazooka HiFi Bluetooth Speaker or other compatible device. The port is typically located on the side or back of the device.
4. **Verify Connection:** Once connected, your device should indicate that it is receiving power or charging. Refer to your device's specific user manual for charging indicators.



Image: The EASWEL USB charging cable, featuring a standard USB-A connector on one end and a Micro-USB connector on the other, with a ferrite bead near the USB-A end for signal integrity. The cable is coiled and presented against a white background.

OPERATING INSTRUCTIONS

The EASWEL USB Power Adapter Charger Cable facilitates the transfer of power from a USB source to your compatible electronic device. Its primary function is to charge devices or provide continuous power during operation.

To charge your device:

1. Ensure the cable is correctly connected to both a power source and your device as described in the 'Setup' section.
2. The device's charging indicator (e.g., an LED light, screen icon) should activate, confirming that charging is in progress.
3. Charging times may vary depending on the device's battery capacity and the output of the USB power source.
4. Once charging is complete, disconnect the cable from your device and the power source.



Image: A top-down view of the EASWEL USB charging cable, coiled neatly. It displays the USB-A connector and the Micro-USB connector, highlighting the cable's length and design.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your EASWEL USB Power Adapter Charger Cable.

- **Cleaning:** Gently wipe the cable and connectors with a dry, soft cloth. Avoid using liquid cleaners or abrasive materials, which can damage the cable.
- **Storage:** When not in use, coil the cable loosely. Avoid sharp bends or kinks, especially near the connectors, as this can damage internal wires. Store the cable in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Always grasp the connector ends when plugging or unplugging the cable. Do not pull on the cable itself, as this can strain the internal connections and lead to damage.
- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage to the connectors. If damage is observed, discontinue use immediately to prevent potential hazards.

TROUBLESHOOTING

If you encounter issues while using your EASWEL USB Power Adapter Charger Cable, consider the

following troubleshooting steps:

1. Device Not Charging:

- Ensure both ends of the cable are securely connected to the power source and the device.
- Try a different USB power source (e.g., another wall adapter, a different USB port on a computer) to rule out a faulty power source.
- Test the cable with another compatible device, if available, to determine if the issue is with the cable or the original device.
- Inspect the charging port on your device for any debris or damage that might prevent a proper connection.

2. Slow Charging:

- Verify that your USB power source provides sufficient output (amperage) for your device. Some devices require higher current for optimal charging speeds.
- Avoid using the device extensively while it is charging, as this can slow down the charging process.

If problems persist after attempting these steps, the cable may be damaged, or there may be an issue with your device or power source. Contact the manufacturer of your device or power source for further assistance.

SPECIFICATIONS

The following specifications apply to the EASWEL USB Power Adapter Charger Cable:

- **Brand:** EASWEL
- **Connector Type:** USB-A to Micro-USB
- **Cable Type:** USB
- **Compatible Devices:** PC, Speaker (specifically Volcano Bazooka HiFi Bluetooth Speaker and other devices with a Micro-USB charging port)
- **Recommended Uses:** Charging, Connecting Electronic Devices

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your EASWEL USB Power Adapter Charger Cable, please refer to the documentation provided with your purchase or contact EASWEL customer service directly. Keep your proof of purchase for warranty claims.