

[Manuals.plus](#) /

› [Konex audio](#) /

› KONEX 40W Vintage Bluetooth Speaker User Manual

Konex audio KONEX 40W Leather Portable Wireless Speaker

KONEX 40W Vintage Bluetooth Speaker User Manual

Model: KONEX 40W Leather Portable Wireless Speaker

1. INTRODUCTION

Thank you for choosing the KONEX 40W Vintage Bluetooth Speaker. This portable wireless speaker combines classic aesthetics with modern audio technology, delivering powerful sound and versatile connectivity. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.



The KONEX 40W Vintage Bluetooth Speaker, featuring a classic design and portable leather handle.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Retro Styled Design:** Blends modern technology with classic aesthetics, featuring a rotary knob and leather texture.
- **Powerful Audio:** 50W of pure audio power with enhanced bass from high-quality tweeters and woofers.
- **Adjustable Controls:** Retro knobs for precise control over volume, bass, and treble.
- **Robust Connectivity:** Bluetooth 4.2 for stable connections up to 33 ft, plus a 3.5mm AUX input and USB port.
- **Extended Playtime:** Built-in 4400mAh rechargeable battery provides approximately 20 hours of music playback on a single charge.

50W high-performance drivers delivers a crystal-clear stereo sound experience.



SUPERIOR SOUND QUALITY

Illustration of the speaker's internal components, highlighting the 4-inch woofer and 2.75-inch driver for superior sound quality.

2.2 What's in the Box

- KONEX 40W Vintage Bluetooth Speaker
- Rotary knob (pre-installed)
- Power cable

2.3 Controls and Ports

Familiarize yourself with the speaker's controls and connection ports:

- **Power Switch:** Toggle to turn the speaker On or Off.
- **Volume Knob:** Adjusts the overall sound output level.
- **Bass Knob:** Controls the low-frequency audio output.
- **Treble Knob:** Controls the high-frequency audio output.
- **Bluetooth (BT) / AUX / USB Indicator:** Shows the current input mode and battery level.
- **Pair Button:** Initiates Bluetooth pairing mode.

- **Playback Control Buttons:** Play/Pause, Skip Forward, Skip Backward.
- **AUX Input:** 3.5mm jack for wired audio connection.
- **USB Port:** For connecting USB devices.
- **AC Input:** Power port for charging and continuous operation.

It uses Bluetooth 4.2 and boasts
10 meters of distance of Bluetooth
for seamless connectivity



Close-up view of the speaker's top panel, displaying the power switch, volume, bass, and treble knobs, along with Bluetooth pairing and playback controls.

It's the perfect addition to any living environment. Timeless modern design can match perfectly with any decor theme.

Konex

audio



The rear panel of the speaker, featuring the AUX input, USB port, and AC power input for versatile connectivity and charging.

3. SETUP

3.1 Charging the Speaker

1. Connect the provided power cable to the AC Input port on the back of the speaker.
2. Plug the other end of the power cable into a standard electrical outlet (100-240V AC, 50/60Hz).
3. The battery indicator lights on the control panel will illuminate to show charging status. All lights will be solid when fully charged.
4. A full charge provides approximately 20 hours of playback time.



The speaker boasts a 4400mAh battery, providing over 20 hours of continuous music playback.

3.2 Powering On/Off

To power on the speaker, toggle the **POWER** switch to the 'ON' position. To power off, toggle the switch to the 'OFF' position.

3.3 Bluetooth Pairing

1. Ensure the speaker is powered on. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "K-two" or "Konex" from the list of devices.
4. Once connected, the Bluetooth indicator light on the speaker will become solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range.

It uses Bluetooth 4.2 and boasts
10 meters of distance of Bluetooth
for seamless connectivity



FAST AND ROBUST CONNECTION

The speaker utilizes Bluetooth 4.2 for fast and robust connections, offering a seamless pairing experience with your devices.

3.4 AUX Input Connection

For wired audio playback, connect a 3.5mm audio cable (not included) from your audio source to the **AUX Input** port on the back of the speaker. The speaker will automatically switch to AUX mode.

3.5 USB Input Connection

Insert a USB drive into the **USB Port** on the back of the speaker to play audio files directly from the drive. The speaker will automatically switch to USB mode.

4. OPERATING INSTRUCTIONS

4.1 Volume Control

Rotate the **VOLUME** knob clockwise to increase the volume and counter-clockwise to decrease it. You can also adjust the volume from your connected device.

4.2 Bass and Treble Adjustment

Use the **BASS** and **TREBLE** knobs to fine-tune the audio output to your preference. Rotate clockwise to increase and counter-clockwise to decrease the respective frequencies.



The unique Treble and Bass Adjust function allows you to customize the sound to achieve the best audio effect for different music genres.

4.3 Playback Controls

- **Play/Pause:** Press the Play/Pause button to start or pause playback.
- **Skip Forward:** Press the Skip Forward button to go to the next track.
- **Skip Backward:** Press the Skip Backward button to go to the previous track.

4.4 Portability

The integrated leather handle allows for easy transport of the speaker. Its robust design makes it suitable for both indoor and outdoor use.

Your browser does not support the video tag.

Official product video demonstrating the KONEX Vintage Bluetooth Speaker's features, including its controls, portability, and sound quality.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power switch off	Charge the speaker; Ensure power switch is in 'ON' position
No sound	Volume too low; Incorrect input mode; Device not connected	Increase volume; Select correct input (BT/AUX/USB); Repair Bluetooth or check cable connection
Bluetooth pairing fails	Speaker not in pairing mode; Device too far; Interference	Press 'PAIR' button; Move device closer (within 33 ft); Turn off other Bluetooth devices
Sound distortion	Volume too high; Bass/Treble set too high	Lower volume; Adjust Bass/Treble knobs

7. SPECIFICATIONS

Feature	Detail
Model Name	KONEX 40W Leather Portable Wireless Speaker
Speaker Maximum Output Power	40 Watts
Connectivity Technology	Bluetooth, Auxiliary, USB
Bluetooth Version	4.2
Bluetooth Range	33 Feet (10 meters)
Battery Life	20 Hours
Battery Capacity	4400 mAh
Speaker Type	Tweeter, Woofer
Woofer Diameter	4 Inches
Tweeter Diameter	2.75 Inches
Product Dimensions	5.51"D x 8.66"W x 5.91"H
Item Weight	7.63 pounds (3.47 Kilograms)
Power Source	Battery Powered
Input Voltage	100-240V AC
Country of Origin	China
UPC	645569510104

8. WARRANTY AND SUPPORT

The KONEX 40W Vintage Bluetooth Speaker comes with a**Limited Warranty**. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Konex audio customer service through the retailer where the product was purchased. For the latest information and support, please visit the official Konex audio website or contact their customer support channels.

© 2024 Konex audio. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question