

[Manuals.plus](#) /

› [Konex audio](#) /

› KONE X K-One Retro Wooden Bluetooth Speaker User Manual

Konex audio KONE X K-One

KONE X K-One Retro Wooden Bluetooth Speaker User Manual

Brand: Konex audio | Model: KONE X K-One (B09572WYN8)

1. INTRODUCTION

Welcome to the user manual for your KONE X K-One Retro Wooden Bluetooth Speaker. This portable wireless speaker combines vintage aesthetics with modern audio technology, delivering powerful sound and long-lasting performance. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure you get the best experience from your speaker.



The KONEK K-One speaker features a classic wooden enclosure with a black mesh grille and brass-colored control knobs on top, blending vintage design with modern functionality.

2. PACKAGE CONTENTS

Please check the box for the following items:

- KONEK K-One Wooden Bluetooth Speaker
- Power Adapter
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your KONEK K-One speaker.

Front Panel

The front panel features a protective mesh grille covering the speaker drivers.

Top Panel Controls

The top panel houses the main control knobs and buttons:

- **Power Knob:** Turn clockwise to power on/off and adjust overall volume.
- **Bass Knob:** Adjusts the low-frequency output.
- **Treble Knob:** Adjusts the high-frequency output.
- **Pair Button:** Initiates Bluetooth pairing mode.
- **Play/Pause Button:** Controls media playback.
- **Previous/Next Track Buttons:** Skips between tracks.



This image displays the top control panel with power, volume, bass, treble knobs, and playback buttons. The rear panel shows the AUX input, USB port, and AC power input.

Rear Panel Ports

- **AUX Input:** 3.5mm jack for wired audio connection.
- **USB Input:** For USB playback from a flash drive.
- **AC Input:** For connecting the power adapter to charge the speaker.

Internal Components

- **4-inch Woofer:** Delivers rich bass.
- **2.75-inch Driver:** Provides clear mid-range and treble.



An internal view of the speaker highlighting the 4-inch woofer and 2.75-inch driver, which contribute to the speaker's superior sound quality.

Dimensions

The speaker measures approximately 8.66 inches (W) x 5.51 inches (D) x 5.91 inches (H).

EQ Adjusting Function

Unique Treble and Bass Adjust function can be adjusted according to different music to achieve the best sound effect



This image illustrates the speaker's dimensions and highlights its unique Treble and Bass Adjust function for optimal sound.

4. SETUP

Initial Charging

Before first use, fully charge the speaker. Connect the power adapter to the AC input on the rear panel and plug it into a power outlet. The charging indicator (if present) will show charging status.

Powering On/Off

Turn the Power knob clockwise to power on the speaker. Turn it counter-clockwise until it clicks to power off.

5. OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED (if present).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select 'KONEX K-One' from the list of devices. If prompted for a password, enter '0000'.
4. Once connected, the speaker will emit a confirmation sound, and the LED indicator will become solid (if present).
5. To pair with a new device, press and hold the 'Pair' button on the top panel until the speaker enters pairing mode again.

**It uses Bluetooth 4.2 and boasts
10 meters of distance of Bluetooth
for seamless connectivity**



FAST AND ROBUST CONNECTION

The speaker is shown next to a smartphone displaying its Bluetooth settings, illustrating the ease of connecting to the KONEX K-One speaker via Bluetooth 4.2 for seamless audio streaming.

AUX Input

Connect a device using a 3.5mm audio cable to the AUX input port on the rear panel. The speaker will automatically switch to AUX mode.

USB Playback

Insert a USB flash drive containing audio files into the USB port on the rear panel. The speaker should automatically

detect and begin playing audio from the drive.

Adjusting Sound (EQ Function)

Use the Bass and Treble knobs on the top panel to customize the audio output to your preference. Turn clockwise to increase, counter-clockwise to decrease.

6. MAINTENANCE

Cleaning

Wipe the speaker's wooden surface with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

Battery Care

The speaker features a built-in 4400mAh rechargeable battery, providing up to 20 hours of playtime. For optimal battery life, avoid fully discharging the speaker frequently and store it in a cool, dry place when not in use for extended periods.



This image highlights the speaker's impressive battery life, powered by a 4400 mAh battery, allowing for over 20 hours of continuous music playback.

7. TROUBLESHOOTING

No Power

- Ensure the speaker is fully charged. Connect the power adapter and verify it's plugged into a working outlet.
- Check if the Power knob is turned fully clockwise to the 'On' position.

No Sound

- Increase the volume on both the speaker and your connected device.
- Ensure the correct input mode (Bluetooth, AUX, USB) is selected.
- If using Bluetooth, ensure the device is properly paired and connected.
- Check audio cables for secure connection if using AUX.

Bluetooth Connection Issues

- Ensure the speaker is within the 33-foot Bluetooth range of your device.
- Turn off and on Bluetooth on your device, then try re-pairing.
- Forget the 'KONEX K-One' from your device's Bluetooth list and re-pair.
- Ensure no other devices are currently connected to the speaker.

Distorted Sound

- Reduce the volume on both the speaker and your connected device.
- Adjust the Bass and Treble knobs to a neutral position or to reduce excessive levels.
- Ensure the audio source is of good quality.

8. SPECIFICATIONS

Feature	Detail
Model Name	KONEX K-One
Brand	Konex audio
Connectivity Technology	Bluetooth 4.2, Auxiliary (3.5mm), USB
Speaker Type	Portable, Wireless
Audio Output Mode	Stereo
Speaker Configuration	2-way (4" Woofer, 2.75" Driver)
Speaker Maximum Output Power	40 Watts (RMS), 50 Watts (Peak Audio Power)
Frequency Response	60Hz - 20KHz
Battery Capacity	4400 mAh Li-ion

Feature	Detail
Playtime	Up to 20 hours
Bluetooth Range	33 feet (10 meters)
Product Dimensions	8.66" W x 5.51" D x 5.91" H
Item Weight	7.54 pounds (3.43 kg)
Included Components	Wooden Speaker
Warranty Type	Limited

9. WARRANTY AND SUPPORT

Limited Warranty

The KONEX K-One speaker comes with a limited warranty. Please refer to the product packaging or contact Konex audio customer service for specific warranty terms and conditions.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Konex audio customer support through their official website or the retailer where the product was purchased. Please have your model number (KONEX K-One) and ASIN (B09572WYN8) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question