

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Jippedea](#) /

› [Jippedea Shockproof Foldable Camera Insert Bag - Instruction Manual \(Model L: 13.38x3.15x8.66in\)](#)

### Jippedea L (13.38x3.15x8.66in)

# Jippedea Shockproof Foldable Camera Insert Bag - Instruction Manual

Model: L (13.38x3.15x8.66in)

## 1. INTRODUCTION

---

Thank you for choosing the Jippedea Shockproof Foldable Camera Insert Bag. This manual provides essential information for the proper setup, operation, and maintenance of your camera insert. Designed to offer superior protection for your valuable photographic equipment, this insert transforms any bag into a secure camera carrier. Please read this manual thoroughly before use.

## 2. PRODUCT OVERVIEW

---

The Jippedea Camera Insert Bag is a versatile and protective solution for transporting your camera gear. It features a main padded compartment, adjustable dividers, and a secure top cover, all designed to safeguard your equipment from impacts and scratches. Its foldable design allows for easy storage when not in use.



Figure 2.1: The Jippedea camera insert bag features a main compartment with adjustable dividers, shown here in a neutral brown color.

### 3. FEATURES

---

- **Size:** Outside dimensions are 13.38(L) x 3.15(W) x 8.66(H) inches (34x8x22cm), suitable for bags with a width of 13-15 inches (33-38cm).
- **Adjustable Inner Bladder Partition:** Detachable partition boards attach to the lining, allowing for flexible adjustment to secure camera accessories.
- **Protective Cover:** The inner bag includes a detachable cover for comprehensive protection of your camera, lenses, and other accessories.
- **Material:** Constructed from soft and shockproof velvet cloth and pearl cotton.
- **Wide Compatibility:** Suitable for storing digital SLR cameras and photographic equipment from brands like Canon, Nikon, Sony, and Pentax.



Figure 3.1: This image illustrates the external dimensions of the camera insert (13.38 inches long, 8.66 inches high) and the size of the two included partitions (5.1 inches wide, 8 inches high) and the cover (12.99 inches long, 7.87 inches wide).

## 4. SETUP

1. **Unpack the Insert:** Carefully remove the camera insert bag from its packaging.
2. **Attach Dividers:** The insert comes with two detachable partitions. These partitions feature Velcro on their edges, allowing them to be securely attached to the inner lining of the main compartment.
3. **Customize Layout:** Arrange the partitions to create compartments that best fit your camera body, lenses, and other accessories. Ensure a snug fit to prevent movement during transport.
4. **Secure the Cover:** The top cover also uses Velcro to attach to the main compartment, providing an additional layer of protection. You can choose to use the cover or remove it based on your preference and the type of outer bag you are using.

# Accessories display

Internal accessories can be removed



Reasonable use of space

The position of the partition can be adjusted at will

Figure 4.1: The internal accessories, including the partitions, are fully removable and adjustable using Velcro, allowing for customized storage configurations.



Figure 4.2: The lid of the insert bag is secured with strong, removable Velcro, ensuring contents remain protected.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the Jippedeia camera insert bag's features, including its adjustable dividers and how it can be used to organize and protect camera gear.

## 5. OPERATING INSTRUCTIONS

1. **Load Your Gear:** Place your camera body, lenses, and other accessories into the compartments created by the adjustable dividers. Ensure all items are securely nestled within the padding.
2. **Close the Insert:** If using the top cover, secure it with the Velcro fasteners.
3. **Insert into Outer Bag:** Place the loaded camera insert bag into your backpack, tote, or messenger bag. The compact design allows it to fit into various types of bags, providing instant camera protection.
4. **Accessing Gear:** When you need to access your camera, simply open your outer bag and retrieve the insert. If the cover is not used, you can directly reach into the insert for quick access.



Figure 5.1: Demonstration of a DSLR camera with an attached lens and an extra lens fitting perfectly into the padded compartments of the insert.



Figure 5.2: This composite image shows the insert from various angles, emphasizing its multi-layer internal grid for versatile

organization and its foldable nature for compact storage when not in use.

Your browser does not support the video tag.

Video 5.1: A demonstration video showcasing the functionality of a camera insert bag, including how to arrange equipment and place it within a larger bag for transport.

Your browser does not support the video tag.

Video 5.2: This video illustrates the practical use of a camera insert bag, showing how it can be integrated into a backpack to safely carry a camera body, lenses, and accessories.

## 6. MAINTENANCE

- **Cleaning:** For minor dirt or dust, gently wipe the exterior with a soft, damp cloth. For more stubborn stains, a mild soap solution can be used, followed by wiping with a clean, damp cloth. Allow to air dry completely.
- **Do Not Machine Wash:** To preserve the integrity of the padding and materials, do not machine wash or tumble dry the insert.
- **Storage:** When not in use, store the insert in a cool, dry place away from direct sunlight to prevent material degradation.

## 7. TROUBLESHOOTING

- **Issue:** Equipment does not fit securely.
  - **Solution:** Adjust the Velcro partitions to create custom compartments that snugly hold your camera body and lenses. Ensure no gaps allow for excessive movement.
- **Issue:** Insert does not fit into my outer bag.
  - **Solution:** Verify the dimensions of your outer bag against the insert's specifications (13.38x3.15x8.66 inches). The insert is designed for bags with a width of 13-15 inches.
- **Issue:** Reduced padding effectiveness.
  - **Solution:** Ensure the insert is not overstuffed, which can compress the padding. If the padding appears permanently compressed, consider replacing the insert for optimal protection.

## 8. SPECIFICATIONS

Feature	Detail
Product Dimensions	13.39 x 7.87 x 8.66 inches
Item Weight	7.8 ounces
Material	Velvet cloth, Pearl cotton
Color	Brown (as pictured)
Model	L
Manufacturer	Jippedea

## 9. WARRANTY & SUPPORT

Jippedea products are manufactured to high-quality standards. For any questions, concerns, or support needs regarding your camera insert bag, please refer to the retailer's return policy or contact Jippedea customer service directly through their official channels. Please retain your proof of purchase for any warranty claims.