

DAVITU RMC3348

DAVITU RM-C3348 Remote Control User Manual

Model: RM-C3348 for JVC LT-50KB585 and LT-55KB695

1. INTRODUCTION

Thank you for choosing the DAVITU RM-C3348 Remote Control. This remote is designed as a direct replacement or spare for your JVC LT-50KB585 and LT-55KB695 series televisions, offering seamless control over your TV's functions. This manual will guide you through the simple setup and operation of your new remote control.



Figure 1.1: DAVITU RM-C3348 Remote Control, showing its ergonomic design and button layout.

2. SETUP

2.1 Battery Installation

The RM-C3348 remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2.1: Rear view of the remote control, highlighting the battery compartment.

2.2 Initial Use

This remote control is pre-programmed for compatible JVC TV models (LT-50KB585, LT-55KB695) and typically requires no additional setup or pairing. Once batteries are installed, it should function immediately with your television.

3. OPERATING INSTRUCTIONS

The RM-C3348 remote control provides access to all standard television functions. Familiarize yourself with the button layout for optimal use.



Figure 3.1: Front view of the remote control, displaying all functional buttons.

3.1 Basic Functions

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the sound volume.
- **Channel Up/Down (P▲/P▼):** Changes channels sequentially.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).

3.2 Navigation and Smart TV Functions

- **Directional Pad (Up, Down, Left, Right):** Navigates menus and selections.
- **OK Button:** Confirms selections or opens menus.
- **Back/Return Button:** Returns to the previous screen or menu.
- **Menu Button:** Opens the main TV menu.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application. Refer to your TV's on-screen prompts.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control periodically with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote only works intermittently	Weak batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Remove any obstructions.
Specific buttons not working	Button stuck or damaged; TV not supporting the function.	Gently press the button multiple times. If still unresponsive, the button may be faulty. Confirm your TV model supports the specific function.
Remote works with other TVs but not mine	Incorrect TV model; Remote is not compatible.	Verify your TV model (LT-50KB585 or LT-55KB695) matches the remote's compatibility.

6. SPECIFICATIONS

- **Model Number:** RM-C3348
- **Brand:** DAVITU
- **Compatible Devices:** JVC LT-50KB585, JVC LT-55KB695 Televisions
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Wireless Communication:** IR
- **Certification:** CE
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your DAVITU RM-C3348 Remote Control, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2023 DAVITU. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0957S14TQ>

More documents and user manuals: <https://manuals.plus/>