

LuFun AMZ0035

LuFun Flush Mount Ceiling Light User Manual

Model: AMZ0035

INTRODUCTION

Thank you for choosing the LuFun Flush Mount Ceiling Light. This modern LED fixture is designed to provide efficient and versatile lighting for various indoor spaces, including kitchens, bedrooms, hallways, and living rooms. Featuring dimmable functionality and adjustable color temperatures (3000K, 4000K, 6500K) controlled by a remote, this light combines aesthetic appeal with practical features. This manual provides essential information for safe installation, operation, and maintenance of your new ceiling light.



Figure 1: LuFun Flush Mount Ceiling Light with remote control and various light settings.

SAFETY INFORMATION

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or other injuries.

- Always turn off the power at the circuit breaker or fuse box before beginning installation or performing any maintenance.
- Ensure the voltage supply matches the light fixture's requirements (110 Volts AC).
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC).
- If you are unsure about wiring, consult a qualified electrician.
- Do not modify the light fixture in any way.
- This product is designed for indoor use only. Do not expose to water or high humidity.
- Keep the light fixture away from flammable materials.

PACKAGE CONTENTS

Verify that all components are present and undamaged before installation.

- LuFun Flush Mount Ceiling Light Fixture (1)
- Remote Control (1)
- Mounting Hardware Kit (screws, wire nuts, etc.) (1 set)
- Instruction Manual (1)

Lamp body size

Ceiling light with remote control



Figure 2: Lamp body size and remote control icon, indicating the light's dimensions (15.7 inches diameter, 1.97 inches thickness).

SETUP AND INSTALLATION

The LuFun ceiling light is designed for quick and easy installation. Follow these steps carefully:

1. **Preparation:** Turn off the power to the light fixture at the circuit breaker. Ensure the power is completely off before proceeding.
2. **Mounting Bracket Installation:** Attach the mounting bracket (included in the hardware kit) to the electrical junction box in the ceiling. Use the provided screws and ensure it is securely fastened.
3. **Wiring Connections:** Connect the electrical wires from the ceiling to the light fixture's wires. Typically, this involves connecting:
 - Live (black) wire from ceiling to live wire of fixture.

- Neutral (white) wire from ceiling to neutral wire of fixture.
- Ground (green or bare copper) wire from ceiling to ground wire of fixture.

Secure connections with wire nuts.

4. **Attach Fixture to Bracket:** Carefully align the light fixture with the mounting bracket and secure it in place using the provided screws. Ensure the fixture is flush with the ceiling.
5. **Final Check:** Once the fixture is securely mounted, restore power at the circuit breaker.



Figure 3: Internal components and wiring connections of the LuFun ceiling light.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the LuFun Flush Mount Ceiling Light in a room setting, showcasing its design and light output. This video provides a visual overview of the light's appearance and functionality.

OPERATING INSTRUCTIONS

Your LuFun ceiling light can be operated using the included remote control or a standard wall switch.

Using the Remote Control

The remote control provides full functionality, including power, dimming, and color temperature adjustment.

- **Power ON/OFF:** Press the **ON** or **OFF** button.
- **Brightness Adjustment:** Use the brightness gradual change buttons (up/down arrows) to adjust brightness from 10% to 100%.
- **Color Temperature Change:** Use the color temperature gradual change buttons (left/right arrows) to cycle through 3000K (Warm White), 4000K (Natural Light), and 6500K (Cool White).
- **Memory Function:** The light has a memory function. When turned off and on again (either by remote or wall switch), it will recall the last brightness and color temperature setting.
- **Timer Function:** The remote may include timer settings (e.g., 5/30/60 minutes close) to automatically turn off the light.
- **Nightlight Mode:** Some remotes may feature a dedicated nightlight mode button for a very low light setting.



Figure 4: Remote control layout and function descriptions.

Color Adjustment



Figure 5: Examples of Cold White, Neutral White, and Warm White light output.

Using a Standard Wall Switch

The light can also be controlled by a standard wall switch. Each time you toggle the wall switch OFF and then ON, the light will cycle through the three color temperatures (3000K, 4000K, 6500K). The light will remember the last setting when turned off for a longer period.



Figure 6: The light can be operated using a normal wall switch.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling light.

- **Cleaning:** Before cleaning, ensure the power to the fixture is turned off. Use a soft, dry cloth to wipe the surface of the light fixture. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or acrylic diffuser.
- **LED Lifespan:** The integrated LED lamp beads are designed for long-term use and are not user-replaceable. The fixture is highly energy-efficient and has a long operational life.
- **Inspection:** Periodically inspect the fixture for any signs of damage or loose connections. If any issues are found, turn off the power and consult a qualified electrician.

TROUBLESHOOTING

If you encounter issues with your LuFun ceiling light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose wiring; faulty switch.	Check circuit breaker. Ensure all wiring connections are secure. Test the wall switch.
Remote control not working.	Batteries are dead or incorrectly inserted; remote not paired with light.	Replace remote batteries. To pair the remote: Turn the wall switch ON. Within 3 seconds, press and hold the "1" button (bottom left) on the remote for 3-5 seconds until the light flashes once. Release the "1" button to complete pairing. If issues persist, remove remote batteries for 2 minutes to reset, and turn off the wall switch for 15 seconds to clear the light fixture's memory before re-pairing.
Light flickers or dims unexpectedly.	Unstable power supply; loose connection; incompatible dimmer switch (if not using provided remote).	Ensure stable power. Check wiring connections. This light is designed for use with its remote control for dimming; standard dimmer switches may cause issues.
Color temperature or brightness settings are not saved.	Power interruption; memory function reset.	The light has a memory function. If power is cut for an extended period, it might reset. Re-adjust settings using the remote.

SPECIFICATIONS

Feature	Detail
Brand	LuFun
Model Name	Minimalist Wood
Model Number	AMZ0035
Color	White/Round/Dimmable
Material	Wood, Metal, Acrylic
Style	Modern
Light Fixture Form	Ceiling
Room Type	Home Office, Kitchen, Living Room, Bedroom, Hallway
Product Dimensions	15.75"L x 15.75"W x 1.97"H (Ø40*5 CM)
Specific Uses	Indoor use only
Power Source	AC
Installation Type	Flush Mount
Special Feature	Dimmable, Remote control
Control Method	Remote

Feature	Detail
Light Source Type	LED
Wattage	30 watts
Brightness	2400 Lumen
Voltage	110 Volts (AC)
Light Color	3000K (Warm), 4000K (Natural), 6500K (Cool)
Shape	Round
Item Weight	3.3 pounds (1.5 Kilograms)

WARRANTY AND SUPPORT

The LuFun Flush Mount Ceiling Light comes with a **1-year warranty** from the date of purchase, covering defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact LuFun customer service through the retailer's platform or the contact information provided with your purchase documentation. Please have your purchase receipt and model number (AMZ0035) ready when contacting support.

© 2024 LuFun. All rights reserved.