

[Manuals.plus](#) /

› [Kidamento](#) /

› Kidamento Model P Instant Print Digital Camera User Manual

## Kidamento Model P

# Kidamento Model P Instant Print Digital Camera User Manual

Model: P | Brand: Kidamento

[Box](#) [Setup](#) [Operating](#) [Introduction](#) [What's in the](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides comprehensive instructions for the Kidamento Model P Instant Print Digital Camera. It covers initial setup, operational procedures, maintenance guidelines, and troubleshooting tips to ensure optimal performance and longevity of your device. The Model P camera is designed to capture and instantly print memories, offering both digital photo and video recording capabilities.




Front view of the Kidamento Model P Instant Print Digital Camera.

## 2. WHAT'S IN THE BOX

---

Upon unboxing your Kidamento Model P camera, please verify that all the following items are included:

- Kidamento Model P Camera (Panda design)
- USB Charging Cable
- 1x Thermal Paper Roll (for black & white prints)
- 1x Sticker Paper Roll
- 32GB MicroSD Memory Card (pre-installed)
- Decorative Sticker Sheet
- User Manual (this document)
- Scavenger Hunt Photo Book
- Neck Strap

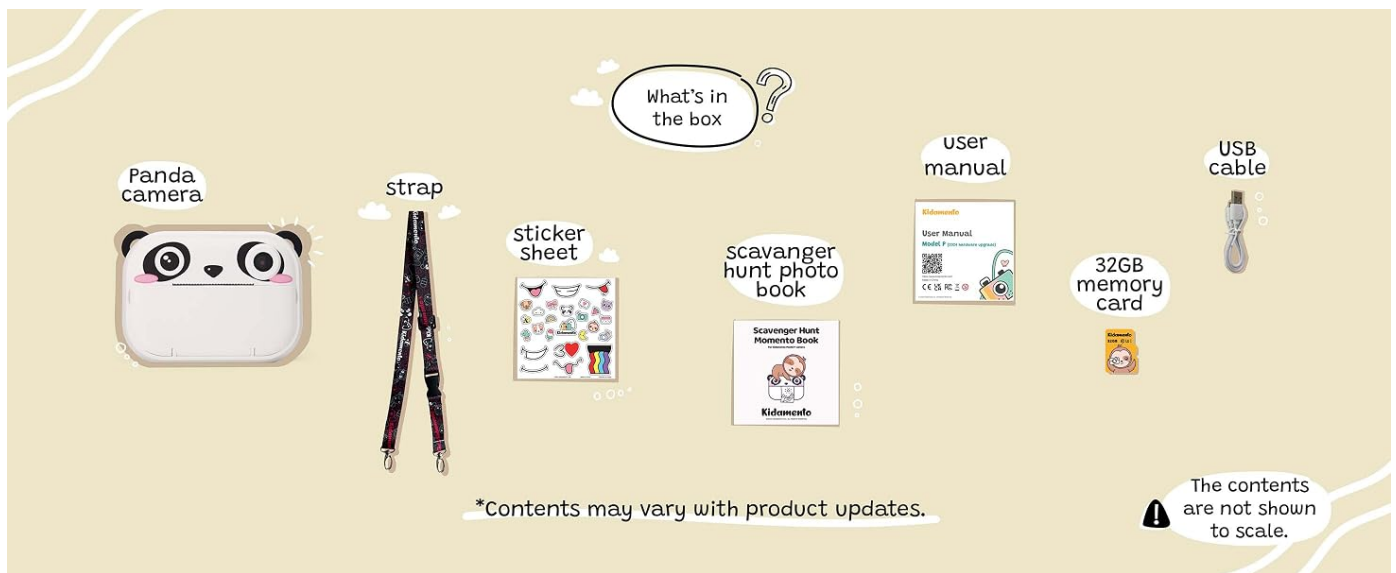

Contents of the Kidamento Model P camera package.

## 3. SETUP

---

### 3.1 Charging the Camera

Before first use, fully charge the camera battery. Connect the provided USB cable to the camera's USB port and to a compatible USB power adapter (not included) or computer. The charging indicator light will illuminate during charging and turn off when complete.

### 3.2 Inserting/Checking Memory Card

The camera comes with a 32GB MicroSD memory card pre-installed. To access the memory card slot, locate the protective cover on the side of the camera. Ensure the card is securely seated for proper photo and video storage.

### 3.3 Loading Print Paper

The Kidamento Model P uses thermal paper for instant printing, requiring no ink cartridges. To load a new roll:

1. Gently open the front cover of the camera where the paper exits.
2. Insert a new thermal paper roll, ensuring the paper feeds from the bottom and the leading edge is slightly exposed.
3. Close the cover firmly until it clicks into place.



Loading thermal paper into the camera.

### 3.4 Attaching the Neck Strap

Attach the provided neck strap to the designated loops on the camera's ears. This helps prevent accidental drops and makes the camera easy to carry.



Camera with attached neck strap for secure carrying.

## 4. OPERATING THE CAMERA

### 4.1 Power On/Off

Press and hold the power button (usually located on the side or top) for a few seconds to turn the camera on or off. The screen will illuminate upon power-on.

### 4.2 Taking Photos

The camera features both a front-facing lens and a selfie camera. Use the digital button (often marked with a camera icon) to switch between photo and video modes and to capture images. The 2.4-inch HD screen allows for live preview.



Camera controls and screen for taking photos and videos.

### 4.3 Recording Videos

In video mode, press the digital button to start and stop recording. The camera supports 1080p video resolution. Videos are saved to the installed memory card.

## 4.4 Printing Photos

After taking a photo, or when viewing a saved image from the digital album, press the dedicated print button (often marked with a printer icon) to instantly print the image. Prints are black and white and typically take about 3 seconds to emerge. Each paper roll can print up to 70-75 photos.



Instant printing feature in action.

## 4.5 Using Filters and Frames

The camera includes approximately 20 built-in filters and frames. Navigate through the menu using the directional buttons to select and apply these creative effects to your photos before capturing or printing.



Applying filters and frames to photos.

## 4.6 Transferring Files

Connect the camera to a computer using the USB cable to transfer photos and videos from the memory card. The camera will appear as a removable storage device.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Camera

Use a soft, dry cloth to clean the camera body. For the lens and screen, use a microfiber cloth specifically designed for optics. Avoid abrasive cleaners or solvents.

### 5.2 Paper Refills

When the paper roll is depleted, replace it with Kidamento-compatible thermal paper rolls. Refill packs for both standard and sticker paper are available from the Kidamento store. No ink or cartridge recharge is ever needed.

### 5.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, especially if it will be stored for an extended period.

## 6. TROUBLESHOOTING

---

| Problem                                      | Possible Cause                                     | Solution                                                                                                                   |
|----------------------------------------------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Camera won't turn on.                        | Low battery.                                       | Charge the camera fully.                                                                                                   |
| Photos not printing correctly or paper jams. | Paper incorrectly loaded or jammed.                | Open the paper compartment, remove any jammed paper, and reload the roll correctly, ensuring the leading edge is straight. |
| Camera turns on accidentally in a bag.       | Power button pressed by other items.               | Ensure the camera is fully powered off before storing. Consider a protective case to prevent accidental button presses.    |
| No photos/videos saving.                     | Memory card full or not inserted correctly.        | Check memory card insertion. Transfer files to a computer to free up space or replace with an empty card.                  |
| No Wi-Fi or App connectivity.                | This model does not support Wi-Fi or App features. | The Kidamento Model P camera uses USB for data transfer and does not include Wi-Fi or app connectivity.                    |

## 7. SPECIFICATIONS

| Feature                         | Detail                                    |
|---------------------------------|-------------------------------------------|
| Brand                           | Kidamento                                 |
| Model Name                      | Model P                                   |
| Photo Sensor Technology         | CMOS                                      |
| Effective Still Resolution      | 9 MP                                      |
| Maximum Webcam Image Resolution | 11.5 MP                                   |
| Video Resolution                | 1080p                                     |
| Display Type                    | LCD                                       |
| Screen Size                     | 5.24 inches                               |
| Memory Storage Capacity         | 32 GB (Micro SDHC pre-installed)          |
| Connectivity Technology         | USB                                       |
| Special Feature                 | Instant Print (Ink-free thermal printing) |
| Item Weight                     | 520 g                                     |
| Color                           | White                                     |
| Manufacturer Part Number        | MP-Koko                                   |

## 8. PRODUCT VIDEOS

**Kidamento Panda Camera:** An overview of the Kidamento Panda camera's features and design.

**Kidamento Instant Print Digital Camera for Kids - Koko:** A detailed look at the Koko model, highlighting its instant print capabilities.

**Photo Scavenger Hunt:** Demonstrates how the camera can be used for outdoor activities like a photo scavenger hunt.

**Mom Tip of the Day:** A short video offering a practical tip related to using the camera.

**Kidamento Model P Camera Unboxing:** An unboxing video showing the contents and initial look at the Model P camera.

**Best Camera for Zoo Visit:** Showcasing the camera's use during a zoo visit, capturing animal photos.

**Capture Dancing Video and Print:** Demonstrates recording a video and then printing a still image from it.

**Remembering Summer:** A video highlighting capturing and preserving summer memories with the camera.

## 9. WARRANTY & SUPPORT

### 9.1 Warranty Information

The Kidamento Model P camera comes with a**6 Months Limited Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

### 9.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please refer to the contact information provided in your product packaging or visit the official Kidamento website for support resources.

© 2026 Kidamento. All rights reserved.

#### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question