



[Manuals.plus](#) /

> [Philips](#) /

> Philips HL7777/00 Mixer Grinder User Manual - 750W, 4 Jars, Smart One-Touch Mode

Philips HL7777/00

Philips HL7777/00 Mixer Grinder User Manual

750W, 4 Jars, Smart One-Touch Mode, Digital Interface, Intelli-speed Technology, Soft Sound Technology

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Philips HL7777/00 Mixer Grinder. Please read these instructions carefully before first use and retain them for future reference. This appliance is designed for domestic use to assist with various food preparation tasks such as grinding, blending, and mixing.



Image 1.1: The Philips HL7777/00 Mixer Grinder with its accompanying jars.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit in water or any other liquid. Always unplug the appliance from the power supply before cleaning, assembling, or disassembling parts, and when not in use.
- **Child Safety:** This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep the appliance and its cord out of reach of children.
- **Operation:** Never operate the appliance without the jar lid securely in place. Do not touch moving parts during operation. Ensure blades have stopped completely before removing the jar from the motor unit. Do not overload the appliance; refer to the maximum fill levels for each jar.
- **Maintenance:** Regularly inspect the power cord for damage. If the cord is damaged, it must be replaced

by Philips, a service agent, or similarly qualified persons to avoid a hazard. Do not use abrasive cleaning agents or scourers on any part of the appliance.

3. SETUP AND ASSEMBLY

Before using your mixer grinder for the first time, follow these steps:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Clean:** Wash all jars, lids, and blades with warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the motor unit on a stable, flat, and dry surface, away from heat sources and direct sunlight.
4. **Assemble Jar:** Place the desired jar onto the motor unit. Ensure it is securely locked into position by rotating it clockwise until it clicks.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet.



Image 3.1: The control panel featuring smart touch mode buttons.

4. OPERATING INSTRUCTIONS

The Philips HL7777/00 Mixer Grinder features a powerful 750W motor, Intelli-speed Technology, and Smart One-Touch Mode for efficient and convenient operation.

4.1 General Operation

1. Ensure the mixer grinder is unplugged before adding ingredients.
2. Add ingredients to the chosen jar, ensuring not to exceed the maximum fill line.
3. Securely place the lid on the jar.
4. Place the assembled jar onto the motor unit and rotate clockwise until it locks.
5. Plug the appliance into the power outlet.
6. Select the desired speed or Smart One-Touch mode using the digital interface.
7. After processing, switch off the appliance, unplug it, and wait for the blades to stop before removing the jar.

4.2 Smart One-Touch Mode

The Smart One-Touch Mode offers 5 pre-programmed settings for common tasks, optimizing speed and duration for consistent results. These modes are designed for hassle-free cooking, including:

- Ice-crushing
- Sauces & Dips
- Smoothies
- Meat & Vegetable Mincing
- Other pre-set cooking functions

Simply select the desired program button on the digital interface, and the appliance will automatically adjust its operation.

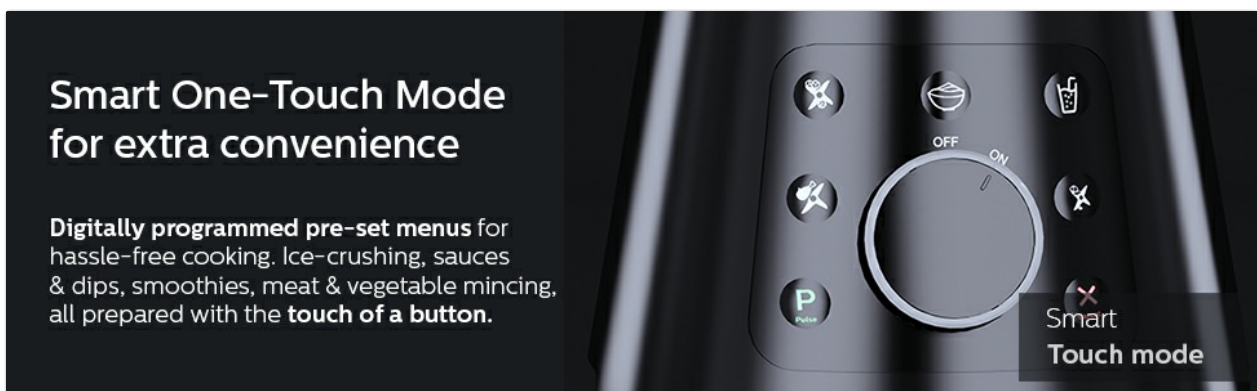 


Image 4.1: Smart One-Touch Mode for pre-set cooking convenience.

4.3 Intelli-speed Technology

This technology incorporates smart sensors that regulate speeds for optimum performance, ensuring efficient grinding and blending even with varying loads.



Image 4.2: The 750W Turbo Torque Motor with Intelli-speed Technology for enhanced performance.

4.4 Using the Jars

The appliance comes with four precisely designed jars for various tasks:

- **1.5L Multi-Purpose Jar:** Ideal for general grinding, blending, and larger quantities.
- **1L Power Bullet Jar:** Designed for tougher ingredients and more intensive grinding tasks.
- **1L Blend & Carry Jar:** Perfect for preparing smoothies and shakes that can be carried on the go.
- **0.5L Chutney Jar:** Suitable for grinding smaller quantities of spices, chutneys, and pastes.

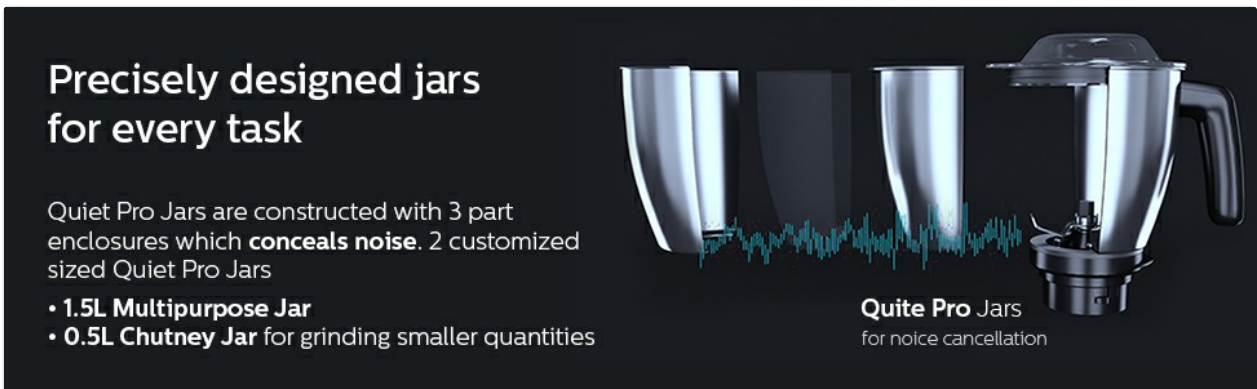


Image 4.3: Precisely designed Quiet Pro Jars for noise cancellation.

4.5 Soft Sound Technology

The Philips HL7777/00 incorporates Soft Sound Technology, which contributes to a significant reduction in sound power during operation, enhancing user comfort.

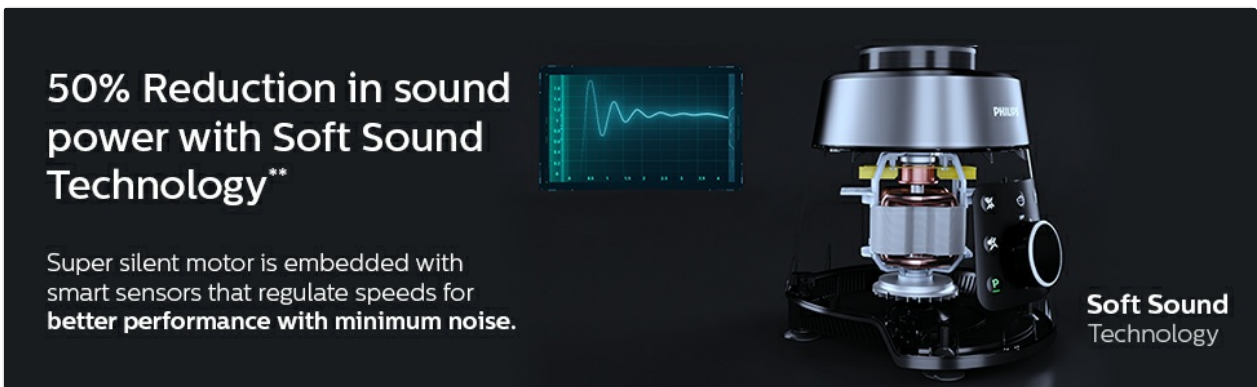


Image 4.4: Soft Sound Technology for reduced operational noise.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your mixer grinder.

- **Motor Unit:** Always unplug the appliance before cleaning. Wipe the motor unit with a soft, damp cloth. Do not immerse the motor unit in water or rinse it under running water.
- **Jars and Lids:** After each use, disassemble the jars and lids. Wash them with warm water and a mild dishwashing liquid. Use a brush to clean the blades carefully. Rinse thoroughly and dry immediately to prevent water spots or corrosion.
- **Blades:** Handle blades with extreme care as they are sharp. Do not attempt to sharpen the blades yourself.
- **Storage:** Store the mixer grinder and its accessories in a clean, dry place when not in use.

6. TROUBLESHOOTING

If you encounter any issues with your Philips HL7777/00 Mixer Grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Power cord not plugged in. Jar not correctly assembled or locked. Overload protection activated.	Ensure power cord is securely plugged in. Re-assemble the jar and rotate clockwise until it locks. Reduce ingredients and wait a few minutes before restarting.
Excessive noise or vibration.	Jar not seated properly. Overloaded jar.	Ensure the jar is securely locked onto the motor unit. Reduce the quantity of ingredients.
Ingredients not grinding effectively.	Insufficient liquid (for blending). Overloaded jar. Blades are dull.	Add more liquid if blending. Reduce ingredient quantity. If blades are dull, contact customer support for service.
Leakage from jar.	Lid not properly secured. Gasket not in place or damaged. Overfilled jar.	Ensure lid is tightly closed. Check if the gasket is correctly fitted and undamaged. Do not exceed the maximum fill line.

If the problem persists after attempting these solutions, please contact Philips customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Number	HL7777/00
Colour	Metallic Silver and Bold Black
Special Feature	Built-in Grinder

Feature	Detail
Capacity	1.5 litres (Multi-Purpose Jar)
Product Dimensions	53.2D x 39.5W x 32H Centimeters
Included Components	1.5L Multi-Purpose Jar, 1L Blend & Carry Jar, 1L Power Bullet Jar, 0.5L Chutney Jar, Recipe Booklet, Spatula, User Manual
Style	Modern
Recommended Uses	Blend, Grind
Power Source	Corded Electric
Number of Speeds	3
Voltage	230 Volts (AC)
Blade Material	Stainless Steel
Item Weight	5 kg 500 g
Country of Origin	India

8. WARRANTY AND SUPPORT

Your Philips HL7777/00 Mixer Grinder comes with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal domestic use.

To register your product and unlock additional benefits, please visit the official Philips India website.

For any product-related queries, service requests, or warranty claims, please contact Philips customer support:

- **Toll-Free Number:** 18-12-2929

Please have your purchase receipt and product model number (HL7777/00) available when contacting support.