

[Manuals.plus](#) /

› [G3 Ferrari](#) /

› G3 Ferrari G10148 Rostò Titanium 47 Electric Ventilated Oven User Manual

G3 Ferrari G10148

G3 Ferrari G10148 Rostò Titanium 47 Electric Ventilated Oven User Manual

Model: G10148 | Brand: G3 Ferrari

INTRODUCTION

Thank you for choosing the G3 Ferrari G10148 Rostò Titanium 47 Electric Ventilated Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Front view of the G3 Ferrari G10148 Rostò Titanium 47 Electric Ventilated Oven.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury

to persons. This includes:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar items.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT COMPONENTS

The G3 Ferrari G10148 oven includes the following components:

- Electric Ventilated Oven unit
- 1 Grill Rack
- 1 Rectangular Baking Tray
- 1 Round Baking Tray (Ø37cm)
- User Manual
- Warranty Information



Rectangular baking tray and grill rack.



Round baking tray (Ø37cm).

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the oven on a stable, heat-resistant surface. Ensure there is adequate ventilation around the appliance (at least 10 cm clearance on all sides). Do not place near flammable materials.
3. **Cleaning:** Before first use, wipe the interior and accessories with a damp cloth. Do not use abrasive cleaners.
4. **Initial Burn-off:** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at the maximum temperature (300°C) with the ventilation function active. Ensure the room is well-ventilated during this process. A slight odor or smoke is normal during initial use.
5. **Power Connection:** Ensure the power supply matches the specifications on the appliance rating label. Plug the oven into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The G3 Ferrari G10148 oven features three control knobs for easy operation:

1. Function Selection Knob



Close-up of the function selection knob.

This knob allows you to select the desired cooking mode:

- **Off (0):** Oven is off.
- **Upper Heating Element:** For grilling and browning.
- **Lower Heating Element:** For gentle baking from below.
- **Upper and Lower Heating Elements:** Standard baking and roasting.
- **Upper and Lower Heating Elements with Ventilation:** For even cooking and faster results, ideal for multiple dishes.

2. Temperature Control Knob



Close-up of the temperature control knob.

Set the desired cooking temperature using this knob. The adjustable thermostat ranges from 40°C to 300°C. The oven light will illuminate when the oven is heating and turn off once the set temperature is reached.

3. Timer Knob



Close-up of the timer knob.

The 90-minute timer can be set for precise cooking durations. Once the set time elapses, an acoustic signal will sound, and the oven will turn off automatically. For continuous operation, turn the knob counter-clockwise past the '0' mark to the hand symbol.

Internal Oven Lamp



The internal oven lamp provides visibility during cooking.

The oven is equipped with an internal lamp to monitor your food without opening the door, helping to maintain a consistent cooking temperature.

CARE AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your oven.

1. **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, steel wool, or metal scouring pads, as these can damage the finish.
3. **Interior Cleaning:** The enameled inner walls facilitate easy cleaning. Wipe the interior with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner suitable for enameled surfaces can be used, following the product instructions carefully. Ensure all cleaner residue is removed before next use.
4. **Accessories:** The grill rack and baking trays can be washed with warm soapy water. Dry thoroughly before storing.

or reinserting into the oven.

- 5. **Door Glass:** Clean the double glass door with a glass cleaner or a damp cloth. Avoid harsh chemicals that could damage the seals.
- 6. **Storage:** When not in use for extended periods, ensure the oven is clean and dry. Store it in a cool, dry place.

TROUBLESHOOTING

This section addresses common issues you might encounter. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set or set to '0'.	Ensure the oven is properly plugged in. Check the circuit breaker. Set the timer to the desired cooking duration or to continuous operation.
Food not cooking evenly.	Incorrect rack position; oven overloaded; ventilation not active.	Adjust rack position for optimal heat distribution. Avoid overcrowding the oven. Use the ventilation function for more even cooking.
Oven produces smoke during first use.	Residual manufacturing oils burning off.	This is normal during initial burn-off. Ensure good ventilation. If smoke persists after initial use, contact support.
Timer alarm does not sound.	Timer mechanism fault.	Ensure the timer was set correctly. If the issue persists, contact customer support.

TECHNICAL SPECIFICATIONS

- Brand:** G3 Ferrari
- Model Name:** G10148
- Model Number:** G1014800
- Product Type:** Electric Ventilated Oven
- Color:** Anthracite Grey
- Capacity:** 45 Liters
- Wattage:** 1400 Watts
- Temperature Range:** 40°C - 300°C (Adjustable Thermostat)
- Timer:** 90 minutes with acoustic signal and continuous operation option
- Dimensions (D x W x H):** 45.5 cm x 59 cm x 32.7 cm
- Item Weight:** 12 Kilograms
- Door Style:** Drop-down door with double glass for thermal insulation
- Interior Finish:** Enameled inner walls
- Heating Elements:** Armored steel
- Control Type:** Knob
- Power Source:** Electric
- Manufacturer:** Trevidea s.r.l.
- Year of Production:** 2023

WARRANTY INFORMATION

This G3 Ferrari G10148 Electric Ventilated Oven comes with a**2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use conditions. It does not cover damage resulting from misuse, accident, alteration, neglect, unauthorized repair, or commercial use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official G3 Ferrari website.

CUSTOMER SUPPORT

Should you require assistance, have questions about your product, or need to report a fault, please refer to the contact information provided in your product's included manual or visit the official G3 Ferrari website for support resources and contact details.

For spare parts availability, the EU duration is 2 years from the date of production.

© 2023 G3 Ferrari. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B095C4K36G>

More documents and user manuals: <https://manuals.plus/>