

[Manuals.plus](#) /

› [G3 Ferrari](#) /

› G3Ferrari G10147 Rosto Titan 37 Electric Oven Instruction Manual

G3 Ferrari G10147

G3Ferrari G10147 Rosto Titan 37 Electric Oven Instruction Manual

Model: G10147

INTRODUCTION

Thank you for choosing the G3Ferrari G10147 Rosto Titan 37 Electric Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.



Image: Front view of the G3Ferrari G10147 Rosto Titan 37 Electric Oven, showcasing its compact design and control panel.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This oven is for household use only.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

SETUP

Unpacking

Carefully remove the oven and all accessories from the packaging. Retain packaging materials for future transport or disposal. Check for any damage during transit. If damage is found, do not use the appliance and contact your retailer.

Placement

Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance. Maintain a minimum distance of 10 cm from walls and other objects to allow for proper heat dissipation. The oven dimensions are approximately 51.7 cm (Width) x 32.7 cm (Height) x 44 cm (Depth).



Image: Included rectangular tray and stainless steel grill, ready for placement inside the oven.

Initial Cleaning

Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash all accessories (grill, trays) in warm, soapy water, rinse thoroughly, and dry completely. Ensure the oven is completely dry before plugging it in.

Power Connection

Connect the power cord to a grounded AC230V - 50/60Hz electrical outlet. Ensure the outlet is easily accessible.

Initial Burn-in

It is recommended to run the oven empty for approximately 15 minutes at the maximum temperature setting (300°C) with the timer set. This will help burn off any manufacturing residues and odors. Ensure the area is well-ventilated during this process.

OPERATING INSTRUCTIONS

Control Panel Overview

The G3Ferrari G10147 Rosto Titan 37 features three main control knobs:

1. **Timer Knob:** Located at the top, controls cooking duration up to 90 minutes or continuous operation.
2. **Temperature Knob:** Located in the middle, adjusts the oven temperature from 40°C to 300°C.
3. **Function Knob:** Located at the bottom, selects the cooking mode (base heating, grill, combination).



Image: Close-up of the timer dial, showing settings from 0 to 90 minutes and a continuous operation option.



Image: Close-up of the temperature dial, indicating adjustable temperatures from 40°C (Yogurt) to 300°C.



Image: Close-up of the function dial, illustrating options for base heating, grill, and combination cooking modes.

Preheating the Oven

For optimal cooking results, preheat the oven before placing food inside. Turn the Temperature Knob to the desired temperature and the Function Knob to the required cooking mode. Set the Timer Knob to a short duration (e.g., 10-15 minutes) or to continuous operation. The indicator light will illuminate during heating and turn off when the set temperature is reached.

Cooking Functions

- **Base Heating:** Activates the bottom heating element. Ideal for baking cakes, pizzas, or dishes requiring heat from below.
- **Grill:** Activates the top heating element. Suitable for grilling, toasting, or browning the top of dishes.
- **Combination:** Activates both top and bottom heating elements. Best for roasting meats, casseroles, and general baking.

Using the Timer

To set a cooking time, turn the Timer Knob clockwise to the desired duration (up to 90 minutes). The oven will automatically turn off and emit a signal when the set time has elapsed. For continuous operation, turn the Timer Knob counter-clockwise past the '0' mark to the continuous operation symbol. The oven will remain on until manually turned off.

Using Accessories

The oven comes with a stainless steel grill, a rectangular stainless steel tray, and a round stainless steel tray (Ø37 cm). These can be placed on the internal guides at various levels depending on your cooking needs. The 37-liter capacity accommodates a 38 cm diameter plate.



Image: The included round stainless steel tray, suitable for pizzas and other round dishes.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

Cleaning the Oven

- Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
- The enameled inner walls are designed for easy cleaning. Wipe the interior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the enamel.
- Clean the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- The double glass door can be wiped clean with a damp cloth. Ensure no water seeps into the internal components.
- Do not immerse the oven in water or any other liquid.

Care for Accessories

Wash the stainless steel grill and trays in warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots or corrosion. They are not typically dishwasher safe unless specified by the manufacturer.

TROUBLESHOOTING

If you encounter issues with your G3Ferrari G10147 Rosto Titan 37 oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet; timer not set.	Check power cord connection; verify power supply; try a different outlet; ensure timer is set or in continuous mode.
Oven not heating to desired temperature (e.g., not reaching 300°C).	Incorrect temperature setting; faulty thermostat; external factors (e.g., cold room).	Ensure temperature knob is set correctly. Allow sufficient preheating time. If the oven consistently fails to reach the specified temperature range (40°C to 300°C), contact customer support.
Timer does not work.	Timer knob not set correctly; mechanical fault.	Ensure the timer knob is turned clockwise to set a specific time. If it still doesn't function, contact support.
Food cooks unevenly.	Incorrect rack position; overcrowding; door opened too frequently.	Adjust rack position; avoid overcrowding the oven; minimize opening the door during cooking.

If the problem persists after attempting these solutions, please contact customer support for further assistance. Do not attempt to repair the appliance yourself.

SPECIFICATIONS

Detailed technical specifications for the G3Ferrari G10147 Rosto Titan 37 Electric Oven:



Image: Front view of the G3Ferrari G10147 Rosto Titan 37 Electric Oven, illustrating its overall dimensions.

Feature	Detail
Brand	G3 Ferrari
Model Name	G10147 Rosto Titan 37
Model Number	G10147
Capacity	37 Liters
Wattage	1500 Watts
Product Dimensions (D x W x H)	44D x 51.7W x 32.7H centimeters

Feature	Detail
Material	Metal (body), Tempered Glass (door)
Color	Anthracite Grey
Control Type	Knob Control
Special Features	Timer, Inner Lamp, Ventilation, Double Glass for heat insulation, Enameled inner walls
Temperature Range	40°C to 300°C
Timer	90 minutes with acoustic signal and continuous operation option
Cooking Functions	Base, Grill, Combination
Included Components	1 Stainless Steel Grill, 1 Rectangular Stainless Steel Tray, 1 Round Stainless Steel Tray (Ø37 cm)
Power Supply	AC230V - 50/60Hz

WARRANTY INFORMATION

For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official G3Ferrari website. The return policy for this product is typically 30 days for refund or replacement, as per retailer terms.

CUSTOMER SUPPORT

Should you require technical assistance, spare parts, or have any questions regarding your G3Ferrari G10147 Rosto Titan 37 Electric Oven, please contact the manufacturer, Trevidea s.r.l., or your local authorized service center. You can typically find contact information on the manufacturer's official website or in the product packaging.

© 2024 G3 Ferrari. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B095CBY2FL>

More documents and user manuals: <https://manuals.plus/>