

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TECKNET](#) /

› [TECKNET QWERTZ Wireless Keyboard and Mouse Kit User Manual](#)

TECKNET TK-KM006

TECKNET QWERTZ Wireless Keyboard and Mouse Kit User Manual

Model: TK-KM006

1. INTRODUCTION

Thank you for choosing the TECKNET QWERTZ Wireless Keyboard and Mouse Kit. This manual provides essential information for setting up, operating, and maintaining your new wireless peripheral set. Please read this manual carefully before use to ensure optimal performance and longevity of your product.

The TECKNET wireless keyboard and mouse kit offers a reliable 2.4 GHz wireless connection, a comfortable QWERTZ layout keyboard, and a silent mouse, designed for use with PCs, laptops, and Smart TVs.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x TECKNET QWERTZ Wireless Keyboard
- 1 x TECKNET Wireless Mouse
- 1 x USB Receiver (stored in the mouse battery compartment)
- 1 x User Manual (this document)



The TECKNET wireless keyboard and mouse kit, featuring a compact QWERTZ layout keyboard, a comfortable wireless mouse, and a small USB receiver for wireless connectivity.

3. SETUP GUIDE

Follow these steps to set up your TECKNET wireless keyboard and mouse:

1. **Insert Batteries:** Open the battery compartments on both the keyboard and the mouse. Insert two AAA batteries into the keyboard and two AAA batteries into the mouse. Ensure correct polarity. (Batteries are not included).
2. **Retrieve USB Receiver:** The USB receiver is conveniently stored in the battery compartment of the mouse. Carefully remove it.
3. **Connect USB Receiver:** Plug the USB receiver into an available USB port on your computer, laptop, or Smart TV.
4. **Power On:** Turn on the keyboard and mouse using their respective ON/OFF switches. The devices should automatically connect to the receiver.
5. **Test Functionality:** Once connected, test the keyboard by typing and the mouse by moving the cursor and clicking. If they do not respond, refer to the Troubleshooting section.

2-IN-1 USB EMPFÄNGER

Tastatur und Maus teilen sich einen
Empfänger, Plug-and-Play



This image illustrates the 2-in-1 USB receiver, which allows both the keyboard and mouse to connect wirelessly to your device. It supports 2.4GHz wireless technology, providing a stable connection up to 15 meters, and offers plug-and-play functionality for easy setup.



The underside of the TECKNET mouse is shown, indicating the compartment for two AAA batteries (not included) and a convenient storage slot for the USB receiver.

4. OPERATING INSTRUCTIONS

4.1. Wireless Connection

The kit utilizes advanced 2.4 GHz wireless technology, providing a stable and reliable connection up to 15 meters (49 feet) from the USB receiver. This ensures a strong signal without delays or dropouts.

4.2. Multimedia Shortcut Keys

The keyboard is equipped with 12 multimedia shortcut keys (F1-F12) that provide quick access to various functions. To use these functions, press the **Fn** key simultaneously with the desired F-key.

- **Fn + F1:** Play/Pause
- **Fn + F2:** Previous Track
- **Fn + F3:** Next Track
- **Fn + F4:** Volume Up
- **Fn + F5:** Volume Down
- **Fn + F6:** Mute
- **Fn + F7:** Homepage
- **Fn + F8:** Search
- **Fn + F9:** Browser Favorites
- **Fn + F10:** Sleep Mode
- **Fn + F11:** Insert
- **Fn + F12:** Print Screen

12 MULTIMEDIA-TASTEN

- | | |
|--|------------------------------|
| ▶/ FN+F1 Wiedergabe/Pause | 🏠 FN+F7 Homepage |
| ◀◀ FN+F2 Vorheriger Titel | 🔍 FN+F8 Suche |
| ▶▶ FN+F3 Nächster Titel | 📁 FN+F9 Browser-Favoriten |
| 🔊 FN+F4 Lautstärke+ | 🔌 FN+F10 Ruhezustand |
| 🔊 FN+F5 Lautstärke- | Einfüg FN+F11 Einfügen |
| 🔊 FN+F6 Stummschaltung/
Stummschaltung aufheben | Druck FN+F12 Druckbildschirm |



This diagram details the 12 multimedia function keys available on the TECKNET keyboard, providing quick access to controls such as play/pause, track navigation, volume adjustment, mute, homepage, search, browser favorites, sleep mode, insert, and print screen.

4.3. Adjustable Mouse DPI

The wireless mouse features three adjustable DPI levels (800/1200/1600) to customize cursor sensitivity. Press the DPI button located on top of the mouse to cycle through the settings and find your preferred speed.




This image illustrates the adjustable DPI settings of the TECKNET wireless mouse, allowing users to switch between 800, 1200, and 1600 DPI for precise control.

4.4. Power Saving Mode

To conserve battery life, both the keyboard and mouse will automatically enter a sleep mode after 10 minutes of inactivity. To wake them up, simply press any key on the keyboard or move/click the mouse.

LANGE BATTERIE-LEBENSDAUER

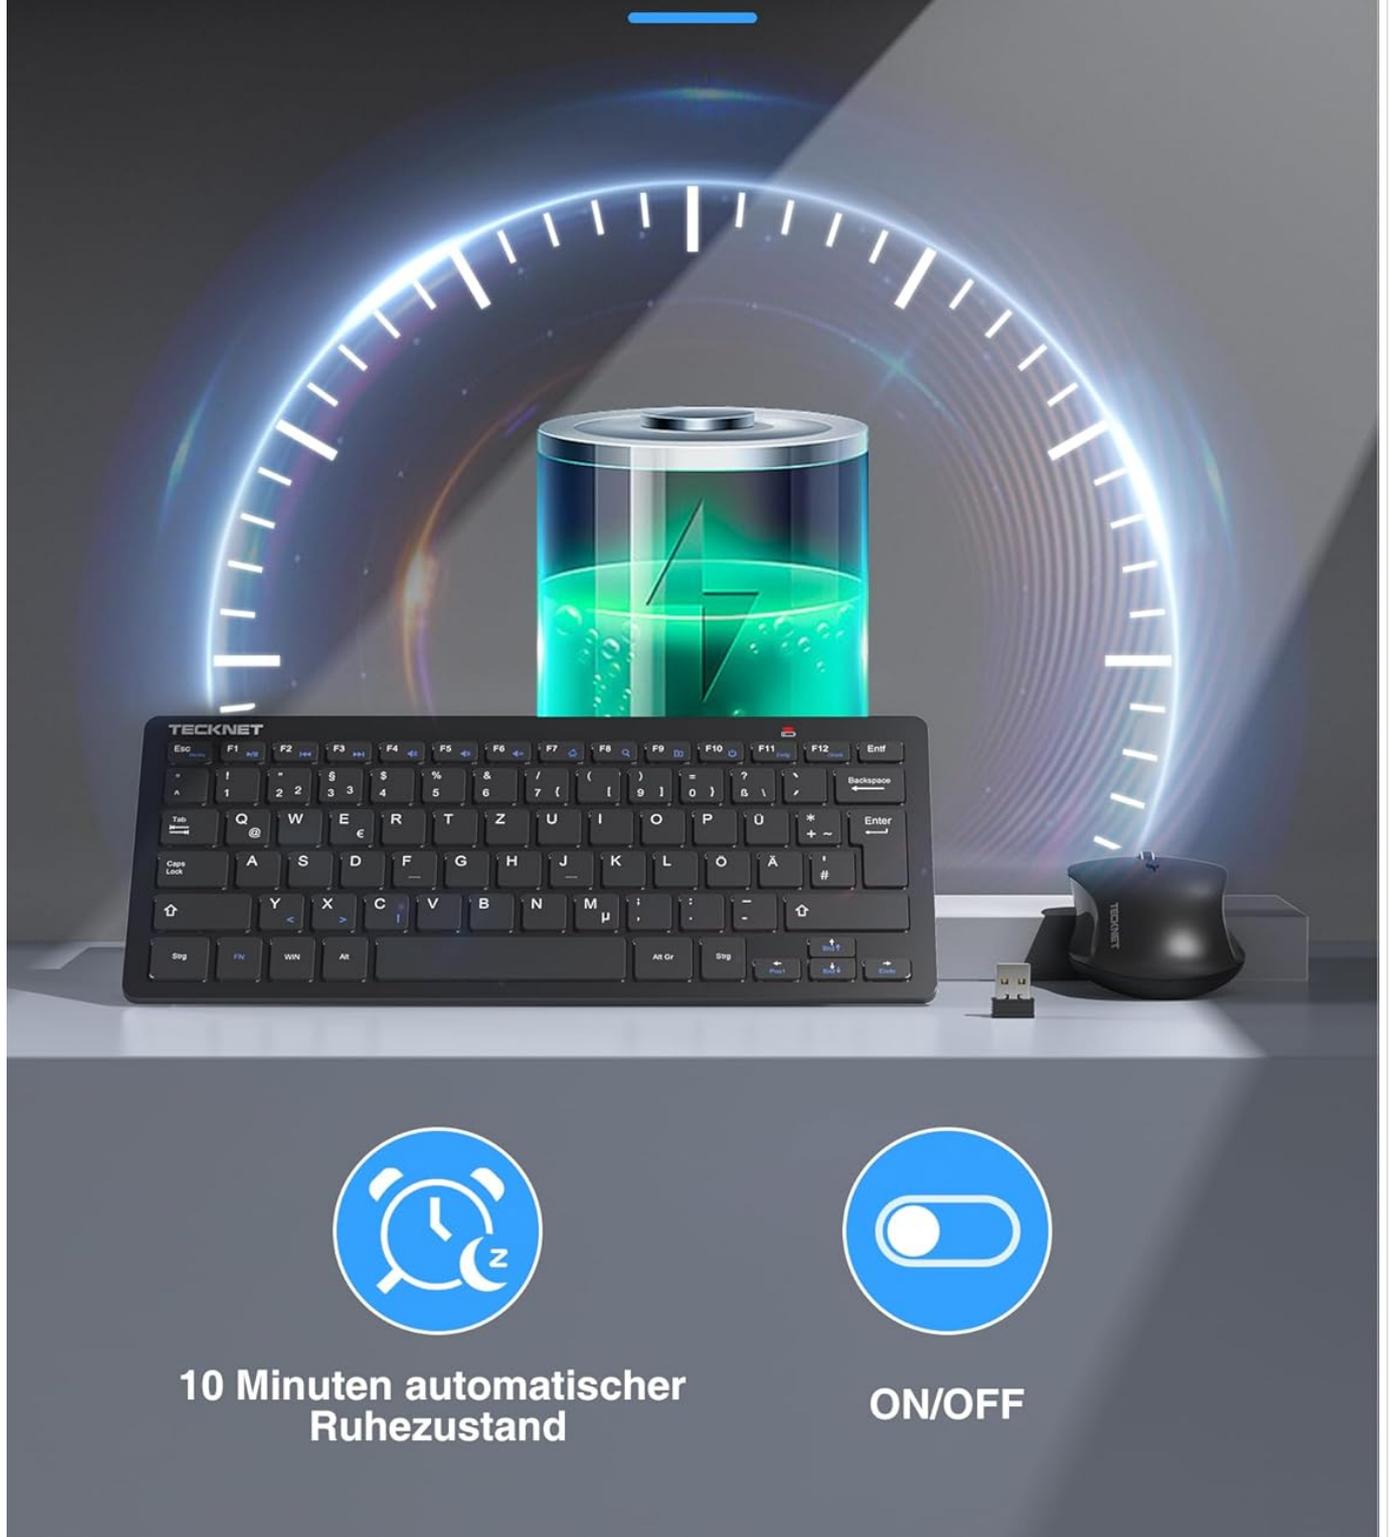

This image demonstrates the power-saving features of the TECKNET kit, including long battery life, an automatic sleep mode after 10 minutes of inactivity, and a manual ON/OFF switch to conserve power.

5. MAINTENANCE

5.1. Battery Replacement

When the keyboard or mouse stops responding or the indicator light flashes, it's time to replace the batteries. Use two fresh AAA batteries for each device. Ensure proper polarity when inserting new batteries.

5.2. Cleaning

To clean your keyboard and mouse, use a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials. Do not immerse the devices in water.

6. TROUBLESHOOTING

If you encounter issues with your TECKNET wireless keyboard and mouse kit, please refer to the following common solutions:

- **No Response from Keyboard/Mouse:**

- Ensure the keyboard and mouse are turned ON.
- Check if the batteries are inserted correctly and have sufficient charge. Replace them if necessary.
- Verify that the USB receiver is securely plugged into a working USB port on your device. Try a different USB port.
- Move the keyboard and mouse closer to the USB receiver to rule out range issues.
- Restart your computer or device.

- **Lag or Intermittent Connection:**

- Ensure there are no large metal objects or other wireless devices (like Wi-Fi routers, cordless phones) operating too close to the receiver, as they can cause interference.
- Try plugging the USB receiver into a different USB port, preferably one on the front of your computer or via a USB extension cable to bring it closer to the devices.

- **Mouse Cursor Jumps or is Inaccurate:**

- Clean the optical sensor on the bottom of the mouse.
- Ensure you are using the mouse on a suitable surface. Highly reflective or transparent surfaces may affect performance. A mouse pad is recommended.
- Adjust the DPI setting of the mouse to a different level.

7. SPECIFICATIONS

Brand	TECKNET
Model Number	TK-KM006
Color	Black
Connectivity Technology	2.4 GHz Wireless
Wireless Range	Up to 15 meters
Keyboard Layout	QWERTZ
Mouse DPI	800/1200/1600 (Adjustable)
Power Source	2 x AAA batteries (Keyboard), 2 x AAA batteries (Mouse) - Not included
Special Features	Portable, Silent Keys, Ergonomic Design, 12 Multimedia Shortcuts, Automatic Sleep Mode
Compatibility	Windows 2000/XP/7/8/10, Laptops, Desktops, Chrome Book, Smart TVs

8. WARRANTY AND SUPPORT

TECKNET products are designed and manufactured to the highest quality standards. This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official TECKNET website.

If you require technical support or have any questions regarding your product, please contact TECKNET customer service through the contact information provided on the official website or your purchase platform.