

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gorenje](#) /
- › [Gorenje GV651D60 Fully Integrated Dishwasher Instruction Manual](#)

Gorenje GV651D60

Gorenje GV651D60 Fully Integrated Dishwasher Instruction Manual

Model: GV651D60

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, installation, and maintenance of your Gorenje GV651D60 fully integrated dishwasher. Please read this manual thoroughly before using the appliance to ensure proper function and to prevent damage or injury. Keep this manual for future reference.

The Gorenje GV651D60 is a 60 cm wide, fully integrated dishwasher designed for 13 place settings. It features a memory function for favorite programs, a QuickIntensiv program, and a 3-in-1 function for detergent tablets.

SAFETY INFORMATION

- **Electrical Safety:** Ensure the appliance is properly grounded. Do not use extension cords or multiple adapters. Disconnect from power before any maintenance or cleaning.
- **Water Safety:** Ensure water connections are secure to prevent leaks. The maximum water supply temperature is 70 °C.
- **Child Safety:** Keep children away from the dishwasher, especially when it is operating or when the door is open. Detergents can be corrosive.
- **Detergent Use:** Use only detergents specifically designed for automatic dishwashers. Store detergents in a safe place, out of reach of children.
- **Loading:** Load sharp items (knives, forks) with the sharp ends down to prevent injury. Do not overload the dishwasher.
- **Maintenance:** Only qualified personnel should perform repairs. Do not attempt to repair the appliance yourself.

INSTALLATION AND SETUP

The Gorenje GV651D60 is a fully integrated dishwasher designed to be built into kitchen cabinetry. Proper installation is crucial for optimal performance and safety. Refer to the detailed installation instructions provided with the appliance for specific steps.

Dimensions



Image Description: This diagram illustrates the installation dimensions for the Gorenje GV651D60 dishwasher. Key measurements include:

- Appliance width: 596 mm
- Appliance depth: 556 mm
- Appliance height: Adjustable from 817 mm to 890 mm
- Minimum cabinet opening width: 600 mm
- Minimum cabinet opening depth: 570 mm
- Minimum cabinet opening height: 820-900 mm
- Base height when appliance height is 817 mm: 57-157 mm
- Base height when appliance height is 890 mm: 130-230 mm
- Mounting at higher position possible at door height from 730-760 mm.

These measurements are critical for ensuring the dishwasher fits correctly into your kitchen unit.

Pre-Installation Checks

- Verify that the electrical supply meets the appliance requirements (230 Volt).

- Ensure water inlet and drain hoses are accessible and correctly sized.
- Prepare the cabinet opening according to the dimensions provided.

OPERATING INSTRUCTIONS

Control Panel Overview

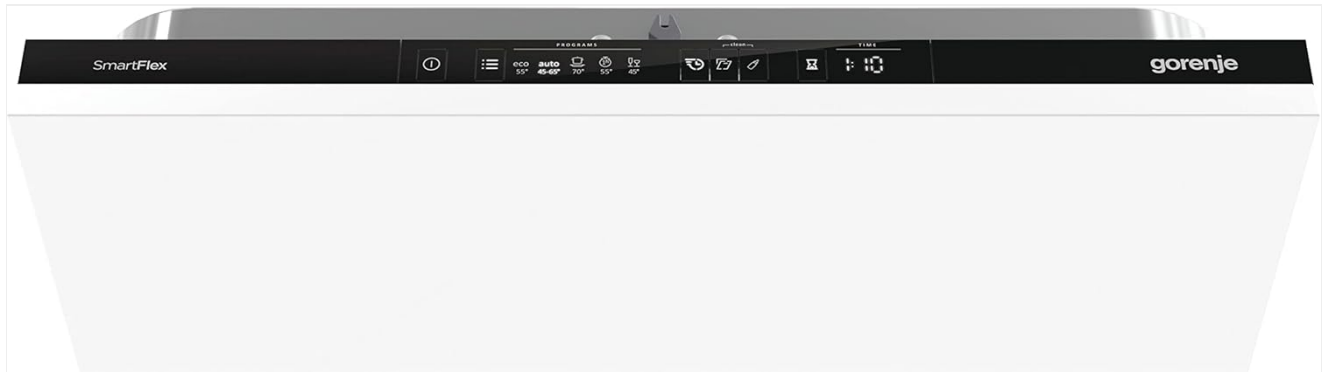


Image Description: This image displays the top-mounted control panel of the Gorenje GV651D60 fully integrated dishwasher. The panel features a black background with white icons and text, and a red LED display. From left to right, visible elements include:

- "SmartFlex" branding.
- Power button (circle with vertical line).
- Program selection button (three horizontal lines).
- Program indicators: ECO (55°), Auto (45-60°, 70°), and other icons for intensive, crystal glass, and 1-hour programs.
- Function buttons for features like delay start, 3-in-1 function, and SpeedWash.
- Red LED display for time remaining or delay start.
- "gorenje" brand logo on the far right.

The control panel is designed for intuitive program selection and function activation.

Loading the Dishwasher



Image Description: This image shows the interior of the Gorenje GV651D60 dishwasher with its racks pulled out, ready for loading. The interior is stainless steel.

- **Upper Basket:** Features a wide grid bottom, plastic handle, foldable wine glass holders (left and right), standard knife holder, and glass holders. It is height-adjustable.
- **Lower Basket:** Includes a wide grid bottom, plastic handle, and foldable/divisible rear pin rows for flexible loading of larger items.
- **Cutlery Basket:** A dedicated basket for cutlery is present.

The design allows for flexible loading of various dishware types, accommodating up to 13 place settings.

For optimal cleaning and drying results, load dishes according to the following guidelines:

- Scrape off large food particles before loading.
- Place glasses, cups, and smaller items in the upper basket.

- Place plates, bowls, and larger items in the lower basket.
- Ensure items do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for forks and spoons, and handles up for knives to ensure safety.

Program Selection

The GV651D60 offers a range of programs to suit different washing needs:

- **Intensive Program:** For heavily soiled dishes, pots, and pans. (Temperature options: 70/65/55/45/35 °C)
- **Automatic Programs:** The dishwasher automatically adjusts water consumption and temperature based on the soil level.
- **Crystal Glass Program:** Gentle washing for delicate glassware.
- **ECO Program:** Energy-saving program for normally soiled dishes. (Water consumption: 9.9 L, Energy consumption: 0.77 kWh, Duration: 205 min)
- **1-Hour Program:** For lightly soiled dishes requiring a quick wash.
- **QuickIntensiv Program:** A fast and intensive wash cycle.
- **SpeedWash:** Reduces the duration of selected programs.
- **Favorite Program (Memory Function):** Allows you to save and quickly access your most frequently used program settings.

Special Functions

- **3-in-1 Function:** Optimizes washing performance when using multi-tab detergents.
- **Start Delay:** Allows you to postpone the start of a wash cycle for up to 24 hours.
- **Extra Hygiene:** Provides an enhanced hygienic wash.
- **TotalDry (Automatic Door Opening):** At the end of the drying cycle, the dishwasher door automatically opens slightly to release steam and improve drying results.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning the Filters:** The dishwasher features a self-cleaning filter. However, it is recommended to periodically check and clean the filter system to remove any food debris. Refer to the full manual for detailed instructions on filter removal and cleaning.
- **Cleaning the Spray Arms:** Periodically check the spray arm nozzles for blockages and clean them if necessary.
- **Adding Salt and Rinse Aid:** Monitor the indicator lights for salt and rinse aid and refill as needed.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior Cleaning:** Run a self-cleaning program or a hot wash cycle with a dishwasher cleaner periodically to prevent odors and limescale buildup.

TROUBLESHOOTING

Before contacting customer service, consult the following table for common issues and their solutions. The dishwasher is equipped with a full fault diagnosis system.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; fuse blown.	Check power connection; ensure door is latched; check household fuse box.
Dishes are not clean	Improper loading; spray arms blocked; insufficient detergent; clogged filters.	Reload dishes correctly; ensure spray arms can rotate freely; use correct amount of detergent; clean filters.
Water remains in the dishwasher	Drain hose kinked or blocked; drain pump filter clogged.	Check and straighten drain hose; clean drain pump filter.
Unpleasant odors	Food residue in filters or interior; infrequent use.	Clean filters and interior thoroughly; run a self-cleaning program or hot wash with dishwasher cleaner.
Error code displayed	Specific malfunction detected by the fault diagnosis system.	Refer to the full user manual for specific error code meanings and solutions. If the issue persists, contact customer service.

The appliance also features an overflow protection system and water level sensor for added safety and performance.

SPECIFICATIONS

Feature	Detail
Model Number	GV651D60
Brand	Gorenje
Installation Type	Built-in (Fully Integrated)
Product Dimensions (WxDxH)	59.6 x 55.6 x 81.7 cm
Weight	29.9 kg
Capacity	13 Place Settings
Energy Efficiency Class (New)	D
Airborne Acoustical Noise Emission Class	C
Noise Level	45 Decibels
Water Consumption (Eco Program)	9.9 Liters/cycle
Energy Consumption (Eco Program)	0.77 kWh/cycle
Energy Consumption (100 cycles)	77 kWh
Program Duration (Eco Program)	205 minutes
Max. Water Supply Temperature	70 °C
Voltage	230 Volt
Control Type	Fully Integrated Buttons, SensorTouch
Display Type	Red LED
Interior Material	Stainless Steel

Feature	Detail
Special Features	Self-cleaning filter, Memory function, QuickIntensiv, 3-in-1 function, TotalDry (Automatic door opening), Water level sensor, Clear water sensor, Overflow protection.

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or contact Gorenje customer support. Keep your proof of purchase for any warranty claims.

If you encounter issues that cannot be resolved using the troubleshooting guide, please contact Gorenje customer service for assistance. Ensure you have your model number (GV651D60) and serial number ready when contacting support.