

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Inateck](#) /

› Inateck PA1001 Rechargeable Personal Alarm User Manual

Inateck PA1001-WBP

Inateck PA1001 Personal Alarm User Manual

Model: PA1001-WBP

PRODUCT OVERVIEW

The Inateck PA1001 is a compact and portable personal alarm designed for self-defense and emergency signaling. It features a loud 130dB alarm, a built-in LED light, and is rechargeable via USB. This manual provides detailed instructions on how to use and maintain your personal alarm.



Image: A set of three Inateck PA1001 personal alarms in different colors (pink, white, blue) along with their respective USB charging cables. Each alarm features an "SOS" button and a small LED indicator.

ínateck

PA1001



Allarme Personale

Per un senso di totale sicurezza

Image: A detailed view of the Inateck PA1001 personal alarm, highlighting its compact design and the prominent SOS button. The alarm is shown in a light blue color.

PACKAGE CONTENTS

- Inateck PA1001 Personal Alarm (3 units)
- USB Charging Cables (3 units)
- User Manual (this document)

SETUP

Initial Charging

Before first use, fully charge the personal alarm. The device comes with a built-in rechargeable lithium-ion battery.

1. Locate the USB charging port on the side of the alarm.
2. Connect one end of the provided USB charging cable to the alarm and the other end to a standard USB power adapter (not included) or a computer's USB port.
3. The LED indicator light will illuminate during charging. Once fully charged, the light may change color or turn off, depending on the model. A full charge typically takes approximately 30-60 minutes.



Rechargeable

6 Months Standby
after full charge

Image: A blue Inateck PA1001 personal alarm connected to a USB charging cable, illustrating the charging process. The image also shows the back of the alarm with product details.

OPERATING INSTRUCTIONS

Activating the 130dB Alarm

The Inateck PA1001 offers two methods to activate the loud 130dB alarm:

1. Method 1: Double-Press SOS Button

Quickly press the "SOS" button on the front of the alarm twice. The alarm will sound immediately.

2. Method 2: Pull the Activation Pin

Pull the metal ring (activation pin) located at the top of the alarm away from the main body. The alarm will sound instantly.

The alarm sound can last for over an hour. To stop the alarm, reinsert the activation pin into the alarm body or press the "SOS" button once if activated by double-press.

130dB Alarm Sound

Rescue you from mess



1 Push twice SOS button



2 Pull once the ring



Image: An illustration demonstrating the two primary methods for activating the personal alarm: by quickly pressing the SOS button twice, and by pulling the metal ring (activation pin) from the device.



Image: A visual guide showing two hands interacting with the alarm. One hand is shown pressing the SOS button, and the other is pulling the activation ring, illustrating the dual activation methods.



Image: A scenario depicting a woman walking in a dimly lit environment, with graphic elements indicating a loud 130dB alarm sound emanating from the personal alarm, designed to deter potential threats.

Using the LED Emergency Light

The Inateck PA1001 is equipped with a bright LED light that can be used as a small flashlight or an SOS flash light.

- **To turn on the light:** Press the "SOS" button once.
- **To activate SOS flashing:** Press the "SOS" button a second time while the light is on.
- **To turn off the light:** Press the "SOS" button a third time.

The LED light can provide illumination for over two hours on a full charge.



Image: A hand holding the personal alarm, demonstrating its use as a flashlight to illuminate a dark pathway, highlighting its utility in low-light conditions.



Image: A three-panel illustration detailing the LED light's functionality: the first press turns the light on, the second press makes it flash (SOS mode), and the third press turns it off.

MAINTENANCE

Battery Level Reminder

The Inateck PA1001 features a low battery reminder function. When the battery level drops below 20%, the LED indicator light at the bottom of the device will flash intermittently. This indicates that the device needs to be recharged soon.

Low Battery Reminder

Breathing light means low battery below 20%



Breathing Light



Image: Three personal alarms displaying a "breathing light" at the bottom, indicating a low battery level (below 20%).

Controlla il livello della batteria in ogni momento

La spia luminosa indica che il livello della batteria è inferiore al 20%



Image: A visual representation of the LED indicator on the personal alarms, which allows users to check the battery level. The light indicates if the battery is below 20%.

Charging Guidelines

- Always use the provided USB charging cable.
- Avoid overcharging the device. Disconnect once fully charged.
- Store the device in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Alarm does not sound.	Low battery; activation pin not fully pulled; SOS button not pressed correctly.	Charge the device. Ensure the activation pin is fully removed or the SOS button is double-pressed quickly.
LED light does not turn on.	Low battery; button not pressed correctly.	Charge the device. Press the SOS button once firmly.
Device not charging.	Faulty cable; faulty power adapter; dirty charging port.	Try a different USB cable or power adapter. Clean the charging port gently.
Alarm sounds intermittently.	Activation pin not fully seated; internal issue.	Ensure the activation pin is fully inserted. If the problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	PA1001-WBP

Feature	Detail
Alarm Volume	130 dB
Battery Type	1 Lithium-Ion battery (included)
Voltage	3.7 Volts (DC)
Control Method	Touch (Button)
Product Dimensions	7.01 x 3.61 x 1.7 cm (2.76 x 1.42 x 0.67 inches)
Item Weight	140 grams (4.94 ounces)
LED Light Duration	Up to 2+ hours
Alarm Duration	Over 1 hour
Color Options	White, Pink, Blue

Safety Information

- Do not expose the device to extreme temperatures or direct sunlight.
- Keep out of reach of small children to prevent accidental activation or choking hazards.
- Do not immerse the device in water or other liquids.
- Avoid pointing the LED light directly into eyes.
- The 130dB alarm is very loud. Avoid prolonged exposure to the sound at close range to prevent hearing damage.
- Dispose of the battery according to local regulations.

Customer Support

For any questions, technical assistance, or warranty inquiries, please contact Inateck customer support through their official website or the retailer where the product was purchased.

You can visit the Inateck store on Amazon for more information:[Inateck Amazon Store](#)

© 2024 Inateck. All rights reserved.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B095GJ1H29>

More documents and user manuals: <https://manuals.plus/>