



Manuals.plus /

› VINABTY /

› VINABTY AA59-00630A Replacement Remote Control User Manual for Samsung TVs and Monitors

VINABTY AA59-00630A

VINABTY AA59-00630A Replacement Remote Control User Manual

Model: AA59-00630A

INTRODUCTION

This manual provides essential information for the VINABTY AA59-00630A replacement remote control. This remote is designed to function as a direct replacement for various Samsung TV and monitor models, including those originally compatible with remote models AA59-00630A, BN63-09299A, TM-1240, BN59-01301A, and BN59-01289A.

It offers standard remote control functionalities for power, volume, channel selection, menu navigation, and source input. Please refer to the compatibility list in the specifications section to confirm your device is supported.



Figure 1: Overview of the AA59-00630A remote control and its compatibility.

SETUP

The VINABTY AA59-00630A remote control is designed for immediate use without complex programming. Simply install the batteries, and it should function with compatible devices.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Batteries are not included with the remote control.



Figure 2: The remote control is ready for use after battery installation.

OPERATING INSTRUCTIONS

This remote control provides standard functions for your Samsung TV or monitor. Point the remote directly at the device's infrared receiver for optimal performance.

Key Functions:

- **Power (Red Button):** Turns the TV/monitor on or off.
- **Source:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes channels.
- **MUTE:** Silences the audio.
- **MENU:** Accesses the device's main menu.
- **INFO:** Displays information about the current program or input.
- **Navigation Buttons (Up/Down/Left/Right/Enter):** Used for menu navigation and selection.
- **RETURN:** Returns to the previous screen or menu.

- **EXIT:** Exits the current menu or application.
- **Color Buttons (Red, Green, Yellow, Blue):** Provide access to specific functions within certain applications or menus, as indicated on your screen.
- **3D:** Activates or deactivates 3D mode (if supported by your display).
- **LOCK:** May lock certain functions or channels depending on your device's settings.
- **Play/Pause/Stop/Fast Forward/Rewind:** Control media playback.



Figure 3: The remote offers long-range control and requires no setup.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not working.	<p>Batteries: Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA batteries.</p> <p>Line of Sight: Ensure there is a clear path between the remote control and the TV/monitor's infrared sensor. Remove any obstructions.</p> <p>Distance: Operate the remote within its effective range (up to 33 feet).</p>
Some buttons do not work.	<p>Compatibility: Not all functions may be supported by every compatible TV/monitor model, especially older or specialized displays. Refer to your device's original manual for specific feature support.</p> <p>Device State: Some functions are only active in specific menus or modes (e.g., media control buttons during video playback).</p>
Remote works intermittently.	<p>Low Batteries: Replace batteries.</p> <p>Interference: Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.</p>

SPECIFICATIONS

- **Brand:** VINABTY
- **Model Name:** AA59-00630A
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** Approximately 33 feet (10 meters)
- **Color:** Black
- **Material:** ABS (Environmentally friendly)
- **Dimensions (L x W x H):** 5" x 1.9" x 0.5" (12.7 cm x 4.8 cm x 1.27 cm)
- **Weight:** 0.07 Kilograms (approximately 2.47 ounces)
- **Compatible Devices:** Samsung Televisions and Monitors
- **Compatible Remote Models:** AA59-00630A, BN63-09299A, TM-1240, BN59-01301A, BN59-01289A
- **Partial List of Compatible Samsung TV/Monitor Models:**
 - MD32B, MD40B, MD46B, MD55B
 - ME32B, ME40B, ME46B, ME55B, ME65B, ME75B
 - UE46A, UE55A, SL46B
 - 320BX, 320MP, 320MXN, 320TSN, 400BX, 400DX, 400FP, 400TS, 400UX, 400UXN, 460BX, 460DR, 460DX, 460FP, 460TS, 460UX, 460UXN, 550DX, 700DX, 700TSN
 - UD22B, UD46A, UD55A, OL46B
 - UN32J4500A, UN32J4500AFXZA
 - T24B350ND, T27B350ND, Syncmaster TB350, Syncmaster TB300 Series 3, Syncmaster T19B300, Syncmaster T22B350, Syncmaster T24B350, Syncmaster T27B350
 - NU6950 Series (e.g., UN43NU6950, UN50NU6950, UN55NU6950, UN65NU6950, UN75NU6950 and their variations like -B, -F, -BXZA, -FXZA)
 - LH series models (e.g., LH46MEBPLGC/NG, LH32MEBPLGC/XJ, LH46UEAPLGC/XS,

LH55UEAPLGC/XY, LH55UEAPLGC/NG, LH46UEAPLGC/XJ, LH46UEPLGC/EN,
LH32MEBPLGC/XY, LH32MEBPLGC/NG, LH46UEPLGC/NG, LH40MEBPLGC/XY,
LH46MEBPLGC/EN, LH46MEBPLGC/XY, LH55MEBPLGC/XY, LH55MEBPLGC/EN,
LH55MEBPLGC/XS, LH40MEBPLGC/NG, LH55UEPLGC/XY, LH46UEPLGC/ZA, LH55UEPLGC/XJ,
LH32MEBPLGC/EN, LH46UEAPLGC/NG, LH46MEBPLGC/HD, LH55UEAPLGC/EN,
LH55UEPLGC/ZA, LH46UEPLGC/XY, LH46MEBPLGC/XJ, LH55MEBPLGC/XJ,
LH55MEBPLGC/EN, LH55MEBPLGC/NG, LH40MEBPLGC/EN, LH46UEAPLGC/EN,
LH55UEPLGC/EN, LH55UEAPLGC/XJ, LH40MEBPLGC/XJ, LH46UEAPLGC/XY,
LH55UEPLGC/NG)





Figure 4: Dimensions of the AA59-00630A remote control.

WARRANTY AND SUPPORT

As a replacement remote control, specific warranty terms may vary. Please refer to the seller or your purchase documentation for details regarding warranty coverage and return policies.

For technical support or further assistance, please contact the seller directly through your purchase platform. Ensure you have your order details available when contacting support.