

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control User Manual for Sony RM-SCU35 Series

Easytry123 RM-SCU35

Easytry123 Replacement Remote Control User Manual

FOR SONY MICRO HI-FI STEREO SOUND STATION SYSTEMS (RM-SCU35 SERIES)

Introduction

This document provides instructions for the Easytry123 replacement remote control, designed for use with various Sony Micro Hi-Fi Stereo Sound Station Systems. This remote is intended to replace original Sony remote controls such as the RM-SCU35. Please note that while this replacement remote offers core functionalities, some advanced or specific functions of your original system's remote may not be fully supported.

Compatibility

This replacement remote control is compatible with the following Sony Micro Hi-Fi Stereo Sound Station System models:

- RM-SCU35
- CMT-HX3R
- CMT-HX3
- CMT-HX30R
- HCD-HX30
- RM-SCU35B
- CMT-HX30
- HCD-HX30R

Ensure your system's model number is listed above for proper functionality.

Package Contents

The package typically includes:

- 1 x Easytry123 Replacement Remote Control

Note: Batteries and a printed manual are not included with this product.

Setup: Battery Installation

The remote control requires two (2) AAA batteries for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



Image: Back view of the remote control, illustrating the battery compartment. The cover is shown slightly open, revealing the space for two AAA batteries. This image helps users identify where to insert batteries.

Operating Instructions

This remote control uses infrared (IR) technology. Point the remote directly at your Sony Micro Hi-Fi Stereo Sound Station System for optimal performance.

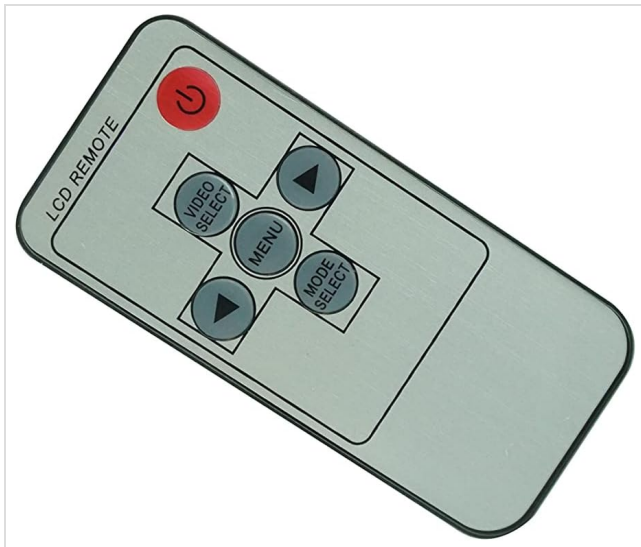


Image: Front view of the replacement remote control, displaying its button layout. Key buttons visible include Power (red circle), Video Select, Menu, Mode Select, and navigation arrows. This image assists users in identifying and using the remote's functions.

Key Functions:

- **Power Button (Red Circle):** Turns the system on or off.
- **Directional Arrows (Up, Down, Left, Right):** Used for navigating menus and adjusting settings.
- **MENU Button:** Accesses the system's main menu.
- **VIDEO SELECT Button:** Switches between video input sources (if applicable to your system).
- **MODE SELECT Button:** Cycles through different operating modes (e.g., CD, Tuner, USB, Aux).
- *Other buttons may correspond to functions on your original remote. Test each button to determine its specific action*

on your system.

For detailed operation of your Sony Micro Hi-Fi Stereo Sound Station System, please refer to the original user manual provided with your audio system.

Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.

Troubleshooting

Problem	Possible Cause	Solution
Remote is not working.	• Batteries are dead or inserted incorrectly. • Remote is not pointed at the system's IR receiver. • Obstruction between remote and system. • Remote is incompatible with the system.	• Replace batteries with new AAA batteries, ensuring correct polarity. • Point the remote directly at the system. • Remove any objects blocking the signal path. • Verify your system model is listed in the compatibility section.
Some functions do not work.	• The replacement remote may not support all functions of the original. • Specific system settings or modes are required.	• This is expected for some replacement remotes. Focus on core functions. • Consult your system's original manual for specific function requirements.

Specifications

- **Brand:** Easytry123
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Sony Micro Hi-Fi Stereo Sound Station Systems (RM-SCU35 series)

Specifications are subject to change without notice.

Warranty and Support

For warranty information or technical support regarding this Easytry123 replacement remote control, please contact the seller directly through your purchase platform. Keep your purchase receipt as proof of purchase.

This manual does not provide warranty information for the original Sony audio system.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B095H8KPZG>

More documents and user manuals: <https://manuals.plus/>