

Easytry123 HCD-GTR555

Remote Control for Sony HCD-GTR555 HCD-GTZ4i MHC-GTZ5 HCD-GTR777 MHC-GTR555 MHC-GTR888 HCD-GTR888 MHC- GTR6 HCD-GTR6 HCD-GTR6B Mini Shelf Hi-Fi Component Audio System

INSTRUCTION MANUAL

1. Introduction

This manual provides essential information for the setup, operation, and maintenance of your new Easytry123 replacement remote control. This remote is designed to be compatible with various Sony Mini Shelf Hi-Fi Component Audio Systems, including models such as HCD-GTR555, HCD-GTZ4i, MHC-GTZ5, HCD-GTR777, MHC-GTR555, MHC-GTR888, HCD-GTR888, MHC-GTR6, HCD-GTR6, and HCD-GTR6B. Please note that as a replacement unit, some advanced or specific functions of your original remote may not be fully supported.

2. Setup

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

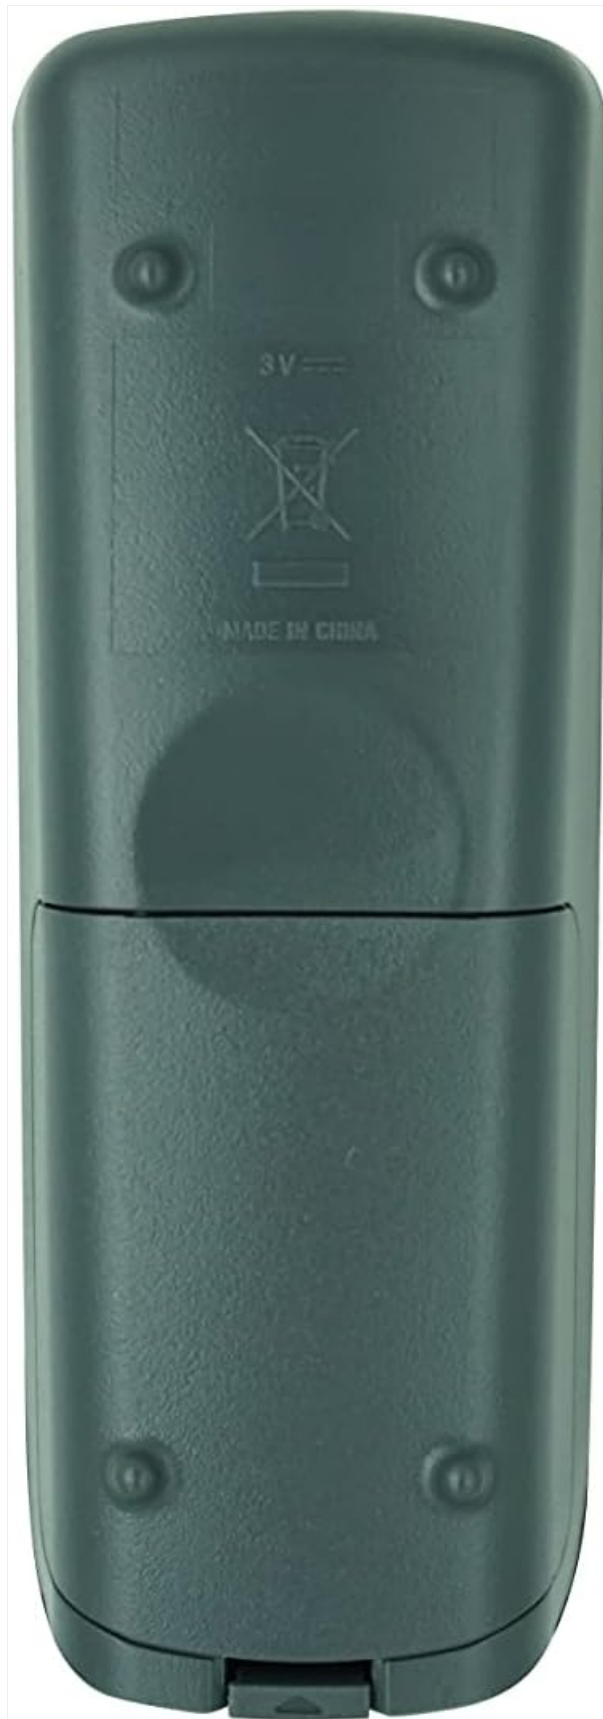


Figure 2.1: Back view of the remote control, highlighting the battery compartment.



Figure 2.2: Open battery compartment with batteries inserted.

3. Operating Instructions

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote and your audio system's IR receiver for proper functionality.

3.1 Button Functions Overview

Below is an image of the remote control with a general description of its buttons. Please note that specific button functions may vary slightly depending on your audio system model.



Figure 3.1: Front view of the remote control.

- **I/O (Power):** Turns the audio system on or off.
- **DISPLAY:** Changes the information displayed on the system's screen.
- **CLOCK/TIMER SET:** Used for setting the clock and timer functions.
- **TUNER MEMORY:** Stores radio station presets.
- **PLAY MODE:** Selects playback modes (e.g., normal, shuffle, repeat).
- **REPEAT / FM MODE:** Toggles repeat playback or switches FM radio mode.
- **USB:** Selects the USB input source.
- **CD:** Selects the CD input source.
- **TUNER FUNCTION:** Cycles through tuner functions.
- **BAND:** Switches between AM and FM bands.
- **VOLUME +/-:** Adjusts the master volume level.
- **EQ:** Cycles through equalizer presets.
- **CLEAR:** Clears current selections or entries.
- **ENTER:** Confirms selections.
- **DISC SKIP / USB SELECT:** Skips discs or selects USB content.
- **Navigation Buttons (Up, Down, Left, Right):** Used for menu navigation.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Backward):** Standard media playback controls.

- **SLEEP:** Activates the sleep timer function.

Note: As a replacement remote, some functions may not work identically to your original remote. Refer to your audio system's original manual for detailed function descriptions.

4. Maintenance

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents, as these may damage the surface or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the audio system's IR receiver.
 - Make sure you are within the effective operating range of the remote.
- **Some functions do not work:**
 - As a replacement remote, it may not support all functions of your original audio system remote. This is common for universal or replacement remotes.
 - Verify that your audio system model is listed as compatible with this remote.

6. Specifications

- **Brand:** Easytry123
- **Compatible Devices:** Sony Mini Shelf Hi-Fi Component Audio Systems (e.g., HCD-GTR555, HCD-GTZ4i, MHC-GTZ5, HCD-GTR777, MHC-GTR555, MHC-GTR888, HCD-GTR888, MHC-GTR6, HCD-GTR6, HCD-GTR6B)
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Batteries:** 2 x AAA (not included)

7. Warranty and Support

This product is manufactured by Easytry123. While specific warranty details are not provided with the product, a 30-day return or replacement policy is typically available from the point of purchase. For any issues or inquiries, please contact the seller or refer to the return policy of the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question