



Manuals.plus /

› RollEase /

› RollEase Acmeda Automate ARC Paradigm 15 Channel Hand Held Remote Control User Manual

RollEase MTRF-REM-15

RollEase Acmeda Automate ARC Paradigm 15 Channel Hand Held Remote Control

Model: MTRF-REM-15

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your RollEase Acmeda Automate ARC Paradigm 15 Channel Hand Held Remote Control. This remote is designed for precise control of roller shades, offering advanced features like multi-channel operation, leveling control, and a touch-sensitive interface. Please read this manual thoroughly before using your remote control.

PRODUCT OVERVIEW

The RollEase AUTOMATE Paradigm remote controls feature a contemporary design with touch-sensitive buttons and a magnetic wall base. It offers 15 individual channels of control, plus a dedicated "0" channel for simultaneous control of all programmed shades.

Key Features

- 15 Channels of Control and Additional Channel "0" Controls All Channels Simultaneously
- Touch Sensitive - No Physical Buttons
- Controllable Positions: Open, Closed, Favorite and Leveling
- Leveling Function to stop shades at the same height
- Slim Wall Mount Magnetic Base

Components

The remote control unit typically includes:

- RollEase Acmeda Automate ARC Paradigm 15 Channel Remote Control
- Magnetic Wall Base



Image: Front view of the RollEase Acmeda Automate ARC Paradigm 15 Channel Remote Control, showcasing its sleek design and touch-sensitive interface.

AUTOMATE

Paradigm Remote Control



AUTOMATE | Paradigm remotes feature a contemporary design with touch sensitive controls. Available in single and fifteen channel models, Paradigm remotes are compatible with all ARC motors.

FEATURES:

- Available in single channel & Fifteen Channel.
- Touch sensitive buttons.
- Levelling control (15 channel remote).
- LCD display (15 Channel remote).
- Hide unused channel function.
- Slim Magnetic wall mount.

INSTRUMENT-REMOTE SEPT 2016



Image: An illustration highlighting the remote's key attributes: Level Control, Touch Sensitive interface, and 433 MHz radio frequency communication.

Battery Installation

The remote control requires one CR2430 battery (not included).

1. Locate the battery compartment on the back of the remote.
2. Gently slide open the battery cover.
3. Insert one CR2430 battery, ensuring the positive (+) side faces upwards.
4. Close the battery cover securely until it clicks into place.

Pairing with Shades

Refer to your specific roller shade motor's instruction manual for detailed pairing procedures. Generally, the process involves:

1. Placing the motor in pairing mode (often by pressing a button on the motor).
2. Pressing a specific button combination on the remote control to initiate pairing.
3. Confirming successful pairing (e.g., motor jog or audible click).

Mounting the Wall Base

The remote comes with a slim magnetic wall base for convenient storage and easy access.

1. Choose a suitable location for the wall base, ensuring it is within easy reach and provides a clear signal path to your shades.
2. Use appropriate screws (not included) to secure the wall base to the desired surface.
3. The remote will magnetically attach to the base for secure storage.



Image: The remote control magnetically attached to its slim wall mount base, demonstrating how it can be stored.

OPERATING INSTRUCTIONS

Basic Control Functions

The remote features touch-sensitive controls for intuitive operation:

- **UP Arrow:** Moves the shade upwards.
- **DOWN Arrow:** Moves the shade downwards.
- **STOP/Favorite Button (Center):** Stops the shade at its current position or moves it to a pre-set favorite position with a momentary press.
- **CH (Channel) Buttons:** Use the left and right arrow buttons next to "CH" to cycle through channels 1-15 and the "0" channel.



Image: The remote's LCD display showing "5", indicating the selected channel for control.

Channel Selection

The remote supports 15 individual channels (1-15) and a special "0" channel.

- To select a channel, press the left or right arrow buttons next to "CH" until the desired channel number appears on the LCD display.
- The "0" channel controls all programmed shades simultaneously. This channel is not programmable and acts as a master control.

Setting Limits and Favorite Positions

The remote allows you to program the upper and lower limits of your shades, as well as a favorite intermediate position. Refer to your specific motor's programming instructions for detailed steps on how to set these positions.

Hide Feature

The hide feature allows you to conceal unused channels, simplifying navigation and reducing scrolling. This feature helps in managing remotes with fewer active channels.

- To activate the hide feature, consult the detailed programming guide for your specific remote model.
- Note: You cannot hide individual channels in the middle of a range (e.g., hide channels 5-10 while keeping 1-4 and 11-15 active). You can, however, hide all channels after a specific channel (e.g., selecting channel 2 to be hidden will also hide channels 2 through 15).

Lock Feature

The lock feature prevents accidental or unwanted changes to already programmed shades. Consult your remote's programming guide for activation and deactivation steps to secure your shade settings.

Leveling Control

The Leveling Control feature enables precise, simultaneous positioning of multiple shades on the same remote-control channel, ensuring perfect alignment across a group of shades.



Image: The remote's LCD display showing "15", indicating the highest individual channel, alongside the Automate Radio Communication (ARC) logo.

MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface or internal components.

Battery Replacement

When the remote's display dims, becomes unresponsive, or the range decreases, it is likely time to replace the CR2430 battery. Follow the battery installation steps outlined in the "Setup" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or low battery	Replace the CR2430 battery.
Remote not controlling shades	Not paired correctly / Out of range / Incorrect channel selected	Re-pair the remote with the shade motor according to motor instructions. Ensure you are within the remote's operating range. Verify the correct channel is selected on the remote's display.
Shades not stopping at desired position	Limits not set or incorrectly set	Re-program the upper and lower limits of the shade using the remote, following your motor's programming guide.
Display is blank or dim	Low battery	Replace the CR2430 battery.

SPECIFICATIONS

Feature	Detail
Model	MTRF-REM-15
Brand	RollEase
Channels	15 individual + 1 (Zero Channel)
Connectivity Technology	Radio Frequency (433 MHz)
Compatible Devices	Roller Shades (with ARC motors)
Battery Type	1 x CR2430 (Alkaline, not included)
Dimensions	Approximately 14 x 5.7 x 2.2 cm
Weight	Approximately 140 g
Special Features	Touch Sensitive, Leveling Control, Hide Feature, Lock Feature, Magnetic Wall Base

WARRANTY AND SUPPORT

For warranty information and technical support, please contact RollEase customer service or visit their official website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, please refer to the contact information provided with your product packaging or visit the RollEase website: www.rolleaseacmeda.com



Image: The official RollEase Acmeda logo.