

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN HTR-A10E Remote Control User Manual for Haier LED LCD TVs

PERFASCIN HTR-A10E

PERFASCIN HTR-A10E Remote Control User Manual

For Haier LED LCD TVs

1. INTRODUCTION

This manual provides instructions for the PERFASCIN HTR-A10E replacement remote control. This remote is designed to function as a direct replacement for your original Haier TV remote, requiring no programming or pairing.

Compatible TV Models:

- LE50K6000SF
- LE24K6500SA
- LE32K6500SA
- LE43K6500SA
- HTR-A10
- LE24K6000S
- LE32K6000S
- LE32N1620W
- LE32N1620
- LE40K6000SF
- LE43K6000SF

This list is not exhaustive. If your specific Haier TV model is not listed, please refer to the support section for assistance.

2. SETUP: BATTERY INSTALLATION

The HTR-A10E remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to remove it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Image: Back of the remote control with the battery compartment open, showing correct AAA battery placement.

3. OPERATING THE REMOTE CONTROL

Once batteries are installed, the remote control is ready for use. No programming or pairing is required.

- 1. Point the remote control directly at your Haier LED LCD TV.
- 2. Press the desired function button (e.g., Power, Volume Up/Down, Channel Up/Down, Menu) to control your television.

Ensure there are no obstructions between the remote control and the TV's infrared sensor for optimal performance.

4. CARE AND MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for extended periods, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

5. TROUBLESHOOTING

Remote Control Not Working:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones.
- **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the TV's infrared sensor.
- **TV Power:** Confirm that your television is powered on and functioning correctly.
- **Remote Sensor:** Ensure the infrared emitter on the front of the remote is not obstructed or dirty.

If issues persist after performing these checks, please contact customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	HTR-A10E
Brand	PERFASCIN
Compatible Devices	Haier LED LCD Televisions
Special Feature	No Programming Required
Color	Black
Batteries Required	2 x AAA (UM-3/AAA/IEC)
Product Dimensions	7 x 2 x 0.65 inches

Item Weight	5.3 ounces
-------------	------------

7. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual, or if you are unsure whether this remote control is compatible with your specific TV model, please contact our customer support team.

When contacting support, please provide your TV's full model number for accurate assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question