

MEIRUBY M-13

MEIRUBY Electric Candle Lighter M-13 User Manual

Model: M-13

1. PRODUCT OVERVIEW

The MEIRUBY Electric Candle Lighter M-13 is a USB rechargeable, windproof, and splashproof arc lighter designed for various ignition needs. It provides a flameless electric arc for lighting candles, stoves, and other items, offering an alternative to traditional lighters.

Key Features:

- **Windproof and Splashproof Design:** Ensures reliable operation in various weather conditions.
- **USB Rechargeable:** Environmentally friendly and economical, eliminating the need for fuel refills.
- **Battery Indicator:** Displays real-time battery volume with LED lights.
- **Portable Design:** Slender form factor for easy handling and storage.
- **Safety Features:** Includes a safety switch and automatic power-off after 7-10 seconds of continuous use.



Figure 1: MEIRUBY Electric Candle Lighter M-13 showing its dimensions, LED battery indicator, arc pulse ignition, switch button, and USB charging port.

2. SETUP AND CHARGING

Initial Charge:

Before first use, fully charge the lighter. The device is shipped with a partial charge, but a full charge ensures optimal performance.

Charging Procedure:

1. Locate the USB charging port on the bottom of the lighter.
2. Connect the provided USB charging cable to the lighter's port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, wall adapter, power bank, car charger).
4. The LED battery indicators will illuminate during charging. All four LEDs will be solid when fully charged.

5. A full charge typically takes approximately 1-2 hours. Disconnect the lighter once fully charged.



Figure 2: The MEIRUBY Electric Candle Lighter being charged via a USB port, illustrating various compatible charging devices.

Note: Use a standard USB-A to USB-C cable for charging. Some newer USB-C to USB-C cables may not be compatible for charging this device.

3. OPERATING INSTRUCTIONS

Activating the Lighter:

1. **Safety Switch:** Locate the ON/OFF button (safety switch) on the side of the lighter. Slide this button to the "ON" position.
2. **Ignition Button:** Press and hold the ignition button (usually located above the safety switch) to generate the electric arc.
3. **Ignition:** Position the arc near the wick of a candle or other ignitable material. The arc will ignite the material.
4. **Automatic Shut-off:** The arc will automatically turn off after approximately 7-10 seconds of continuous use as a

safety measure. Release the ignition button to stop the arc sooner.

5. **Deactivating:** After use, slide the ON/OFF button to the "OFF" position to prevent accidental activation.



Figure 3: The MEIRUBY Electric Candle Lighter, illustrating its sleek design and controls.

Battery Indicator:

The four LED lights on the lighter indicate the battery charge level:

- **4 LEDs:** 100% charge
- **3 LEDs:** 75% charge
- **2 LEDs:** 50% charge
- **1 LED:** 25% charge (recharge soon)

4. MAINTENANCE

Cleaning:

- Ensure the lighter is turned OFF before cleaning.
- Use a soft, dry cloth to wipe the exterior of the lighter.
- For the arc electrodes, gently clean any residue with a dry cotton swab or a soft brush. Do not use water or liquid cleaners on the electrodes.

Storage:

- Store the lighter in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep out of reach of children.
- Ensure the safety switch is in the "OFF" position during storage.

Battery Care:

- To prolong battery life, avoid completely draining the battery frequently.
- Recharge the lighter when the battery indicator shows one LED.
- If storing for an extended period, charge the lighter to about 50% and recharge every few months to prevent deep discharge.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lighter does not produce an arc.	• Battery is low or depleted. • Safety switch is in the "OFF" position. • Ignition button not pressed correctly. • Electrodes are dirty or obstructed.	• Recharge the lighter fully. • Slide the safety switch to "ON". • Ensure the ignition button is fully pressed. • Clean the electrodes as described in the Maintenance section.
Lighter does not charge.	• Faulty USB cable or power source. • Incorrect USB cable type (e.g., USB-C to USB-C). • Charging port is dirty or damaged.	• Try a different USB cable and power source. • Ensure you are using a standard USB-A to USB-C cable. • Gently clean the charging port. If damaged, contact customer support.
Arc is weak or inconsistent.	• Low battery. • Dirty electrodes.	• Recharge the lighter. • Clean the electrodes.

6. SPECIFICATIONS

Feature	Detail
Brand	MEIRUBY
Model Number	M-13
Color	Silver
Material	Aluminum

Feature	Detail
Style	Electric
Fuel Type	Electric
Product Dimensions	8.3"L x 2.2"W x 0.65"Th
Item Weight	59 Grams (2.08 ounces)
UPC	765473219594

7. SAFETY INFORMATION

Please read and follow all safety instructions carefully to prevent injury or damage.

- Keep out of reach of children and pets.
- Do not touch the arc electrodes when the lighter is active.
- Do not expose to temperatures above 50°C (122°F) or direct sunlight for extended periods.
- Do not immerse in water or other liquids.
- Do not attempt to disassemble or modify the lighter.
- Do not use near flammable materials or gases.
- Ensure the safety switch is in the "OFF" position when not in use or when charging.



Figure 4: Overview of the MEIRUBY Electric Candle Lighter's upgraded technology and safety features, including high-temperature protection, leakage prevention, 10-second auto power-off, certified safe battery, and open circuit protection.

8. WARRANTY AND SUPPORT

Warranty Information:

MEIRUBY products are designed for quality and durability. This product comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. Please refer to the product packaging or contact MEIRUBY customer support for specific warranty terms and conditions.

Customer Support:

For any questions, concerns, or technical assistance, please contact MEIRUBY customer support. Contact information can typically be found on the product packaging or the official MEIRUBY website.

Please retain your purchase receipt for warranty claims.

9. PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Official product demonstration of the MEIRUBY Electric Candle Lighter, showcasing its features and ease of use.

© 2026 MEIRUBY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question