

[Manuals.plus](#) /

› [MEIRUBY](#) /

› MEIRUBY Electric Candle Lighter Instruction Manual

## MEIRUBY MEIRUBY M-13

# MEIRUBY Electric Candle Lighter Instruction Manual

Model: MEIRUBY M-13

## 1. PRODUCT OVERVIEW

The MEIRUBY Electric Candle Lighter is a modern, flameless, and windproof arc lighter designed for various ignition needs, including candles, BBQs, and camping. It features a rechargeable USB battery, eliminating the need for traditional fuel and offering an environmentally friendly alternative.



Image: The MEIRUBY Electric Candle Lighter in black, alongside its retail packaging, highlighting its sleek design.

## 2. SAFETY INFORMATION

Please read and understand all safety warnings before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Keep out of reach of children.
- Do not touch the arc when the lighter is active, as it can cause burns.
- Do not immerse the lighter in water or other liquids.
- Do not expose to temperatures above 50°C (122°F).
- Do not attempt to disassemble or modify the lighter.

- Ensure the lighter is turned off when not in use and during charging.
- Use only the provided USB charging cable or a compatible low-power charger.



Image: A diagram illustrating the upgraded technology and safety design, including an upgrade chip, high-temperature protection, effective leakage prevention, 10-second auto power-off, certified safe battery, and open circuit protection.

### 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x MEIRUBY Electric Candle Lighter
- 1 x USB Charging Cable
- 1 x Instruction Manual

### 4. PRODUCT FEATURES

- **Flameless Arc Ignition:** Generates an electric arc for ignition, eliminating the need for fuel or flame.

- **USB Rechargeable:** Built-in rechargeable battery, charged via a standard USB port.
- **Windproof & Splashproof:** Designed to operate effectively in various weather conditions.
- **LED Battery Indicator:** Four LED lights display the remaining battery charge (100%, 75%, 50%, 25%).
- **Safety Lock & Auto Shut-off:** Features an ON/OFF slide switch and a 7-second automatic power-off for safety.
- **Durable Material:** Constructed from Aluminium Alloy for longevity.



Image: A detailed view of the lighter, showing its dimensions (8.3"L x 0.65"Th), LED battery indicator, arc pulse ignition, ON/OFF slide switch, and USB charging port.

## 5. SETUP: CHARGING THE LIGHTER

Before first use, fully charge the lighter. The lighter cannot be operated while charging.

1. Locate the USB charging port at the bottom of the lighter.
2. Connect the provided USB charging cable to the lighter's port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer USB port, power

bank, wall adapter).

4. The LED battery indicator lights will illuminate during charging. All four lights will be solid when fully charged.
5. A full charge typically takes approximately 1-2 hours. Disconnect the lighter once fully charged.



Image: The electric lighter connected to a laptop via USB for charging, demonstrating compatibility with various USB charging devices like car chargers, power banks, and wall adapters.

## 6. OPERATING INSTRUCTIONS

Follow these steps to safely operate your MEIRUBY Electric Candle Lighter:

1. **Turn On:** Slide the ON/OFF button forward to the "ON" position. The LED indicator lights will illuminate.
2. **Activate Arc:** Press and hold the power button (located below the ON/OFF switch) to generate the electric arc.
3. **Ignite:** Position the arc close to the wick of a candle or other ignitable material. The arc will ignite the material.
4. **Auto Shut-off:** The arc will automatically turn off after 7 seconds of continuous use for safety. Release the power button to stop the arc sooner.
5. **Turn Off:** After use, slide the ON/OFF button back to the "OFF" position to deactivate the lighter and conserve

battery.

## VARIOUS APPLICATIONS



Image: The electric lighter being used to light candles on a birthday cake, demonstrating its versatility for various applications including camping and lighting lanterns.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the lighter's surface. Do not use abrasive cleaners or solvents.
- **Arc Electrodes:** Periodically inspect the arc electrodes for any residue buildup. If necessary, gently clean them with a small brush (e.g., a soft toothbrush) when the lighter is off and cool.
- **Storage:** Store the lighter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the lighter frequently. Recharge it when the battery indicator shows low charge.

## 8. TROUBLESHOOTING

| Problem                           | Possible Cause                                                                                                                | Solution                                                                                                                                                         |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lighter does not generate an arc. | Battery is low or depleted.<br>ON/OFF switch is in "OFF" position.<br>Lighter is charging.<br>Safety auto shut-off activated. | Charge the lighter fully.<br>Slide switch to "ON".<br>Disconnect from charging cable.<br>Release and press the power button again.                               |
| Lighter does not charge.          | Faulty USB cable or power source.<br>Charging port is dirty or damaged.                                                       | Try a different USB cable or power source. Ensure the power source is low-powered (e.g., 5V/1A).<br>Gently clean the charging port. If damaged, contact support. |
| Arc is weak or inconsistent.      | Low battery.<br>Electrodes are dirty.                                                                                         | Recharge the lighter.<br>Clean the arc electrodes.                                                                                                               |

## 9. SPECIFICATIONS

| Feature            | Detail                  |
|--------------------|-------------------------|
| Brand              | MEIRUBY                 |
| Model Number       | MEIRUBY M-13            |
| Material           | Aluminium Alloy         |
| Fuel Type          | Electric                |
| Product Dimensions | 8.3"L x 2.2"W x 0.65"Th |
| Item Weight        | 59 Grams (2.08 ounces)  |
| Battery            | Rechargeable (internal) |
| Charging Port      | USB                     |

## 10. WARRANTY AND SUPPORT

MEIRUBY products are designed for quality and performance. For any issues or inquiries, please contact MEIRUBY customer support through the retailer where the product was purchased or visit the official MEIRUBY store on Amazon for contact information.

Please retain your proof of purchase for warranty claims. Specific warranty terms and conditions may vary; refer to the product packaging or contact customer support for detailed information.

**MEIRUBY Store Link:** [Visit the MEIRUBY Store on Amazon](#)

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question