



Manuals.plus /

› SEIKO /

› Seiko Melodies in Motion Wall Clock, Golden Trellis (Model QXM390BRH) User Manual

SEIKO QXM390BRH

Seiko Melodies in Motion Wall Clock, Golden Trellis (Model QXM390BRH) User Manual

Brand: SEIKO

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Seiko Melodies in Motion Wall Clock, Golden Trellis (Model QXM390BRH). This musical clock features a golden garden motif, hourly melodies, and a light sensor for quiet operation in low-light conditions. Please read these instructions carefully before using your clock.



Front view of the Seiko Melodies in Motion Wall Clock, Golden Trellis. The clock features a detailed golden and blue design, a white clock face with black numerals, and a visible pendulum area at the bottom.

SETUP

1. Unpacking

- Carefully remove the clock from its packaging.
- Retain all packaging materials for future transport or storage.
- Inspect the clock for any signs of damage.

2. Battery Installation

1. Locate the battery compartment on the back of the clock.

2. Open the battery compartment cover.
3. Insert four (4) C-size batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Rear view of the clock, illustrating the battery compartments and the integrated wall mounting hook.


3. Time Setting

- Locate the time setting knob on the back of the clock.
- Turn the knob clockwise to set the correct time.
- Ensure the hour and minute hands are aligned correctly.

4. Mounting the Clock

- Choose a suitable wall location that can support the clock's weight (approximately 7.4 pounds).
- Use appropriate wall mounting hardware, such as a sturdy screw or hook, with adequate anchors for stability.
- Hang the clock securely using the integrated mounting hook on the back.



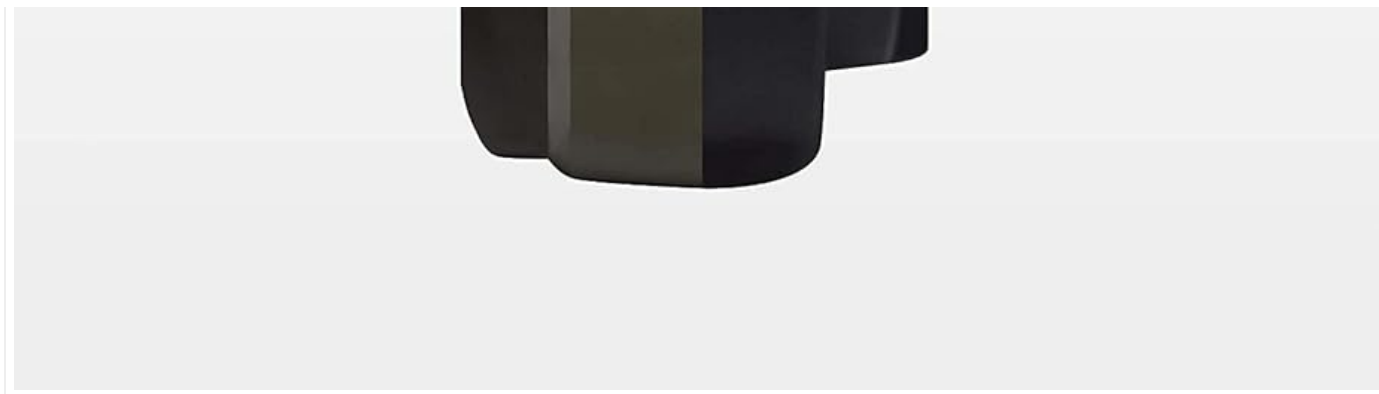

Side profile of the clock, highlighting its depth and the brown finish of the frame.

OPERATING INSTRUCTIONS

1. Melody Selection

Your clock offers 36 high-fidelity melodies, categorized into three groups:

- **Classical Songs:** A selection of timeless classical pieces.
- **Glass Bell Tracks:** Melodies produced with a glass bell sound.
- **Holiday Favorites:** Seasonal tunes for festive occasions.

Use the melody selector switch on the back of the clock to choose your preferred melody group.

2. Hourly Performance

On the hour, the clock's dial will open, revealing a turning decorative wheel adorned with Swarovski crystals. A selected melody will play during this motion.



The clock's face partially open, showcasing the intricate internal mechanism and decorative elements.



The clock's face fully open, revealing the rotating decorative wheel embellished with Swarovski crystals, which moves during the hourly melody.

3. Light Sensor

The integrated light sensor automatically disengages all melodies and motion when the room becomes dark, ensuring quiet operation during nighttime hours. The clock will resume its hourly performance when sufficient light is detected.

4. Volume Control

Adjust the volume of the melodies using the volume control knob located on the back of the clock. Turn clockwise to increase volume and counter-clockwise to decrease.

MAINTENANCE

1. Cleaning

- Wipe the clock's glass and frame with a soft, dry cloth.
- Avoid using abrasive cleaners or chemical sprays, as these may damage the finish or internal components.

2. Battery Replacement

Replace all four C-size batteries approximately every six months, or when the clock's performance (timekeeping, melodies, or motion) begins to diminish. Always replace all batteries at the same time with new ones.

3. Storage

If the clock will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the mechanism. Store the clock in its original packaging in a dry, cool place.

TROUBLESHOOTING

- **Clock not keeping accurate time or stopped:**
Check if the batteries are correctly installed with the proper polarity. Replace all four C-size batteries with new ones.
- **Melodies or motion not activating:**
Ensure the room is sufficiently lit; the light sensor will prevent operation in darkness. Check the volume setting. Verify batteries are fresh and correctly installed.
- **Sound quality is poor or distorted:**
Adjust the volume control. Replace batteries if they are low.

SPECIFICATIONS

Brand	SEIKO
Model Number	QXM390BRH
UPC	020963856087
Product Dimensions	17.5"W x 16"H
Item Weight	7.4 Pounds
Power Source	Battery Powered (4 x C batteries)
Display Type	Analog
Special Feature	Adjustable Volume, Light Sensor, Hourly Melodies & Motion
Material	Glass (frame), Crystal (decorative elements)
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

Warranty Information

This Seiko product is guaranteed for its workmanship and material quality for one (1) year from the date of purchase, under normal use conditions. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, troubleshooting, or warranty inquiries, please contact Seiko customer support through their official website or the retailer where the product was purchased.

