

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Miroir](#) /
- › [Miroir M600 1080p Battery-Powered Projector User Manual](#)

## Miroir M600

# Miroir M600 1080p Battery-Powered Projector User Manual

Model: M600 | Brand: Miroir



## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Miroir M600 1080p Battery-Powered Projector. Please read this manual thoroughly before using the device and retain it for future reference.

## WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- Miroir M600 Projector
- HDMI Cable
- AC Adapter and Charger



## PRODUCT OVERVIEW

The Miroir M600 is a compact, portable 1080p projector designed for various projection needs. Familiarize yourself with its components:

### Front View



Image: Front view of the Miroir M600 Projector, showing the projection lens and ventilation grille.

### Rear View and Ports



Image: Rear view of the Miroir M600 Projector, highlighting the various input/output ports.

- **3.5mm Audio Out:** For connecting external speakers or headphones.
- **USB-C Video Port:** For video input from compatible USB-C devices.
- **HDMI Port:** For video input from HDMI-enabled devices.
- **USB Charge Port:** For charging external devices.
- **DC Power Input:** For connecting the AC adapter to power and charge the projector.

## SETUP

### 1. Powering On and Charging

1. Connect the AC adapter to the DC Power Input port on the projector and then to a power outlet. The projector can operate while charging.
2. Press and hold the power button (location not specified in data, assume standard placement) for a few seconds until the projector powers on.
3. The internal battery provides portable operation. Ensure it is sufficiently charged for use without the AC adapter.

### 2. Placement and Projection

Position the projector on a stable, flat surface or mount it on a compatible stand. Ensure the lens is unobstructed and pointed towards your desired projection surface (wall or screen).



Image: Miroir M600 Projector positioned on a stand for optimal projection.

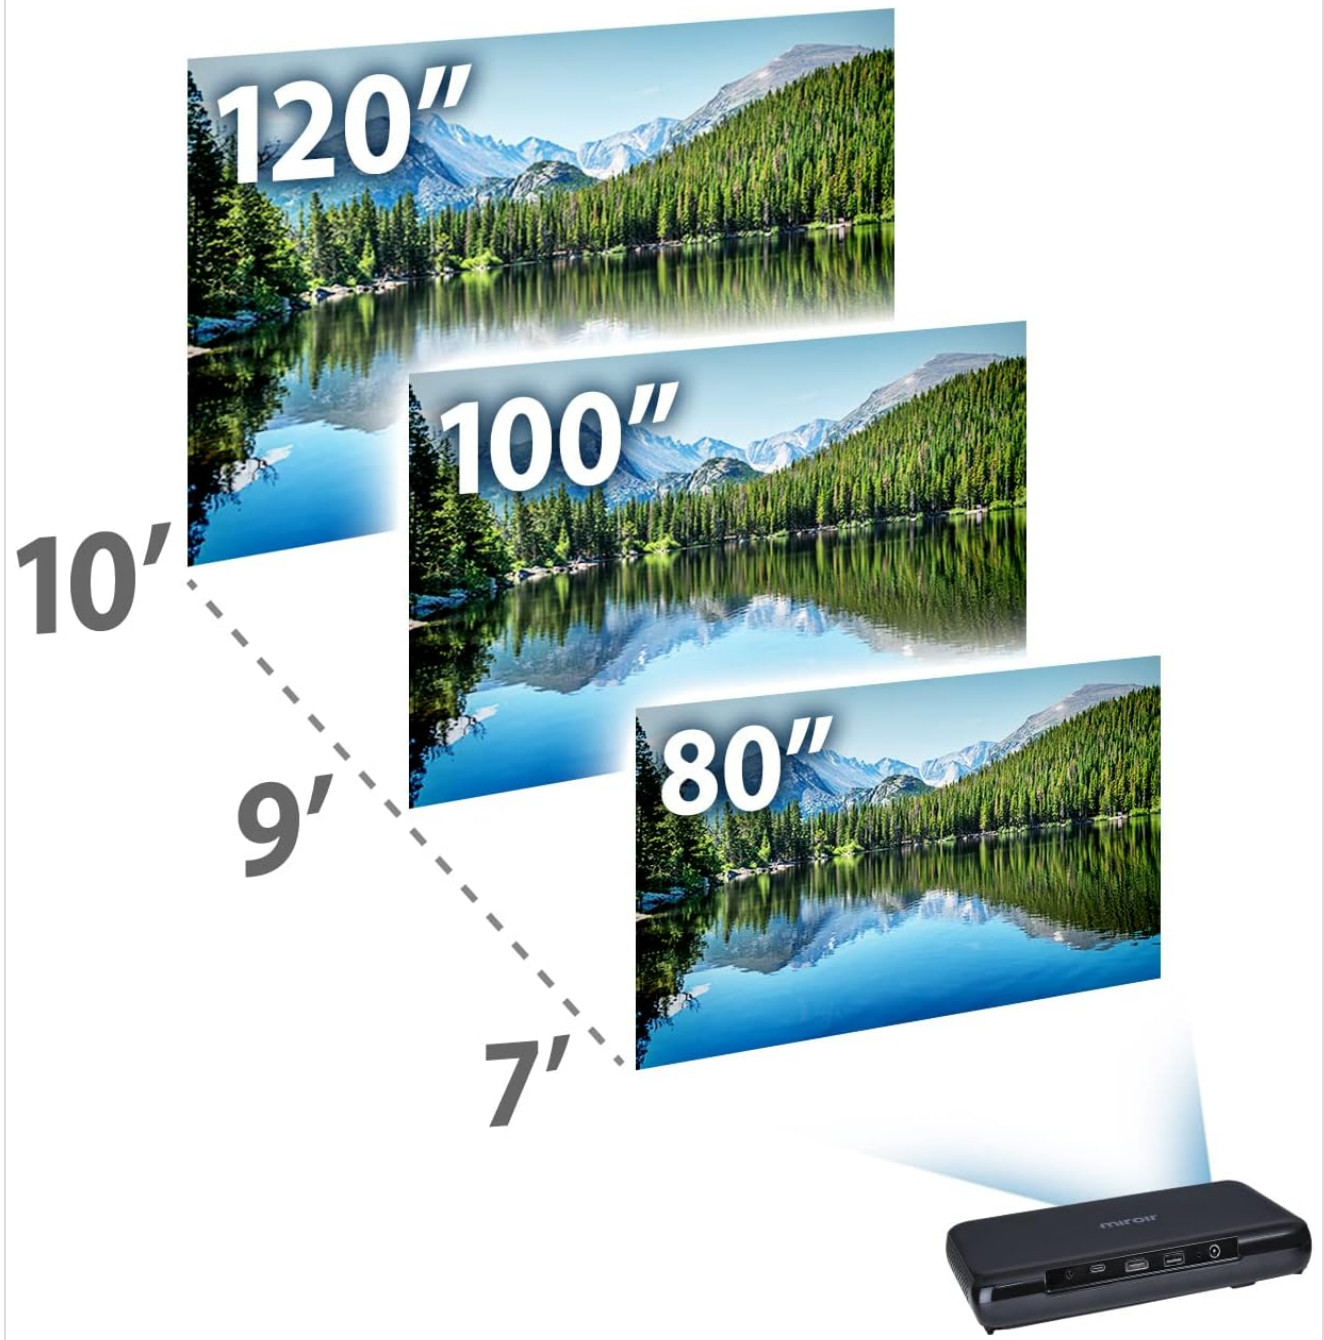


Image: Guide for projection distances to achieve various screen sizes (e.g., 7 feet for 80 inches, 10 feet for 120 inches).

## OPERATING

### 1. Connecting Input Devices

- **HDMI:** Connect an HDMI cable from your source device (laptop, streaming stick, game console) to the HDMI port on the projector.
- **USB-C Video:** For compatible devices, connect a USB-C cable from your source to the USB-C Video port on the projector.

### 2. Adjusting Image and Focus

The Miroir M600 features automatic keystone correction to adjust the image shape. For focus, manual adjustment may be required via a focus wheel (location not specified in data, assume standard placement near lens).

### 3. Audio Output

The projector includes a built-in 5-watt speaker. For enhanced audio, connect external speakers or headphones to the 3.5mm Audio Out jack.

### 4. Lamp Modes

The LED lamp offers two modes:

- **Normal Mode:** Up to 20,000 hours of lamp life.
- **ECO Mode:** Up to 30,000 hours of lamp life, providing extended usage and reduced power consumption.

## MAINTENANCE

---

### 1. Cleaning the Projector

- **Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or excessive force.
- **Exterior:** Wipe the projector's exterior with a soft, dry cloth. Avoid using liquid cleaners directly on the device.
- **Ventilation:** Ensure the ventilation grilles are clear of dust and debris to prevent overheating.

### 2. Battery Care

- For optimal battery life, avoid fully discharging the battery frequently.
- Store the projector in a cool, dry place when not in use for extended periods.

## TROUBLESHOOTING

---

If you encounter issues with your Miroir M600 projector, refer to the following common solutions:

- **No Image:** Ensure the input source is correctly connected and selected. Check all cable connections.
- **Blurry Image:** Adjust the focus manually. Ensure the projection surface is flat and the projector is stable.
- **No Sound:** Verify that the volume is not muted on both the projector and the source device. If using external speakers, ensure they are properly connected and powered.
- **Overheating:** Ensure adequate ventilation around the projector. Do not block air vents.

For more detailed troubleshooting steps, please consult the full user manual available for download (see Support section).

## SPECIFICATIONS

---

| Feature            | Detail                               |
|--------------------|--------------------------------------|
| Product Dimensions | 9 x 5 x 1 inches                     |
| Item Weight        | 1.6 pounds                           |
| Item Model Number  | M600                                 |
| Batteries          | 1 Lithium Polymer battery (included) |
| Manufacturer       | Miroir                               |
| Brand              | Miroir                               |

| Feature                 | Detail              |
|-------------------------|---------------------|
| Recommended Uses        | Business            |
| Special Feature         | Pico, Speakers      |
| Connectivity Technology | USB, HDMI           |
| Display Resolution      | 1920 x 1080 (1080p) |
| Lamp Life (Normal Mode) | Up to 20,000 hours  |
| Lamp Life (ECO Mode)    | Up to 30,000 hours  |
| Built-in Speaker        | 5-watt              |
| Visible Screen Diagonal | 120" / 305 cm       |

### WARRANTY INFORMATION

---

Specific warranty details are not provided in this document. Please refer to the official Miroir website or the warranty card included with your product for comprehensive warranty terms and conditions.

### SUPPORT & CONTACT

---

For further assistance, detailed instructions, or to contact customer support:

- **Full User Manual:** A comprehensive PDF user manual is available for download[here](#).
- **Manufacturer Website:** Visit the official Miroir website for product registration, FAQs, and support resources.

