

ciciglow RC1910

RC1910 Universal Replacement Remote Control

Model: RC1910 (ciciglowbxrgp2gn4o2304) | Brand: ciciglow

1. INTRODUCTION

Thank you for choosing the RC1910 Universal Replacement Remote Control. This remote is specifically designed to be compatible with Toshiba LCD TVs, offering a seamless replacement for your original remote control.

Manufactured from durable ABS material with comfortable silicone buttons, it is built for longevity and ease of use. No complex programming or setup is required; simply insert the batteries, and it's ready to operate your Toshiba LCD TV.





Image: The RC1910 Universal Remote Control, showcasing its full button layout and sleek black design.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children.

3. PACKAGE CONTENTS

Please check the package contents upon receipt:

- 1 x RC1910 Universal Replacement Remote Control


Note: Batteries are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

The RC1910 remote control requires two (2) AAA batteries for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

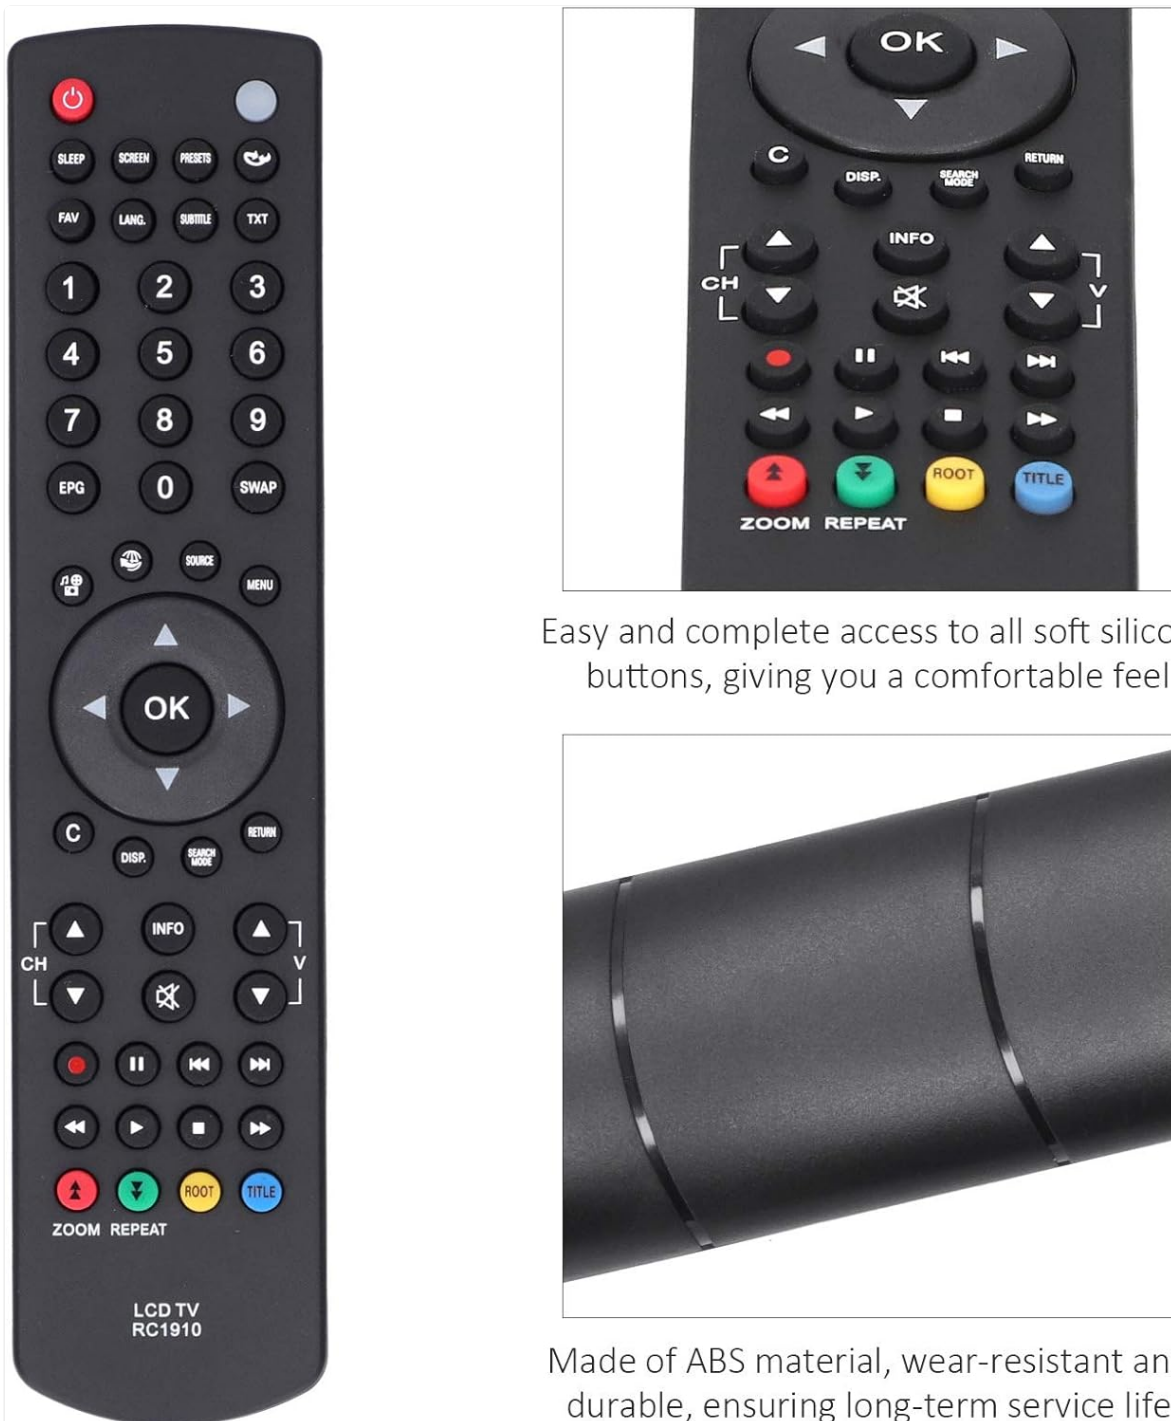

Easy and complete access to all soft silicone buttons, giving you a comfortable feel

Made of ABS material, wear-resistant and durable, ensuring long-term service life

Image: The RC1910 remote control with its battery compartment open, illustrating the correct way to insert AAA batteries.

4.2 Initial Use

This remote control is designed for immediate use with compatible Toshiba LCD TVs. No programming or pairing is required. Once batteries are installed, simply point the remote at your TV and begin using it.



Can be used without setting

Ideal when the original remote is lost, damaged or a new remote is needed

Image: A hand holding the RC1910 remote control, emphasizing its ready-to-use functionality without requiring any setup.

5. OPERATING INSTRUCTIONS

The RC1910 remote control provides full access to all standard functions of your Toshiba LCD TV. Ensure there is a clear line of sight between the remote control and the TV's infrared receiver.

5.1 Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Channel Up/Down (CH+/-):** Changes channels sequentially.
- **Volume Up/Down (VOL+/-):** Adjusts the TV volume.
- **Mute:** Mutes or unmutes the TV sound.
- **Navigation Buttons (Up, Down, Left, Right, OK):** For navigating menus and confirming selections.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **Menu:** Opens the TV's main menu.

- **Return/Exit:** Goes back to the previous screen or exits a menu.

5.2 Remote Control Distance

The effective operating distance of the remote control is up to approximately 10 meters (32.8 feet). Optimal performance is achieved within this range and with fresh batteries.



Image: The RC1910 remote control being used, illustrating its effective operating range of up to 10 meters (32.8 feet) from the television.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface or internal components.

6.2 Battery Care

Replace batteries when the remote's response becomes sluggish or inconsistent. Always dispose of used batteries responsibly according to local regulations.



Image: A detailed view of the RC1910 remote control's silicone buttons and ABS casing, highlighting its durable and comfortable design.

7. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old or depleted batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- Make sure you are within the effective operating distance (up to 10 meters).

- **Intermittent response:**

- Batteries may be low; replace them.
- Ensure the remote is pointed directly at the TV's IR sensor.

8. SPECIFICATIONS

Feature	Specification
Product Type	Remote Control

Feature	Specification
Applicable Model	Toshiba LCD TVs
Model Name	RC1910
Model Number	ciciglowbxrgp2gn4o2304
Color	Black
Shell Material	ABS + Silicone Button
Remote Control Distance	Up to approx. 10 meters (32.8 feet)
Battery Type	2 x AAA batteries (not included)
Connectivity Technology	Infrared
Number of Buttons	19
Controller Type	Button Control
Max Supported Devices	1

9. WARRANTY AND SUPPORT

This product is covered by the standard warranty provided by the retailer or manufacturer. Please refer to your purchase documentation for specific warranty terms and conditions.

For technical support or inquiries, please contact the seller or manufacturer through the platform where the product was purchased. Provide your order number and a detailed description of the issue for prompt assistance.