

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Ciciglow](#) /

> [Ciciglow Mini MP3 Player \(Model CiCiglowyiwue9a2km1039-11\) Instruction Manual](#)

Ciciglow CiCiglowyiwue9a2km1039-11

Ciciglow Mini MP3 Player Instruction Manual

Model: CiCiglowyiwue9a2km1039-11

1. INTRODUCTION

Thank you for choosing the Ciciglow Mini MP3 Player. This ultra-lightweight, clip-on device is designed for portable music playback, featuring an LCD screen for easy navigation and a durable metal shell. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.



Image 1: Front view of the Ciciglow Mini MP3 Player.

2. PRODUCT OVERVIEW

2.1 Features

- **Mini LCD Screen Display:** Provides clear visibility of song progress and menu options.
- **Ultra-Lightweight Clip-on Design:** Allows for secure attachment to clothing or other devices, ideal for sports and active use.
- **Memory Card Expansion Slot:** Supports a maximum extension of 32GB (memory card not included).
- **Long Battery Life:** Offers over 5 hours of continuous playback on a single charge.
- **Durable Aluminum Alloy Material:** Ensures a firm and long-lasting service life.

2.2 What's in the Box

- 1 x Ciciglow Mini MP3 Player
- 1 x Earphones
- 1 x USB Cable

2.3 Product Diagram

- Built-in memory card expansion slot, supports a maximum extension of 32GB.
- The ultra-lightweight player can clip on your clothes or other devices and stays in place for a worry-free sport.
- Long battery life, can play for more than 5 hours, no more need to worry of lack of electricity.
- Adopt high quality aluminum alloy material, more firm and durable, provide longer service life.



Image 2: Close-up of the MP3 player's screen and control buttons.

The MP3 player features a central control panel with 'M' (Menu/Mode), Play/Pause, Previous Track, Next Track, and 'VOL' (Volume) buttons. The LCD screen displays current mode and song information.

SD card slot

Scalable SD card

MP3 comes with SD card slots, freely select memory size.



Instructions:

The chip is facing up, and when inserted, the card slot is flexible, and the nails are plugged in, and when you want to pull it out, press it in it.

Image 3: Side view showing the Micro SD card slot, 3.5mm headphone jack, and power switch.

On the side, you will find the Micro SD card slot, a 3.5mm headphone jack, and the power switch. The USB charging port is located on the opposite side.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB cable to the player's USB port and to a computer's USB port or a compatible USB wall adapter. The device will indicate when charging is complete.

3.2 Inserting a Micro SD Card

The MP3 player requires a Micro SD card (not included) to store music files. Locate the Micro SD card slot on the side of the device. Insert the Micro SD card with the metal contacts facing up until it clicks into place. To remove, gently press the card until it springs out.

SD card slot

Scalable SD card

MP3 comes with SD card slots, freely select memory size.



Instructions:

The chip is facing up, and when inserted, the card slot is flexible, and the nails are plugged in, and when you want to pull it out, press it in it.

Image 4: Instructions for inserting the Micro SD card. Ensure the chip is facing up.

3.3 Connecting Earphones

Plug the 3.5mm jack of the included earphones into the headphone port on the side of the MP3 player.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To power on the device, slide the power switch to the 'ON' position. To power off, slide the switch to the 'OFF' position.

4.2 Transferring Music Files

Connect the MP3 player to your computer using the USB cable. The player will appear as a removable disk. Drag and drop your MP3 format music files into the player's storage (Micro SD card). Ensure files are in MP3 format for compatibility.

4.3 Playing Music

1. Power on the device.
2. The LCD screen will display "Music Mode".
3. Press the **Play/Pause** button to start playback.
4. Press **Previous Track** or **Next Track** buttons to skip songs.
5. Press the '**M**' button to cycle through different modes or menu options.

4.4 Volume Control

Press the '**VOL**' button, then use the **Previous Track** and **Next Track** buttons to adjust the volume level. Press 'VOL' again to confirm or wait a few seconds for the volume adjustment to exit.

Video 1: A short demonstration of the Mini MP3 Player's features and operation.

Video 2: Product show and introduction, highlighting the design and functionality.

5. MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or solvents.
- Avoid extreme temperatures.
- Do not drop or subject the device to strong impacts.
- Store the device in a protective case when not in use to prevent scratches.



Image 5: The MP3 player stored in a protective case.

6. TROUBLESHOOTING

- **Device does not power on:** Ensure the battery is charged. Connect to a power source and try again. Check the power switch is in the 'ON' position.
- **No music playback:** Verify that a Micro SD card with MP3 files is correctly inserted. Check earphone connection and volume level.
- **Cannot transfer files to the device:** Ensure the MP3 player is properly connected to the computer via USB. The computer should recognize it as a removable drive.
- **Short battery life:** Ensure the device is fully charged before use. Battery performance may decrease over time.

7. SPECIFICATIONS

Brand	Ciciglow
-------	----------

Model Number	CiCiglowyiwue9a2km1039-11
Color	Silver
Display	LCD Mini Screen (1 inch)
Connectivity Technology	Aux, USB
Memory Storage Capacity	Supports up to 32 GB (Micro SD card not included)
Supported Standards	MP3
Battery Type	Built-in 250mAh lithium battery
Battery Life	More than 5 hours
Item Weight	47 Grams
Material	Aluminum Alloy



Display: 1 inch
Music format: MP3
Frequency response: 20Hz ~ 20kHz
MP3: 32 64 128kbps
Memory: Insert card maximum support 16G

Image 6: Dimensions of the MP3 player.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Ciciglow customer service through the retailer where the product was purchased. Keep your purchase receipt for warranty claims.