

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY CT-865 Remote Control User Manual for Toshiba TVs

ECONTROLLY CT-865

ECONTROLLY CT-865 Remote Control User Manual

For Toshiba TV Models: 75001967, 26WL65G, 32A2900P, 14VL44, 15VL34, 20VL44, 32EL66, 26 WLG66S, 20W300, 15VL56B

1. INTRODUCTION

This user manual provides comprehensive instructions for the ECONTROLLY CT-865 remote control. This remote is designed as a replacement for various Toshiba TV models, offering direct functionality without the need for complex programming. Please read this manual carefully to ensure proper use and longevity of your remote control.





Figure 1: ECONTROLLY CT-865 Remote Control. This image displays the full layout of the remote control, featuring a dark gray body with clearly labeled buttons. The top section includes the red power button and numerical keypad. The central area contains navigation and menu controls, while the lower section features colored function buttons and media playback controls.

2. SETUP

2.1 Battery Installation

The ECONTROLLY CT-865 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Note: This remote control does not require any programming. It is ready for use immediately after battery installation.

3. OPERATING INSTRUCTIONS

The CT-865 remote control provides full functionality for compatible Toshiba TV models. Below is a guide to its primary buttons

and their functions:

- **Power Button** (): Located at the top right. Press to turn the TV on or off.
- **Mute Button** (): Located at the top left. Mutes or unmutes the TV audio.
- **Number Buttons (0-9)**: Used for direct channel selection.
- **Volume Up/Down (PA ▲ / PV ▼)**: Adjusts the audio volume.
- **Channel Up/Down (▲ / ▼)**: Changes the TV channel.
- **Menu Button**: Accesses the TV's main menu.
- **DVD MENU Button**: Accesses the DVD player's menu (if connected and supported by the TV).
- **Navigation Buttons** (Up, Down, Left, Right, **OK**): Used to navigate through menus and confirm selections.
- **EXIT Button**: Exits the current menu or on-screen display.
- **Source/Input Button (TV/VCR/DVD)**: Cycles through available input sources (TV, VCR, DVD, etc.).
- **Colored Function Buttons** (Red, Green, Yellow, Blue): These buttons may have specific functions depending on the TV model or current on-screen menu. Refer to your TV's manual for details.
- **Media Playback Controls** (Play, Pause, Stop, Rewind, Fast Forward, Skip): Used to control playback of connected media devices like DVD players or VCRs.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote control is pointed directly at the TV.
- **Short Operating Range:**
 - Replace batteries, as low battery power can reduce range.
 - Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the infrared signal.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris.
 - If only specific buttons are unresponsive after troubleshooting, the remote control may be faulty and require replacement.

6. SPECIFICATIONS

Feature	Detail
Model Number	CT-865 (RCEC-CT-865)

Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (various Toshiba models)
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (controls one TV at a time)

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY CT-865 remote control, please refer to the retailer where the product was purchased or visit the ECONTROLLY official website. Keep your purchase receipt as proof of purchase for any warranty claims.

This remote control is designed to be a direct replacement and should function without additional setup for the listed Toshiba TV models. If you experience persistent issues not covered in the troubleshooting section, please contact customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B095PG8VB7>

More documents and user manuals: <https://manuals.plus/>