

[Manuals.plus](#) /

> [HAUSMEISTER](#) /

> HAUSMEISTER Cordless Vacuum Cleaner P013 User Manual

## HAUSMEISTER P013

# HAUSMEISTER Cordless Vacuum Cleaner P013 User Manual

Model: P013

## INTRODUCTION

---

Thank you for choosing the HAUSMEISTER Cordless Vacuum Cleaner P013. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before use and retain it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle charger or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Exercise extra care when cleaning on stairs.
- Do not use without dust cup and filter in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.
- Do not use an appliance that is damaged or modified.
- Do not expose an appliance to fire or excessive temperature.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions.
- Servicing must be performed by a qualified repair person using only identical replacement parts.

## PRODUCT OVERVIEW

---

The HAUSMEISTER P013 is a lightweight, cordless handheld vacuum cleaner designed for quick clean-ups around the home, office, and car. It features a HEPA filter and comes with various attachments for different cleaning needs.



Image: HAUSMEISTER P013 Cordless Vacuum Cleaner with its charging stand and various accessories, including a brush tool and crevice tool.

## SETUP AND INITIAL USE

---

### 1. Charging the Battery

Before first use, fully charge the vacuum cleaner. Connect the charging cable to the vacuum and a power outlet. The indicator light will show charging status. A full charge typically takes several hours.

### 2. Attaching Accessories

The P013 comes with several nozzles for different cleaning tasks:

- **Upholstery Nozzle:** Ideal for cleaning fabric surfaces like car seats and furniture.
- **Crevice Nozzle:** Designed for reaching tight spaces, corners, and gaps.

- **Flexible Extension Nozzle:** Provides extended reach for difficult areas.

To attach a nozzle, align it with the vacuum's suction inlet and push firmly until it clicks into place. To remove, pull the nozzle away from the inlet.



Image: The HAUSMEISTER P013 vacuum cleaner shown with its upholstery nozzle, crevice nozzle, and flexible extension nozzle, demonstrating their use in different cleaning scenarios.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

Press the power button (Controller Type: Push Button, Control Method: Touch) to turn the vacuum cleaner on. Press it again to turn it off.

### 2. Child Lock Design

The vacuum cleaner features a child lock design to prevent accidental operation. Refer to the product for specific

instructions on engaging and disengaging the child lock, typically involving a specific button sequence or switch.

# Easy to Clean



Image: Close-up of the HAUSMEISTER P013 vacuum cleaner's handle, showing the power button and a yellow label indicating the child lock design.

### 3. Recommended Uses

This vacuum is suitable for various surfaces and areas:

- **Carpet and Rugs:** For light debris.
- **Hard Floor and Tile Floor:** Effective on smooth surfaces.
- **Furniture and Upholstery:** Use the upholstery nozzle for fabric surfaces.
- **Car and Office:** Its compact and portable design makes it ideal for vehicles and workspaces.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

## 1. Emptying the Dust Cup

Empty the dust cup regularly, especially when it reaches the MAX fill line, to maintain suction power. The dust cup has a capacity of 0.3 Liters.

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button or mechanism.
3. Detach the dust cup from the main unit.
4. Hold the dust cup over a trash bin and open the bottom flap to release debris.
5. Reattach the dust cup securely.



Image: A person demonstrating how to easily empty the dust cup of the HAUSMEISTER P013 vacuum cleaner by detaching it and pouring out collected debris.

## 2. Cleaning the HEPA Filter

The HEPA filter should be cleaned periodically to prevent clogging and maintain suction. A clogged filter can lead to reduced performance and overheating.

1. Turn off and unplug the vacuum cleaner.
2. Remove the dust cup.
3. Carefully remove the HEPA filter from the dust cup assembly.
4. Tap the filter gently over a trash bin to remove loose dust.
5. If necessary, rinse the filter under cool running water. Ensure it is completely dry before reinserting. Do not use detergents or hot water.
6. Reinsert the dry filter and reattach the dust cup.

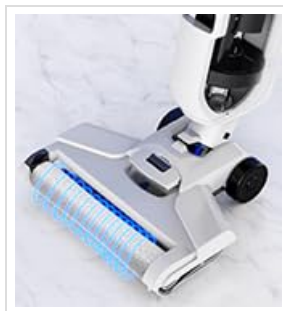


Image: A person rinsing the HEPA filter component of the HAUSMEISTER P013 vacuum cleaner under running water, demonstrating the cleaning process.

## TROUBLESHOOTING

---

If you encounter issues with your HAUSMEISTER P013, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
<b>No Power / Does not turn on</b>	Battery is not charged. Power button not pressed correctly.	Ensure the battery is fully charged. Press the power button firmly.
<b>Low Suction Power</b>	Dust cup is full. Filter is clogged. Nozzle or hose is blocked.	Empty the dust cup. Clean the HEPA filter as per maintenance instructions. Check nozzles and hose for obstructions and clear them.
<b>Vacuum Shuts Off During Use / Overheating</b>	Clogged filter or obstruction causing motor strain. Battery overheating.	Clean the filter and check for blockages. Allow the vacuum to cool down before resuming use. Ensure proper airflow.
<b>Short Battery Life (e.g., 10-18 minutes)</b>	Battery not fully charged. Battery degradation over time.	Ensure the vacuum is fully charged before each use. Battery life can vary based on usage and age. If battery life significantly decreases, consider contacting customer support for battery replacement options.
<b>Accessories do not fit well</b>	Incorrect attachment or improper alignment.	Ensure you are using the correct accessories for the P013 model. Align attachments carefully and push firmly until they click into place.

## SPECIFICATIONS

Feature	Detail
<b>Brand</b>	HAUSMEISTER
<b>Model</b>	P013
<b>Special Feature</b>	Compact, HEPA, Lightweight
<b>Filter Type</b>	HEPA Filter
<b>Included Components</b>	Brush
<b>Cordless</b>	Yes
<b>Capacity</b>	0.3 Liters
<b>Wattage</b>	110 watts
<b>Recommended Uses</b>	Carpet, Furniture, Hard Floor, Tile Floor, Hardwood, Rug, Car, Office, Home, Sofa
<b>Form Factor</b>	Handheld
<b>Color</b>	Black

Feature	Detail
Battery Type	Lithium-Ion
Noise Level	78 Decibels
Battery Life	18 minutes
Controller Type	Push Button
Control Method	Touch
Style	Vacuum Cleaner
Portable	Yes
Number of Power Levels	1
Indoor/Outdoor Usage	Indoor
Maximum Horsepower	0.15 Horsepower
Package Dimensions	23.1 x 7.75 x 7.55 inches
Item Weight	1.2 pounds
Power Source	Battery Powered

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation included with your product at the time of purchase.

HAUSMEISTER products typically come with a limited warranty covering manufacturing defects.

If you require technical support, have questions about your product, or need to inquire about warranty service, please contact HAUSMEISTER customer service. Contact details can usually be found on the product packaging or the official HAUSMEISTER website.

When contacting support, please have your product model number (P013) and purchase date available.

© 2024 HAUSMEISTER. All rights reserved.

This manual is for informational purposes only. HAUSMEISTER reserves the right to make changes to products without prior notice.