

[Manuals.plus](#) /

› [HAUSMEISTER](#) /

› HAUSMEISTER Cordless Vacuum Cleaner P018E User Manual

## HAUSMEISTER P018E

# HAUSMEISTER Cordless Vacuum Cleaner P018E User Manual

Model: P018E

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters properly in place.
- Turn off the appliance before connecting or disconnecting the motorized brush head or other accessories.
- Use only manufacturer-recommended attachments.
- Do not immerse the vacuum cleaner or charger in water or other liquids.
- Store the appliance indoors in a cool, dry place.

## 2. PRODUCT OVERVIEW

---

The HAUSMEISTER P018E is a cordless stick vacuum cleaner designed for efficient cleaning across various floor types. It features a powerful brushless motor, smart touch screen display, and LED headlights for enhanced visibility.

### 2.1 Package Contents

Upon unpacking, ensure all components are present:

# What you get



Image: All components included with the HAUSMEISTER P018E Cordless Vacuum Cleaner, laid out on a white background. This includes the main vacuum unit, extension wand, motorized brush head, crevice tool, dusting brush, wall mount, and power adapter.

- Main Vacuum Unit with Dust Cup
- Extension Wand
- Motorized Brush Head with LED Headlights
- Crevice Tool
- Dusting Brush
- Wall Mount / Charging Dock
- Power Adapter
- Rechargeable Battery

## 2.2 Key Features

- **High-Speed Brushless Motor:** Provides strong suction power for effective cleaning.



Image: An internal view of the vacuum's main unit, highlighting the brushless motor and multi-stage filtration system in blue and grey components.

- **Smart Touch Screen Display:** Shows battery status, suction strength, and error indicators.



Image: A close-up of the vacuum's circular smart touch screen display, showing "100%" for battery, a bar graph for suction strength, and "AUTO" mode indicator.

- **Built-in Dust Sensor:** Automatically adjusts suction power based on detected dust levels in AUTO mode.

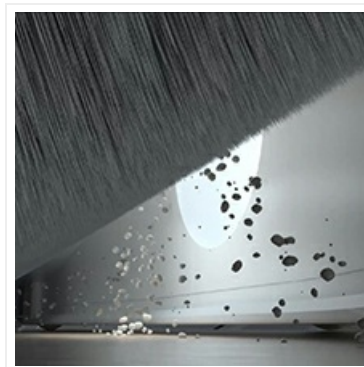


Image: A graphic illustrating the vacuum's brush head with a dust sensor detecting small particles on a floor surface.

- **LED Headlights:** Illuminates dark areas to reveal hidden dust and debris.

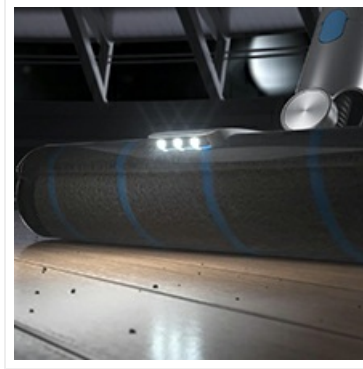


Image: A close-up of the motorized brush head with its LED headlights turned on, shining light onto a dark floor to highlight dust.

- **Multiple Charging Methods:** Can be charged directly or via the wall-mounted charging dock.

## 3. SETUP AND ASSEMBLY

---

### 3.1 Initial Charging

Before first use, fully charge the battery. The battery takes approximately 4 hours to fully charge, providing up to 70 minutes of run time depending on the selected power mode and attachments used.

1. Connect the power adapter to the charging port on the battery or the wall mount.
2. Plug the power adapter into a wall outlet.
3. The display will indicate charging status. Once fully charged, the indicator will change.



Image: The HAUSMEISTER P018E charging dock, shown both as a standalone unit on a table and mounted on a wall with the vacuum attached.

### 3.2 Assembly

Assemble the vacuum cleaner according to your cleaning needs:

1. **Attach the Extension Wand:** Insert the extension wand into the main vacuum unit until it clicks securely into place.
2. **Attach the Cleaning Head:** Connect the motorized brush head or desired accessory (crevice tool, dusting brush) to the end of the extension wand or directly to the main unit for handheld use. Ensure it clicks into place.
3. **Install Battery:** Slide the fully charged battery into the slot on the main vacuum unit until it locks.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Power On/Off

Press the power button located on the handle to turn the vacuum cleaner on or off.

### 4.2 Adjusting Suction Modes

The HAUSMEISTER P018E offers multiple suction modes, visible on the smart touch screen display:

- **AUTO Mode:** The vacuum automatically adjusts suction power based on the dust sensor's detection of debris. This mode is ideal for varying floor conditions.
- **Manual Modes (3 Levels):** Press the mode button on the display to cycle through three distinct suction levels (Low, Medium, High) for specific cleaning tasks.



Image: The HAUSMEISTER P018E vacuum cleaner in use, transitioning from a wooden floor to a carpeted area, demonstrating its versatility for multi-floor cleaning.

### 4.3 Using Attachments

- **Motorized Brush Head:** Best for carpets and hard floors. The LED headlights illuminate debris.
- **Crevice Tool:** Use for narrow spaces, corners, and edges.
- **Dusting Brush:** Suitable for delicate surfaces, upholstery, and curtains.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

## 5.1 Emptying the Dust Cup

Empty the dust cup regularly, especially when the MAX fill line is reached. This prevents loss of suction.

1. Ensure the vacuum is turned off.
2. Press the dust cup release button to detach it from the main unit.
3. Hold the dust cup over a trash bin and press the bottom release latch to open the lid and empty contents.
4. If debris is stuck, gently remove the internal filter assembly to clear blockages.
5. Reattach the dust cup until it clicks securely.

## 5.2 Cleaning Filters

The vacuum uses a multi-stage filtration system. Clean filters regularly to maintain suction power.

1. Turn off the vacuum and remove the dust cup.
2. Twist and pull out the filter assembly from the dust cup.
3. Tap filters over a trash bin to remove loose dust.
4. Rinse the filters under cold running water. Do not use detergent.
5. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.
6. Reinsert the dry filters and reattach the dust cup.

## 5.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Ensure the vacuum is off and disconnected from the extension wand.
2. Locate the brush roll access latch on the bottom of the motorized brush head.
3. Open the latch and remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and secure the latch.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power.	Dust cup is full; filters are clogged; brush roll is obstructed; blockage in hose/wand.	Empty dust cup. Clean or replace filters. Remove brush roll obstructions. Check for and clear blockages.
Brush roll not spinning.	Brush roll is jammed by debris; brush head is not properly attached.	Clean brush roll. Ensure brush head is securely connected.
Battery drains quickly.	Using high suction mode continuously; battery nearing end of life.	Use AUTO mode or lower suction settings when possible. Consider battery replacement if performance significantly degrades over time.
Error displayed on screen.	Specific error (e.g., roller error).	Refer to the display for the specific error code and consult the manual for corresponding solutions. For a roller error, check the brush roll for obstructions.

## 7. SPECIFICATIONS

Feature	Detail
Brand	HAUSMEISTER
Model Name	P018E
Special Feature	Cordless, Smart Navigation (Dust Sensor)
Surface Recommendation	Carpet, Hard Floor, Furniture, Tile Floor, Rug, Bare Floor
Power Source	Battery Powered
Voltage	29.6 Volts
Wattage	300 watts
Noise Level	70 Decibels
Motor Horsepower	0.4 Horsepower
Battery Charge Time	4 Hours
Battery Life (Average)	70 minutes
Controller Type	Push Button
Control Method	Touch
Form Factor	Stick
Included Components	Brush (Motorized Brush Head, Dusting Brush, Crevice Tool)

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the warranty card included with your product or contact HAUSMEISTER customer service. Keep your purchase receipt as proof of purchase.

Contact information can typically be found on the manufacturer's official website or on the product packaging.

