

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [G-Homa](#) /

› [G-Homa Wireless Dog Doorbell Instruction Manual](#)

G-Homa B095SK12J3

G-Homa Wireless Dog Doorbell Instruction Manual

Model: B095SK12J3


INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your G-Homa Wireless Dog Doorbell. This device is designed to assist in potty training your dog by providing an audible signal when your dog indicates a need to go outside.

PACKAGE CONTENTS

Verify that all items are present in your package:

G-Homa Dog Doorbell Packing List

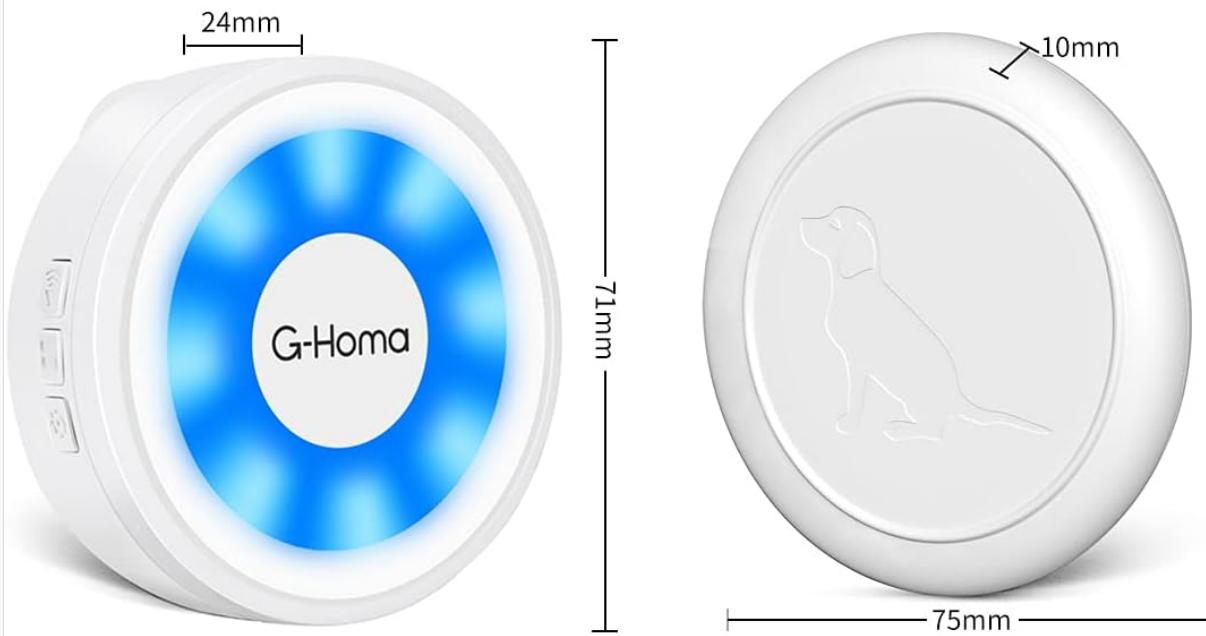

1*Receiver



1*Transmitter



Specification

Screwdriver

1*Reusable Hook

Image: Contents of the G-Homa Dog Doorbell package, including the receiver, transmitter, instruction manual, screwdriver, mounting screws, and a reusable hook.

- 1 x Receiver (Plug-in unit)
- 1 x Transmitter (Dog bell button)
- 1 x Instruction Manual
- 1 x Screwdriver
- Mounting Screws and Wall Anchors
- 1 x Reusable Hook (for hanging the transmitter)

SPECIFICATIONS

- **Model:** B095SK12J3
- **Item Weight:** 6.4 ounces
- **Item Package Dimensions:** 3.27 x 3.19 x 3.19 inches
- **Power Source (Transmitter):** 1 x 12V/23A battery (included)
- **Power Source (Receiver):** Plug-in (AC outlet)
- **Waterproof Rating:** IP65 (Transmitter)
- **Operating Temperature:** -4°F to 140°F (-20°C to 60°C)
- **Volume Levels:** 4 adjustable levels (up to 85 dB)
- **Melodies:** 20 selectable chimes
- **Wireless Range:** Up to 656 feet (200 meters) in open areas
- **Memory Function:** Retains last melody and volume settings after power outage.



IP65

weatherproof and acceptable
for outdoor use



Operating Temperature
-4 °F—140°F/-20°C—60°C



Build-in 12V 23A Battery



Image: The transmitter unit highlighting its IP65 waterproof rating, suitable operating temperature range, and internal 12V 23A battery.

SETUP AND INSTALLATION

- 1. Install Receiver:** Plug the receiver into any standard electrical outlet within range of where you plan to place the transmitter.
- 2. Prepare Transmitter:** The transmitter comes with a pre-installed 12V/23A battery. Ensure the battery is properly seated.
- 3. Mount Transmitter:**

- **Adhesive Tape:** Use the provided 3M double-sided tape to stick the transmitter to a clean, dry surface such as a door, wall, or glass. Ensure the surface is smooth for optimal adhesion.
- **Screws:** For a more secure installation, use the provided screws and wall anchors to mount the transmitter.

Choose a location accessible to your dog, typically near the door they use to go outside. The transmitter features an enlarged touch area for easy activation by dogs of all sizes.



Image: Diagram illustrating the simple installation process, with the receiver plugged into a wall outlet and the transmitter attached to a door using adhesive tape.

FIT FOR ANY WHERE

stop scratching and getting mud at the door or wal



Image: Examples of transmitter placement on different surfaces including glass, a door, the floor, and a wall, demonstrating its versatility.

OPERATING INSTRUCTIONS

The receiver has buttons for pairing, volume adjustment, and melody selection.

20 Chimes 4-Level Volume



Pair button
mode button



Volume adjusting
button



Music button



DingDong



For Alice



Music box dancer



Radetzky March



Old ringtones



Image: The receiver unit displaying its control buttons for pairing, volume adjustment, and melody selection, along with an illustration of the transmitter.

- 1. Adjust Volume:** Press the "Volume adjusting button" on the receiver to cycle through the 4 available volume levels.
- 2. Select Melody:** Press the "Music button" on the receiver to cycle through the 20 available melodies. The receiver will remember your last selected melody and volume setting even after a power outage.
- 3. Pairing (if needed):** If the transmitter and receiver are not paired, or if you add additional transmitters/receivers:
 - Press and hold the "Pair button mode button" on the receiver for 3-5 seconds until the LED indicator flashes.
 - Within 10 seconds, activate the transmitter (e.g., press the dog bell button). The receiver will chime, indicating successful pairing.

- Repeat for additional transmitters if applicable.

OPERATING MODES

The doorbell receiver offers four distinct operating modes:

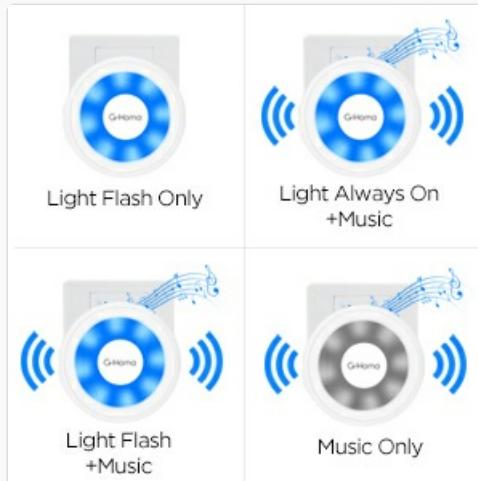


Image: Visual representation of the four operating modes: Light Flash Only, Light Always On + Music, Light Flash + Music, and Music Only.

- **Light Flash Only:** The receiver's LED indicator flashes when the transmitter is activated, without an audible chime.
- **Light Always On + Music:** The receiver's LED indicator remains on and an audible chime sounds when the transmitter is activated.
- **Light Flash + Music:** The receiver's LED indicator flashes and an audible chime sounds when the transmitter is activated.
- **Music Only:** An audible chime sounds when the transmitter is activated, without any LED indication.

To change the operating mode, consult the specific instructions in your manual or cycle through the modes using the designated button on the receiver (often combined with the music or pairing button, depending on the model).

POTTY TRAINING GUIDE

Here are basic steps to train your dog to use the G-Homa doorbell:

1. **Introduce the Bell:** Place the transmitter near the door your dog uses to go outside.
2. **Associate Bell with Going Out:** Every time you take your dog out, gently guide their paw or nose to touch the bell. As soon as they touch it and it chimes, immediately open the door and take them outside.
3. **Reward:** Praise and reward your dog with a treat immediately after they go potty outside.
4. **Consistency is Key:** Repeat this process consistently. Your dog will begin to associate ringing the bell with going outside to relieve themselves.
5. **Allow Self-Initiation:** Once your dog starts touching the bell on their own, respond promptly by taking them out.



SUITABLE FOR ALL SMALL ,
MEDIUM AND LARGE DOG .

Enlarged Touch Area ,this dog doorbell
when touched will be ring, Higher
Sensitivity than other push button



Image: A dog interacting with the doorbell transmitter, demonstrating its large touch area suitable for dogs of all sizes.

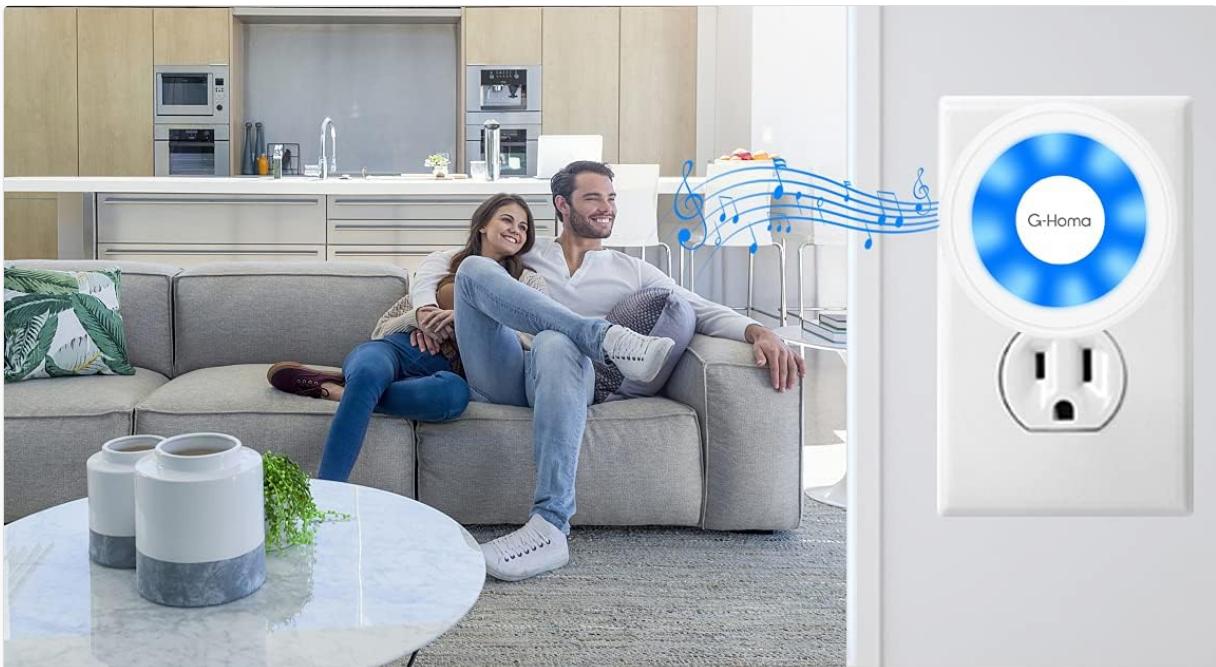


Image: An illustration of a dog successfully ringing the doorbell at the door, with the receiver unit visible plugged into an indoor electrical outlet.

MAINTENANCE

- **Cleaning:** Wipe the receiver and transmitter with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement (Transmitter):** The transmitter uses a 12V/23A battery. When the signal weakens or the transmitter stops working, replace the battery. Use the provided screwdriver to open the transmitter casing carefully. Ensure correct polarity when inserting the new battery.
- **Weather Protection:** While the transmitter is IP65 waterproof, prolonged exposure to extreme

weather conditions may affect its lifespan. Ensure it is securely mounted.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell does not chime.	<ul style="list-style-type: none">Receiver unplugged or no power.Transmitter battery low or dead.Transmitter and receiver not paired.Out of range.	<ul style="list-style-type: none">Ensure receiver is plugged in and powered.Replace transmitter battery.Re-pair transmitter and receiver (see "Operating Instructions").Move receiver closer to transmitter.
Chime is too quiet or too loud.	Volume setting needs adjustment.	Press the "Volume adjusting button" on the receiver to change volume levels.
Unwanted chime melody.	Melody setting needs adjustment.	Press the "Music button" on the receiver to select a different melody.
Transmitter falls off mounting surface.	<ul style="list-style-type: none">Adhesive tape not strong enough.Surface not clean or smooth.	<ul style="list-style-type: none">Clean and dry the surface thoroughly before applying tape.Consider using screws for a more permanent installation.

SAFETY INFORMATION

- Do not expose the receiver to water or high humidity.
- Keep the device away from direct heat sources.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.
- Dispose of batteries according to local regulations.
- Keep small parts away from children and pets to prevent choking hazards.

SUPPORT

For any questions, technical support, or assistance with your G-Homa Wireless Dog Doorbell, please contact our customer service team. While specific contact details are not provided in this manual, you can typically find support information on the product packaging or the official G-Homa website.

Customer First

Professional technical team



Image: An illustration depicting a customer service team, emphasizing professional technical support.

© 2026 G-Homa. All rights reserved.