

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Westclox](#) /

> [Westclox Tilt & Swivel Digital Alarm Clock Instruction Manual Model 71052](#)

Westclox 71052

Westclox Tilt & Swivel Digital Alarm Clock Instruction Manual

Model: 71052

INTRODUCTION

Thank you for choosing the Westclox Tilt & Swivel Digital Alarm Clock. This manual provides detailed instructions for the setup, operation, and maintenance of your new alarm clock. Please read this manual thoroughly before use to ensure proper functionality and to maximize your product experience.

KEY FEATURES

- **Digital Display:** Features a large 1.8" LED digital display for easy reading.
- **Tilt & Swivel Design:** Unique tilt and swivel stand allows flexible positioning for optimal viewing.
- **Extra Large Size:** Measures 11" wide x 5" high x 5" deep for ample display space.
- **Quiet Alarm:** Uses a loud, clear alarm sound.
- **Durable Construction:** Made from sturdy ABS plastic with a powder-coated finish.

WESTCLOX TILT & SWIVEL DIGITAL ALARM CLOCK EXTRA LARGE

LED TIME DISPLAY—EASY TO READ DISPLAY GREAT
FOR BEDROOM HOME OFFICE

-  Electric Operated
-  Snooze Button
-  Alarm Clock
-  Large LED Display
-  Easy To Use Buttons
-  Battery Backup
(Batteries Not Included)



Image: The Westclox Tilt & Swivel Digital Alarm Clock, highlighting its large display and adjustable stand.

SETUP

Powering Your Clock

The Westclox Digital Alarm Clock operates primarily via AC power. Connect the provided power adapter to the clock's power input port and then plug it into a standard electrical outlet. The display will illuminate, indicating power is supplied.

Battery Backup Installation

For backup power during outages, install 2 AAA batteries (not included) into the battery compartment located on the bottom of the clock. Ensure correct polarity (+/-) as indicated inside the compartment. The battery backup maintains time and alarm settings but does not power the display.

Initial Time Setting

Upon first power-up or after a prolonged power loss without battery backup, the display may show a default time. Refer to the 'Setting the Time' section under Operating Instructions to set the current time.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **TIME SET** button (usually located on the back or top of the clock) until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Pay attention to the PM indicator if using a 12-hour format.
3. Press the **MINUTE** button repeatedly to adjust the minute.
4. Press the **TIME SET** button again to confirm the time and exit time setting mode.

Setting Alarms (AL.1 and AL.2)

This clock features two independent alarms, AL.1 and AL.2.

1. Press and hold the **AL.1 SET** or **AL.2 SET** button until the alarm hour digits begin to flash.
2. Press the **HOUR** button to adjust the alarm hour. Observe the PM indicator.
3. Press the **MINUTE** button to adjust the alarm minute.
4. Press the respective **AL.1 SET** or **AL.2 SET** button again to confirm the alarm time.
5. To activate or deactivate an alarm, locate the **AL.1 ON/OFF** or **AL.2 ON/OFF** switch/button. Slide the switch to 'ON' or press the button to toggle the alarm. An indicator light (e.g., AL.1 or AL.2) will appear on the display when the alarm is active.

Snooze Function



Image: The top of the Westclox Digital Alarm Clock showing the prominent snooze/dimmer button.

When the alarm sounds, press the large **SNOOZE/DIMMER** button located on the top of the clock. The alarm will temporarily pause and sound again after approximately 9 minutes. To turn off the alarm completely, press the corresponding **AL.1 ON/OFF** or **AL.2 ON/OFF** button/switch.

Display Dimmer

The **SNOOZE/DIMMER** button also controls the brightness of the LED display. Press this button (without an active alarm) to cycle through different brightness levels (e.g., High, Medium, Low, Off). Select the desired brightness for your environment.

Tilt and Swivel Feature

The clock is designed with a unique base that allows the display to be tilted vertically and swiveled horizontally. Gently adjust the clock face to your preferred viewing angle for optimal readability from any position in the room.

MAINTENANCE

To ensure the longevity and optimal performance of your Westclox Digital Alarm Clock, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or electronic components.
- **Placement:** Place the clock on a stable, flat surface. Avoid areas with extreme temperatures, direct sunlight, high humidity, or strong vibrations.
- **Battery Replacement:** Replace the AAA backup batteries annually or when the clock experiences frequent power outages to ensure settings are retained.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank	No AC power; Dimmer set to 'Off'	Check power adapter connection; Press SNOOZE/DIMMER button to adjust brightness.
Alarm does not sound	Alarm not activated; Alarm volume too low (if adjustable); Incorrect alarm time set	Ensure AL.1/AL.2 indicator is on; Verify alarm time is correct; Check for volume controls (if applicable).
Time is incorrect	Power interruption; Time not set correctly	Reset the time using the TIME SET button; Ensure battery backup is installed and functional.
Snooze not working	Alarm turned off instead of snoozed	Ensure you press the SNOOZE/DIMMER button, not the alarm ON/OFF button, when the alarm sounds.

SPECIFICATIONS

Feature	Detail
Brand	Westclox
Model Number	71052
Display Type	Digital LED (1.8" digits)
Product Dimensions	6"W x 4"H (approximate, actual product is 11"W x 5"H x 5"D)
Power Source	AC Powered with Battery Backup
Battery Type (Backup)	2 AAA batteries (not included)
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Blue (as per product listing, other colors may vary)
UPC	844220014115

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or contact Westclox customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

