

[Manuals.plus](#) /

> [TURNMEON](#) /

> TURNMEON 12-Foot Inflatable Ghost with Rotating Flame LED Lights Instruction Manual

## TURNMEON B095VLP8JY

# TURNMEON 12-Foot Inflatable Ghost with Rotating Flame LED Lights Instruction Manual

Brand: TURNMEON | Model: B095VLP8JY

## 1. INTRODUCTION

---

Thank you for choosing the TURNMEON 12-Foot Inflatable Ghost. This instruction manual provides essential information for the safe and proper setup, operation, and maintenance of your Halloween decoration. Please read this manual thoroughly before use and retain it for future reference.



Image 1: The 12-foot inflatable ghost displaying its three color-changing rotating flame LED lights in an outdoor setting.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Use according to manufacturer instructions.
- Ensure the inflatable is securely anchored and does not obstruct pathways or entrances.
- Keep away from open flames, heat sources, and sharp objects.
- Do not operate in strong winds or severe weather conditions.
- The power plug is not waterproof; protect it from moisture.
- Always unplug the inflatable when not in use or during maintenance.
- Supervise children around the inflatable to prevent entanglement or damage.

## 3. PACKAGE CONTENTS


---

Verify that all items are present in the package:

- 12 FT Inflatable Ghost Decoration x 1
- Power Adaptor x 1
- Ropes x 3

- Sand Bags x 4 (for filling with sand or gravel)
- Plastic Ground Stakes x 7

## Package Size

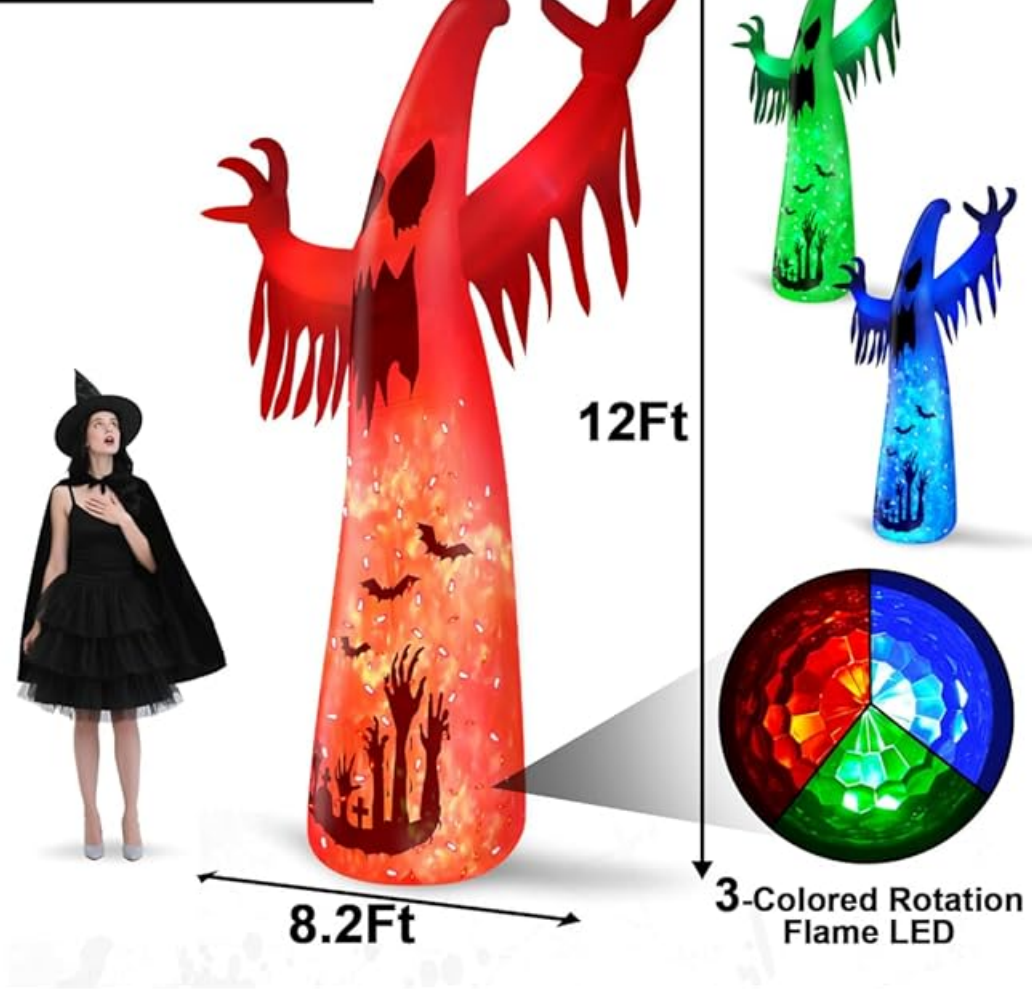

## 2 Methods To Stable The Product

### Method 1

Come With 7 Ground Stakes And 3 Ropes To Make It Stand More Stable



To Tie The String



### Method 2

Filling With Sand Or Gravel And Put It Inside



Zip Up



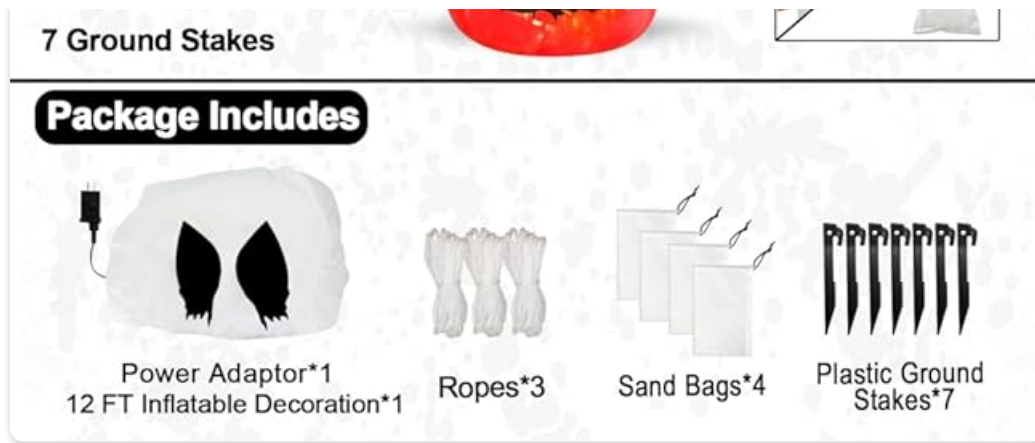


Image 2: Visual representation of the inflatable's dimensions, internal lighting, stability methods, and included accessories.

## 4. SETUP INSTRUCTIONS

Follow these steps to set up your inflatable ghost:

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position:** Choose a flat, clear area in your yard or garden for placement. Ensure there are no sharp objects that could puncture the material.
3. **Inflate:** Plug in the power adaptor. The built-in 1.2A fan will automatically inflate the ghost.
4. **Secure (Method 1 - Stakes & Ropes):** The inflatable has 3 rope holes. Attach the provided ropes to these points and secure them to the ground using the 7 plastic ground stakes. Ensure the ropes are taut to maintain stability.
5. **Secure (Method 2 - Weight Bags):** The inflatable includes 4 weight bags. Fill these bags with sand or gravel and place them inside the inflatable through the bottom zipper. This adds extra stability, especially in windy conditions.



Image 3: Step-by-step guide for securing the inflatable using stakes, ropes, and internal weight bags.

## Setup Video

Your browser does not support the video tag.

Video 1: A demonstration of the 12-foot Halloween ghost inflatable being set up and inflating.

## 5. OPERATING INSTRUCTIONS

The TURNMEON Inflatable Ghost is designed for simple operation:

- **Automatic Inflation:** Once plugged into a power source, the internal fan will automatically begin to inflate the ghost.
- **Rotating Flame LED Lights:** A fire flame rotating light is built inside the ghost's bottom. This light will automatically rotate and change between red, blue, and green colors, creating a dynamic visual effect.
- **Deflation:** To deflate, simply unplug the power adaptor. The bottom zipper can be opened to facilitate faster deflation.



Image 4: Close-up of the inflatable ghost showcasing the 3-colored rotating flame LED effect.

## Operation Video

Your browser does not support the video tag.

Video 2: A short video demonstrating the colorful LED and flame light effects of the 12-foot ghost inflatable.

## 6. MAINTENANCE AND STORAGE

---

- **Cleaning:** Wipe the inflatable with a damp cloth if it gets dirty. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the inflatable is completely dry before folding and storing to prevent mold or mildew.
- **Storage:** Store the inflatable in a cool, dry place away from direct sunlight and pests. The waterproof soft polyester fabric allows for easy folding.
- **Inspection:** Periodically check the fabric, fan, and electrical components for any signs of wear or damage.



Image 5: The inflatable is made from waterproof fabric and features internal LEDs for illumination.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate fully.	Power issue, fan obstruction, zipper open.	Check power connection. Ensure fan is clear of debris. Close all zippers and openings.
Lights are not working.	Power issue, damaged LED.	Check power connection. Contact customer support if lights remain off.
Inflatable falls over easily.	Insufficient anchoring, strong winds.	Ensure all ropes and stakes are securely fastened. Use internal weight bags. Do not use in strong winds.

## 8. SPECIFICATIONS

- **Brand:** TURNMEON
- **Theme:** Halloween
- **Cartoon Character:** Ghost
- **Color:** Red Blue Green Rotating Lights with Fire Flame
- **Occasion:** Halloween
- **Material:** Polyester
- **Special Feature:** Rotating Flame LED Lights
- **Manufacturer:** HWIN09
- **Package Dimensions:** 10.51 x 10.39 x 7.87 inches
- **Item Weight:** 3.58 pounds
- **ASIN:** B095VLP8JY

## 9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

