

SHW OD-51A-O

SHW Ivy Oak Trestle Computer Desk 109 cm User Manual

Model: OD-51A-O | Brand: SHW

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for purchasing the SHW Ivy Oak Trestle Computer Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read all instructions carefully before assembly and retain this manual for future reference.

Important Safety Warnings:

- Ensure correct assembly of the trestle desk to guarantee its stability. Improper assembly can lead to instability and potential injury.
- Do not place heavy objects on the desk that exceed the recommended weight limit to prevent tipping or structural damage.
- Adhere strictly to the recommended maximum weight limit of 50 pounds (22.68 kg). Exceeding this limit may compromise the desk's integrity.
- Keep small parts and packaging materials away from children to prevent choking hazards.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desktop Panel (1)
- Trestle Leg Frames (2)
- Shelf Panels (2)
- Connecting Bars/Supports (as required for stability)
- Assembly Hardware (Screws, bolts, washers, Allen wrench)



Figure 2.1: Overview of desk components and dimensions. The desk measures 43 inches (109.2 cm) in length, 20 inches (50.8 cm) in width, and 30 inches (76.2 cm) in height. The shelves are 11.8 inches deep.

3. ASSEMBLY INSTRUCTIONS

Assembly is recommended for one person and typically takes less than 30 minutes. All necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Assemble Trestle Leg Frames:** Attach the horizontal support bars to the vertical leg frames using the provided screws and Allen wrench. Ensure all connections are secure but do not overtighten initially.
3. **Attach Shelf Panels:** Secure the two shelf panels to one of the trestle leg frames using the designated screws. The shelves should be positioned as shown in the diagram.
4. **Connect Second Trestle Leg Frame:** Attach the second trestle leg frame to the other side of the shelf panels, ensuring alignment.

5. **Attach Desktop Panel:** Carefully place the desktop panel onto the assembled leg frames. Align the pre-drilled holes on the underside of the desktop with the holes on the top of the trestle frames. Secure the desktop using the provided screws.
6. **Final Tightening:** Once all components are assembled and aligned, systematically tighten all screws and bolts. Do not overtighten to avoid damaging the wood or stripping screws.
7. **Check Stability:** Gently shake the desk to ensure it is stable and level. Adjust foot pads if necessary to compensate for uneven floors.



Figure 3.1: Structural view of the desk, illustrating the connection points for the desktop, trestle legs, and shelves.

4. OPERATING INSTRUCTIONS

The SHW Ivy Oak Trestle Computer Desk is designed for use as a workstation, study desk, or general-purpose table. Its integrated shelves provide convenient storage for books, office supplies, or decorative items.

- **Weight Distribution:** Distribute weight evenly across the desktop and shelves. Avoid concentrating heavy items in

one area.

- **Maximum Load:** Do not exceed the maximum recommended load capacity of 50 pounds (22.68 kg) for the desktop. The shelves also have a weight limit; avoid overloading them.
- **Placement:** Place the desk on a flat, stable surface. Avoid placing it in areas with excessive moisture or direct sunlight, which can affect the wood finish.



Figure 4.1: The desk configured as a computer workstation, showcasing ample space for a monitor and accessories.

5. MAINTENANCE

Proper care will extend the life and appearance of your desk.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or water damage to the wood.
- **Tighten Hardware:** Periodically check and retighten all screws and bolts to ensure the desk remains stable.

- **Avoid Heat and Moisture:** Do not place hot items directly on the desktop. Use coasters for drinks. Protect the desk from excessive humidity or dryness.

6. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common problems and solutions:

- **Desk is Wobbly:**
 - Ensure all screws and bolts are fully tightened.
 - Check that the desk is on a level surface. Adjust the foot pads if your floor is uneven.
 - Verify that all components are correctly assembled according to the instructions.
- **Parts Do Not Align:**
 - Loosen all screws slightly, realign the parts, and then retighten.
 - Double-check that you are using the correct hardware for each step.
- **Scratches or Dents:**
 - For minor scratches, wood repair kits or markers can be used.
 - Use desk mats or protective pads to prevent future damage.

7. SPECIFICATIONS

Feature	Detail
Brand	SHW
Model Number	OD-51A-O
Product Dimensions (L x W x H)	109.22 x 50.8 x 76.2 cm (43 x 20 x 30 inches)
Item Weight	13.15 kg (29 lbs)
Material Type	Engineered Wood and Oak Wood
Top Material Type	Oak Wood
Frame Material	Engineered Wood
Color	Oak (Brown top)
Finish Type	Varnished
Number of Shelves	2
Recommended Maximum Load	50 kg (110 lbs) - <i>Note: Product description states 50 lbs (22.68 kg). Please adhere to the lower limit for safety.</i>
Assembly Required	Yes
Recommended Persons for Assembly	1
All Assembly Tools Included	Yes

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the retailer's policy or contact SHW directly through their official website. Keep your purchase receipt as proof of purchase.

© 2026 SHW. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question