

Aigostar B095WH7JRW

Aigostar 1000W Panini Press Sandwich Maker Instruction Manual

Model: B095WH7JRW | Brand: Aigostar

1. INTRODUCTION

Thank you for choosing the Aigostar 1000W Panini Press Sandwich Maker. This versatile appliance is designed for quick and efficient preparation of various grilled foods, including paninis, sandwiches, steaks, and vegetables. Its non-stick coated plates, adjustable floating hinge, and compact design ensure ease of use, excellent cooking results, and simple storage. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Aigostar Panini Press Sandwich Maker for optimal use.



Figure 3.1: Key Features of the Aigostar Panini Press. This diagram highlights the cool touch handle, safety lock, non-stick coating plates, floating hinge, non-slip feet, indicator light, and upright storage capability.

2 IN 1 SNACK MAKER

Panini Press / Electric Grill



Figure 3.2: Product Dimensions. The panini press measures 10.2 inches in length and 8.5 inches in width, with cooking plates measuring 9 x 5.7 inches.

4. SETUP

Before using your panini press for the first time, follow these steps:

1. **Unpack:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or disposal.
2. **Clean Plates:** Wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly.
3. **Position:** Place the panini press on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
4. **Drip Tray:** Ensure the removable drip tray is correctly inserted at the back of the unit to collect any excess grease or liquids during cooking.

Your browser does not support the video tag.

Video 4.1: Unboxing and Initial Setup. This video demonstrates the unboxing process and highlights the initial setup steps for the Aigostar Panini Press Sandwich Maker.

5. OPERATING INSTRUCTIONS

5.1 Preheating

1. Plug the appliance into a standard electrical outlet. The red indicator light will illuminate, signaling that the unit is preheating.
2. Allow the panini press to preheat for approximately 2-3 minutes. The green indicator light will turn off when the appliance has reached its optimal cooking temperature (356°F-400°F) and is ready for use.

Your browser does not support the video tag.

Video 5.1: Quick Heating Demonstration. This video illustrates how quickly the 1000W panini press heats up, indicated by the lights, and is ready for cooking.

5.2 Cooking Your Meal

The floating hinge design allows the top plate to adjust to the thickness of your food, ensuring even cooking and perfect grill marks.

1. Once preheated, carefully open the lid using the cool-touch handle.
2. Place your food (e.g., sandwich, steak, vegetables) onto the bottom non-stick plate. For best results, you may lightly brush the food with oil or butter.
3. Gently close the top lid, allowing the floating hinge to adapt to the food's thickness. Do not force the lid down.
4. Cook for the desired amount of time, typically 3-5 minutes for sandwiches, or until golden brown and heated through. Cooking times will vary based on food type and thickness.
5. When cooking is complete, carefully open the lid and remove the food using heat-resistant utensils.
6. Unplug the appliance from the power outlet after use.



Figure 5.2: Panini Press in use, grilling two sandwiches simultaneously. A grilled steak is shown on a separate plate, demonstrating the appliance's versatility.



Figure 5.3: Multifunctional Panini Press Grill. This image illustrates the diverse range of foods that can be prepared, including paninis, steaks, sandwiches, and grilled items.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your panini press.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Plates:** The non-stick coated plates are easy to clean. Simply wipe them down with a damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean damp cloth. Avoid abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
3. **Drip Tray:** Remove the drip tray and empty any collected grease. Wash the drip tray with warm, soapy water, rinse, and dry thoroughly before reinserting.
4. **Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the appliance in water.



Figure 6.1: Easy Cleaning of Non-Stick Plates. The image shows the non-stick plates being wiped clean with a cloth, highlighting the ease of maintenance.

7. STORAGE

The Aigostar Panini Press is designed for compact storage.

1. Ensure the appliance is completely cool and clean before storing.
2. Use the locking clasp to secure the upper lid in the closed position.
3. The compact size allows for storage either flat or upright, minimizing counter or shelf space usage.



Figure 7.1: Compact Upright Storage. The panini press can be stored vertically to save space, secured by its locking mechanism.

Your browser does not support the video tag.

Video 7.2: Locking Lid and Upright Storage. This video demonstrates the locking lid feature and how the panini press can be stored upright to save space.

8. TROUBLESHOOTING

If you encounter any issues with your panini press, refer to the following common problems and solutions:










- **Appliance not heating:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the red indicator light is on. If not, try a different outlet.
- **Food sticking to plates:** Ensure the plates are clean and lightly brushed with oil or butter before adding food. The non-stick coating should prevent most sticking.
- **Uneven cooking:** Ensure the food is placed centrally on the cooking plate. The floating hinge is designed to accommodate varying thicknesses, but very unevenly shaped items may cook differently.
- **Indicator lights not working:** If the lights are not functioning as described, unplug the unit and contact customer support.

9. SPECIFICATIONS

Brand	Aigostar
Model	B095WH7JRW
Wattage	1000 watts
Voltage	120 Volts
Material	Aluminum
Color	Black-A
Product Dimensions	10.2"D x 8.5"W x 2.6"H
Item Weight	2.43 Pounds
Special Features	Cool Touch, Lightweight, Non Stick Coating, Temperature Control

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Aigostar customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.
For further assistance, visit the official Aigostar website or contact their customer support team.

<div><div> AIGOSTAR</div><div>INSTRUCTION MANUAL</div><div>PANINI MAKER</div></div> <div></div> <div><div>MODEL</div><div>300000HHH</div></div>	<p>Aigostar 300000HHH Panini Maker Instruction Manual</p> <p>Official instruction manual for the Aigostar 300000HHH Panini Maker, detailing safety, operation, cleaning, and maintenance. Available in multiple languages.</p>
<div><div> AIGOSTAR</div><div>INSTRUCTION MANUAL</div><div>SANDWICH MAKER</div></div> <div></div> <div><div>MODEL</div><div>B30202J3C</div></div>	<p>Aigostar Sandwich Maker B30202J3C: Instruction Manual and Safety Guide</p> <p>Comprehensive instruction manual for the Aigostar Sandwich Maker (Model B30202J3C), covering safety precautions, operating instructions, cleaning, maintenance, and technical specifications. Learn how to make delicious sandwiches with your Aigostar appliance.</p>
<div><div>INSTRUCTION MANUAL</div><div>PANINI MAKER</div><div></div></div> <div></div> <div><div>MODEL</div><div>300000IBR</div></div>	<p>Aigostar 300000IBR (01) Panini Press User Manual</p> <p>Official user manual for the Aigostar 300000IBR (01) Panini Press, providing operating instructions, safety precautions, cleaning guidelines, and troubleshooting tips.</p>
<div><div> AIGOSTAR</div><div>INSTRUCTION MANUAL</div><div>PANINI MAKER</div></div> <div></div> <div><div>MODEL</div><div>B30202J4F</div></div>	<p>Aigostar Panini Maker B30202J4F Instruction Manual</p> <p>Comprehensive instruction manual for the Aigostar B30202J4F Panini Maker, covering safety, operation, cleaning, and maintenance for this versatile kitchen appliance.</p>
<div><div> AIGOSTAR</div><div>INSTRUCTION MANUAL</div><div>PANINI MAKER</div></div> <div></div> <div><div>MODEL</div><div>B30202J0C</div></div>	<p>Aigostar Panini Maker B30202J0C Instruction Manual and Safety Guide</p> <p>Comprehensive instruction manual for the Aigostar Panini Maker (Model B30202J0C), including important safety instructions, technical specifications, product overview, operating procedures, and cleaning guidelines.</p>
<div><div> AIGOSTAR</div><div>INSTRUCTION MANUAL</div><div>SANDWICH MAKER</div></div> <div></div> <div><div>MODEL</div><div>300002RYG</div></div>	<p>AIGOSTAR Sandwich Maker Instruction Manual - Model 300002RYG</p> <p>Official instruction manual for the AIGOSTAR Sandwich Maker, model 300002RYG. Learn about important safety precautions, how to operate, clean, and store your sandwich maker for optimal use.</p>